Modular ICS 7.1 System Coordinator Guide

Norstar, Meridian and Companion are trademarks of Nortel Networks © Nortel Networks 2006

> 1-800-4 NORTEL www.nortel.com/norstar N0130946 01 Printed in Canada

Getting started with Norstar 13

Using this guide 13 Emergency 911 Dialing 13 Understanding programming 14 Before you start 15 What you need to do programming 15 Using Buttons 16 Using the buttons under the display 19 The programming overlay 19 A map for using programming 21 Starting and ending a session 24 Ending a session 25

Frequently used programming operations 27

Changing the display time & date 27 Adding or changing a system speed dial 29 Program a name for a speed dial 31 Changing the name of a telephone 32 Changing the name of a line 33 Making changes to Call Forward No Answer 35 Making changes to Call Forward on Busy 37 Making Changes to Do Not Disturb on Busy 38 What would you like to do next? 39

Answering calls 41

Answering calls in Hunt Groups 41 Answering an incoming call 41 Line buttons 42 Rings you may hear 43 Sorting calls by distinctive ring patterns 44 Answering calls at a prime telephone 45 Expanding telephone capacity 46 Using a 7316E+KIM as a central answering position 46 Release button 51 Hearing aid compatibility 51

Viewing information about a call on the display 51 Using Call Information for a particular call 52 Displaying Call Information before or after answering 53 Displaying Call Information for a call on hold 53 Making Call Display information appear automatically 54 Changing which information is shown first about a call 55 Picking up a call ringing at another telephone 56 Answering ringing telephones using Directed Pickup 56 Answering any ringing telephone using Group Pickup 57 Changing a telephone pickup group 58 Trunk Answer 59 Answering a call using Trunk Answer 59 Answer DNs and Answer keys 60 Creating a Conference Call 61 Disconnecting one party 62 Independently holding two calls 63 Putting a conference on hold 63 Splitting a conference 64 Removing yourself from a conference 65 Listening to a call as a group 66 Canceling Group Listening 66 Using handsfree and mute 66 Answering calls without lifting the receiver 67 Making calls without lifting the receiver 68 Muting the set 68 Changing a regular call to handsfree 69 Changing a handsfree to a regular call 69 Using handsfree 69 Changing handsfree for a telephone 70 Handsfree Answerback 72 Turning Privacy on or off for a call 72 Creating a conference by releasing privacy 73 Making a call private 73 Checking call length using Call Duration Timer 73 Disconnecting by accident 74 Time 74

Making calls 75

Choosing a line using a line button 77

Line pools 78

Using a line pool to make a call 79 Programming a memory button with a line pool 79 Making calls from an ISDN terminal 80 Dialing calls with a second dial tone 80

Changing how you dial your calls 80

Using Standard dial 81 Using Automatic dial 81 Using Pre-dial 82

When the dialed internal number is busy 82

Priority Call 82

Making a priority call 83

Giving a telephone the ability to make priority calls 83 Using Ring Again 84

Time savers for making calls 87

Storing a number on a memory button for Autodial 87 Adding an autodial button 87 Choosing a line for Autodial 88 Using intercom as the line for Autodial 88 Using Last Number Redial 90 Preventing a telephone from using Last Number Redial 90 Using Speed Dial 91 Making a speed dial call 92 Changing and adding System Speed Dials 92 Adding or changing User Speed Dial 92 Using Saved Number Redial 94 Dialing a saved number 94 Blocking Saved Number Redial 94

Handling many calls at once 97

Using Hold 97 Retrieving a held call 97 Listening on hold 98 Holding a call exclusively 98 Using Call Queuing 99

Transferring calls 101

Using the transfer feature 101 Transferring a call 101 Transferring external calls 102 Canceling a transfer 103 Using Camp-on 104 Parking a call 106 Retrieving a parked call 106 Using Call Park 106 System-wide call appearance (SWCA) codes 108 Using Callback 110

Forwarding your calls 111

Forwarding your calls within the system 111 Canceling Call Forward 111 Using Call Forward at your telephone 112 Overriding Call Forward 112 Changing the automatic Call Forward settings 113 Changing Forward no answer 113 Changing the delay before a call is forwarded 113 Forward on busy 114 DND on Busy 114 Call Forward and Voice Mail 115

Line Redirection 116

Turning on Line Redirection 117 Canceling Line Redirection 118 Allowing a telephone to redirect calls 118 Turning the redirect ring for a telephone on or off 119 How Line Redirection is different from Call Forward 121

Using Line Redirection 121

Centralized voice mail and auto attendant 122 Using a centralized voice mail system 122

Communicating in the office 123

Paging 123 Making a page announcement 123 Activating and deactivating the ability to page 124 Creating page zones 125 Using Page with external paging equipment 127 Sending messages 127 Sending a message 127 Canceling a message you have sent 128 Viewing your messages 129 Replying to a message 129 Replying to a message using an analog telephone 130 Removing items from your message list 131 Removing items from your message list using an analog telephone connected to an ASM 131 Viewing messages you have sent 132 Using Voice Call 134

Muting Voice Call tones 134 Answering a Voice Call with handsfree 134 Blocking Voice Calls using Voice Call Deny 135

Tracking your incoming calls 137

Using Call Log 137 Call Log options 139 Logging a call manually 139 Enabling and disabling autobumping 139 Viewing your Call Log 140 Viewing a Call Log item 140 Erasing log items 140 Making a call using Call Log 141 Creating a password to your Call Log 141 Changing your Call Log password 142 Deleting an assigned password 142 Using external Voice mail 144

Customizing your telephone 145

Finding out what a button does using Button Inquiry 145
Changing the set display contrast 146
Changing the language on the display 146
Programming a feature code onto a memory button 147
Programming feature buttons 147
Erasing a feature button 147
Labeling your set 149
Applying button labelling 149
Digital phones 149
Default button assignments 150
7316E button defaults 150
7316 digital phone button defaults 152
7208 button defaults 154
7100 digital phone button defaults 154

Rules of default button assignment 155 Moving line buttons 156 Changing the type of ring 157 Adjusting the Ring volume 158 Hiding the message or calls indication 158

User Preferences 159

Using User Preferences 159 Changing button programming 160 Changing User Speed Dial 161 Changing Call Log options 162 Changing how calls are dialed 162 Changing the language used on the display 162 Making the display lighter or darker 162 Changing the ring type 163

Programming Hunt Groups 165

Adding or removing members from a group 167 Moving members of a group 168 Assigning or unassigning lines to a group 169 Setting the distribution mode 170 Setting the hunt delay 171 Programming busy line setting 172 Programming the queue time-out 173 Programming the overflow set 173 Setting the name 174 Allowing/disallowing an auxiliary ringer 175 Assigning a distinctive ring pattern to a Hunt Group 175 Using Silent Monitor 176 Feature notes 179

Using the Hospitality features 181

Hospitality passwords 181 Room/desk information 183 Programming room information 183 Using the room/set programming 185 Programming the alarm feature 187 Using the Administration set to control alarms 188 Using the alarm 189 Canceling an alarm 190 Turning off an alarm 190

Telephone features 191

Installing digital phones 191

Naming a telephone or a line 193

Moving telephones 193

Stopping calls from ringing at your telephone: Do Not Disturb (DND) 194

Stopping calls 194

Refusing to answer a call 194

Canceling Do Not Disturb 194

Using Do Not Disturb 194

Using Background Music 195 Turning Background Music off 195

ISDN PRI and BRI 197

ISDN PRI 197

ISDN PRI features 198

Network Name Display for PRI 198

Name and number blocking for PRI 199

Emergency 911 Dialing 199

Two-way DID 199

Call by Call service selection for PRI 200

Dialing Plan and PRI 201

ISDN BRI 202

Line access from an ISDN terminal 203

ISDN BRI features 203

Network Name Display for BRI 203

Name and number blocking for BRI 204

Service provider features 204

Call Forward 204

Canceling Call Forward 205

Calling the number your calls are forwarded to 205

Automatic Call Back 205

- Automatic Recall 205
- MCID (profile 2) 206

Network Call Diversion (profile 2) 207

- Overlap dialing (profile 2) 207
- ISDN BRI terminals 207

ISDN applications for BRI and PRI 207

Using System features 209

Using alternate or scheduled services 209 Preventing certain calls from being made 209 Making additional telephones ring 209 Changing the lines used by outgoing calls 210 Turning Services on and off 210 An example of how to turn on a Service manually 212 Turning Services on and off 213 Viewing the active Services on a two-line display 214 Viewing the active Services on a one-line display 214 Using passwords 217 Using a Basic password 217 Changing passwords 218 Clearing a Call Log password 219 Hospitality passwords 219 Silent Monitor password 220 Using special telephones 221 Direct-dial 221 Changing the direct-dial telephone assignments 221 Hotline 222 Bypassing a Hotline 222 Making a telephone a hotline telephone 223 Control telephone 224 SM Supervisor 224 Using Set lock 225 Changing Set Lock programming for a telephone 225 Using an auxiliary ringer 226 Turning the auxiliary ringer for a telephone on or off 226 Using Host System dialing signals 227 Link 227 Preventing a telephone from using Link 227 Pause 228 Long Tones 229 Programmed Release 229 Run/Stop 230 Wait for Dial Tone 230 Using tone dialing for a call 231 Using your Norstar system from an external location 231

Controlling access to your Norstar system 232 Direct inward system access (DISA) 232 Class of Service (COS) 233 Maintaining security 233 Accessing Norstar remotely over the public network 233 Tones 234 Using Class of Service (COS) passwords 235 Changing your Class of Service 235

General System features 237

Set profile 237 Line profile 237 Pulse or tone dialing 238 Disconnect supervision 238 Hunt Groups 238 Internal numbers 239 Line assignment 239 Target line 240 Line pools 241 Overflow call routing 241 Telephones with no line buttons 242 Memory buttons 242 One-line display 243 Prime line 243 Private lines 243 Volume bar 244

Troubleshooting 245

Using the alarm telephone 245 Reporting and recording alarm codes 245 Testing the telephone 246 Testing the telephone display 246 Testing the telephone buttons 247 Testing the speaker in the telephone handset 247 Testing the telephone headset 248 Testing the telephone speaker 248 Testing the power supply to a telephone 248

Common feature displays 249

Glossary 253

Index 271

Getting started with Norstar

Your Norstar digital key system has many powerful features that can be customized to keep up with changes in your workplace.

Using this guide

The person who is responsible for adding or moving telephones or making changes to the system is called the system coordinator. This guide is designed to give the system coordinator all the information he or she needs to carry out these kinds of jobs.

The first section contains step-by-step instructions about changing the time and date, deciding how many rings it takes before a call is forwarded, and other day-to-day programming. Once you understand these basic steps, you can move on to the many other features described in the second section of the guide, and refer to the first section only from time to time.

You can look at the contents page for an overview of the features that are available, or check the index for specific features or messages displayed on your telephone.

Emergency 911 Dialing

Emergency 911 Dialing is the capability to access a public emergency response system by dialing the digits 9 1 1.

Emergency 911 Dialing

State and local requirements for support of Emergency 911 Dialing service by Customer Premises Equipment vary. Consult your local telecommunications service provider regarding compliance with applicable laws and regulations.

Understanding programming

When your system is installed, your installer or customer service representative programs it to work with your telephone lines, with your private network, if you have one, and with optional equipment. They customize the system for your office. All programming is recorded in the *Modular ICS 7.1 Programming Record*.

You may want to further customize your system. For example, you can change how some features work, or adapt the system to changes in your office. Programming allows you to change settings that probably need to be updated regularly because of staff turnover or new business contacts. You can also assign features and program buttons on individual telephones.

There are four ways to customize and maintain your Norstar system:

- Initial programming is performed for you by your installer or customer service representative. It deals mostly with how the system interacts with lines, telephones, and other equipment.
- Your programming as a system coordinator changes how features work for the system, as needed. It requires a System Coordinator password.
- A Basic programming password is available to allow individuals other than the system coordinator to make changes without giving access to sensitive programming capabilities.
- Personal programming is available to anyone through the Feature button on their Norstar telephone. It allows individuals to change how their telephone works to suit themselves.

Before you start

Before you begin programming, plan what changes you want to make. Record the changes in the *Norstar Programming Record* so that you have the information at hand. For example, if you are going to program system speed dial numbers, fill out the page in the *Norstar Programming Record* so that you have all the numbers and codes handy once you start programming.

What you need to do programming

Programming is performed using a telephone that can show two lines of information on its display. Examples of telephones with two-line displays are shown on page 16.


You need a programming overlay to show which buttons to press when you are performing programming. See *The programming overlay* on page 19.

When you use a telephone for programming, it is taken out of service. This means it is unable to receive or make calls, and the call forward features do not work. Do not use the main reception telephone for programming because you may lose incoming calls.

Using Buttons


The two-line telephone you use for everyday calling can be used for changes and maintenance. Examples of telephones with twoline displays are shown in the illustration.

Digital phones used for programming and maintenance

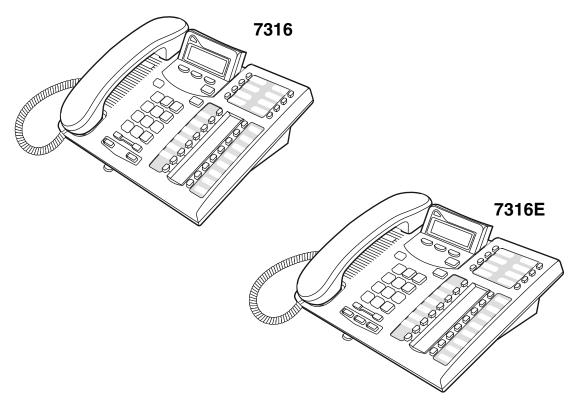

The next illustration numbers the buttons that are used for both day-to-day communication and programming on the 7316E digital phone. The following table describes what each numbered area is used for.

7316E digital phone buttons

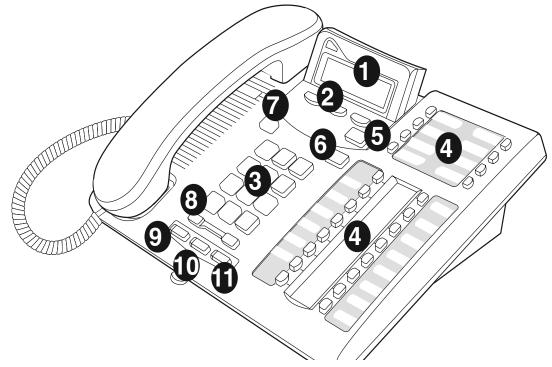

Display	Shows instructions for everyday calling as well as for programming.
2 Display buttons	Have a variety of uses. The current use is shown on the display above each button.
3 Dialpad	Used for dialing numbers when you are making calls. For programming, the dialpad is also used for entering numbers and letters
Memory buttons	Dial a number or feature code stored on the button.
5 Feature button	Allows you to enter a feature code while using or programming the telephone.
6 Hold button	Puts an active call on hold.
Release button	Hangs up an active call or ends programming.

8 Volume rocker switch	Turns the volume you hear through the handset up or down.
	During programming this switch is used to adjust settings, such as for the display contrast.
Mute	Mutes the transmitter in the handset.
Handsfree	Allows you to speak to and hear a call without using the handset or headphones.
Headset	Activates the headset feature.


This guide uses the icons for 7316E digital phone buttons in feature code examples. Your telephone may have different labels, or the buttons may be in slightly different locations.:

Button description	7316 and 7316E Digital phones
Feature	Ŕ
Hold	
Volume Control	
Release	T

Using the buttons under the display


The three display buttons are used both for telephone features and programming. What each button does depends on what the display shows. Some display instructions that you may see when making changes on the system include <u>OK</u>, <u>CHANGE</u>, or <u>COPY</u>. In this guide, display button instructions are underlined.

Display buttons

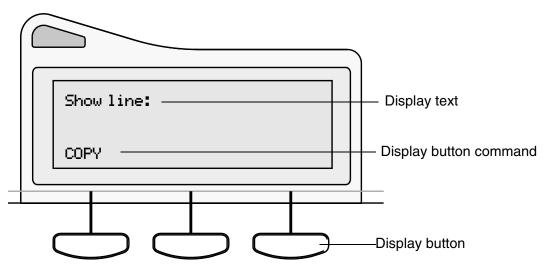

The programming overlay


When you begin programming, a group of buttons on the telephone become the buttons for moving through programming headings and settings. The programming overlay is a paper cutout that is included with the Programming record. It relabels the four buttons to name the actions you use during programming.

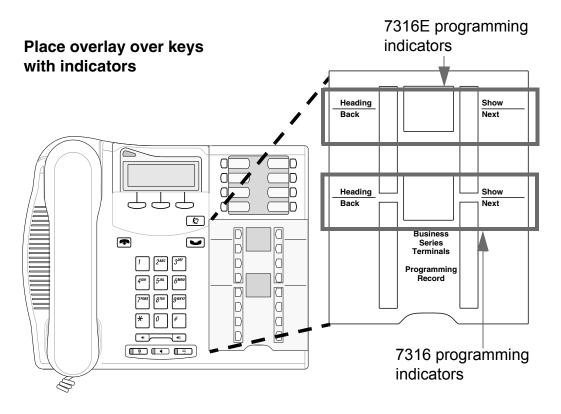

7316/7316E with programming overlay

20 /

The diagram below shows how the headings are used to navigate the programming menus.

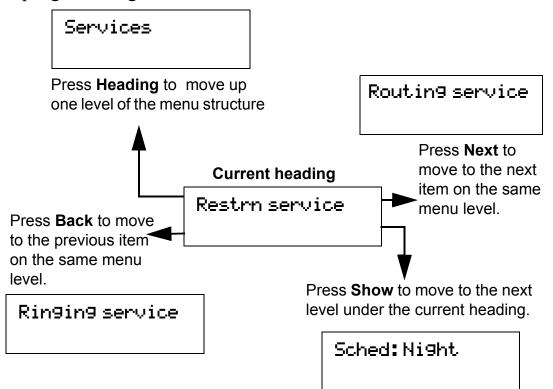

Programming buttons are active or inactive at different stages of programming. A button is active (meaning you can use that option), when the indicator next to it is lit (\blacktriangleleft or \blacktriangleright).

A map for using programming

The default Basic password ($\mathbb{B} \land \mathbb{S} \upharpoonright \mathbb{C}$ or 22742) can be used with a limited number of feature codes, including $* * \top \upharpoonright \mathbb{M} \succeq$ and the codes for turning call services on and off. For more information, see *Using passwords* on page 217.

Terminals&Sets	Customize each telephone on the system. You can change where a call is forwarded, give a telephone a name, or allow certain features to be used at a telephone. You can change the button programming on any telephone on the system.
Lines	Show the active lines. Coordinator can rename lines.
Services	Turn services on or off: Ringing service, Restriction service, and Routing Service.
Sys speed dial	Program up to 255 different telephone numbers so internal users can dial them with a three-digit code (001-255).
Passwords	Change or erase the password you use for programming, or the one you use for Call log.
Time&Date	Change the time, date, or both.
System pr9rmin9	Access the headings that define Hunt Groups, Hospitality services. Enter the BusName, which displays on caller ID lines.

Terminals & Sets	Show set Enter digits or press LIST.	Capabilities	Fwd no answer	Fwd to Fwd delay
			Fwd on busy	Fwd to
			DND on busy	
			Handsfree	
			HF answer back	
			Pickup grp	
			Page zone	
			Paging	
			D-Dial	
			Priority call	
			Hotline	Intrn # Extrnl# Use prime line
			Aux. ringer	
			Allow redirect	
			Redirect ring	
			ATA settings	ATA ans timer Msg Indicate
			SWCA call group	Call 1-16
		Name		
		User	Mdl	
		preferences	Button progrming	# of buttons B01 BXX CLR TEL# FEATR
				KIM X or CAP X
			User speed dial	# of speed dialers Spd # 255-279
			Call log opt'ns	No one answered Unanswered by me Log all calls No autologging
			Dialing opt'ns	Standard dial Pre-dial Automatic dial
			Language	
			Display cntrst	
			Ring type	
			Voice path	Dflt: Handsfree Headset
		Restrictions	Set restrictions	Set lock (Partial, Full, None)
				Allow last no
				Allow saved no
				Allow link
		Telco features	1st Display Called ID	
			Call log set	

System Coordinator user interface

Lines	Show lines	Name	
	Enter digits or press LIST		
Services	Ringing service	Sched: Night Evening Lunch Sched 4 Sched 5 Sched 6	Off, Manual, Auto
	Restrn services	Sched: Night Evening Lunch Sched 4 Sched 5 Sched 6	Off, Manual, Auto
	Routing service	Sched: Night Evening Lunch Sched 4 Sched 5 Sched 6	Off, Manual, Auto
Sys speed dial	Speed dial # Enter digits or	add/change tel #	
(001-255)	press LIST	Use prime line	-
		Display digits	_
		Name	
Passwords	Call Log pswds	Show set	Log pswd
	Progrming	Sys admin: 23646	
	pswds	Basic: 22742	_
	Reg. pswd (MICS-IX, only)		
	Hospitality	Desk pswd: 4677	-
		Cond pswd:None	-
	SM pswd: 745368		
Time&Date	Hour		-
	Minutes		
	Year		
	Month		
	Day		

Note: Some headings will only show if required by the selected options for the previous heading.

System Prgrming	Hunt Group	Show Group	Member DNs	
			Line assignment	Show line Unassigned/ Assigned
			Mode	Broadcast Sequential Rotary
			Hunt Delay	
			If Busy	BusyTone/Queue
			Q Timeout	
			Overflow	
			Name	
			Aux. Ringer	
			Distnct ring	
Bu	BusName			
	Hospitality	Room/desk info	Show set	Room #
				Adm pwd req'd
		Service time	Hour	
			Minutes	
		Alarm	Attn attempts	
			Retry intrvl	
			Attn duration	
			Time format	12 hr/24 hr
			Expired alarms	Notify set
				Use tone

Starting and ending a session

As system coordinator the first steps in making any change to the Norstar system are always the same.

Jan 1 12:00pm	Press 😰.
Feature:	Press * * C O N F I G . This is the same as pressing * * 2 6 6 3 4 4 .
Password: RETRY	
	the password if you enter an incorrect character.
Terminals&Sets	The display shows the first of the seven headings available for administration programming.

A D M N is the password, unless the password has been changed. Check the Programming Record for the most recent password.

Ending a session	
Display di9its:Y CHANGE	Press 🝙 to end the session.
End of session	After a few seconds, the time and date reappears on the display.

The system makes any changes you indicated in programming as soon as you move away from a setting, either by using the navigation buttons or by pressing **•**.

You can see if the changes you made to telephone programming have taken effect by pressing the <u>UPDATE</u> display key. The display shows you how many telephones have not been updated.

Press \underline{DN} to see the specific extensions where programming changes have not taken effect yet. Items disappear from the list as they are updated.

Record any changes you make in the *Modular ICS 7.1 Programming Record*. If there is a problem with the system, the installer needs to see a history of the changes you have made.

Remember to inform people in your office of any changes you have made that affect them. For example, you may change system speed dial codes or change the number of rings before an unanswered telephone is forwarded.


Frequently used programming operations

The following sections highlight the most frequently used programming operations. To consult these or other programming operations, see either the Table of Contents or the Index.

C	hanging	the display time & date
Jan 1	12:00pm	Press 😰.
Feature:		Press ★ ★ 8 4 6 3 (which is the same as ★ ★ T I M E).
Password	I: RETRY	Press 22742 (BASIC) or 23646 (ADMIN)

The passwords can be changed. See *Using passwords* on page 217 for more information.

Entering letters and numbers using the dialpad

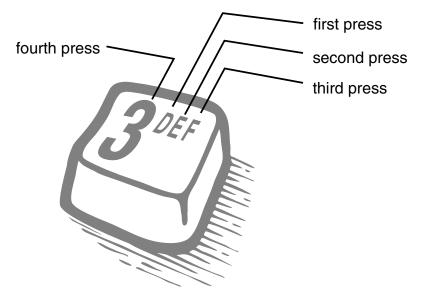

In this example, you are c	hanging the time to 1:30 p.m.
----------------------------	-------------------------------

Hour:01 NEXT	CHANGE	Press <u>CHANGE</u> .
Hour: CANCL		Press the dialpad buttons to enter the hour. Use two digits for all hours. The clock on the display shows either one or two digits.
AM OK	CHANGE	The display prompts you to choose a.m. or p.m. Press <u>CHANGE</u> and <u>OK</u> to select p.m.
Hour:01 NEXT	CHANGE	Press <u>NEXT</u> .
Minutes:00 NEXT	CHANGE	Press <u>CHANGE</u> .
Minutes: CANCL		Press the dialpad buttons to enter the minutes.

If you are only changing the time and not the date, press **•** to end your session.

In this example, you are changing the date to July 15, 1998.

Minutes:30 NEXT	CHANGE	Press <u>NEXT</u> .
Year:01 NEXT	CHANGE	Press <u>CHANGE</u> .
Year: CANCL		Press the dialpad buttons to enter the year.
Year:02 NEXT	CHANGE	Press <u>NEXT</u> .
Month:01 NEXT	CHANGE	Press <u>CHANGE</u> .
Month: CANCL		Press the dialpad buttons to enter the month.
Use numbers fo	or the mont	hs: 01 is January; 12 is December.

Use numbers for the months: 01 is January; 12 is December.

Month:07		Press <u>NEXT</u> .
NEXT	CHANGE	

Day:01 NEXT	CHANGE	Press <u>CHANGE</u> .
Day: CANCL		Press the dialpad buttons to enter the day.
Day:15 CANCL		Press (r) to end your session.
End of sessi	ion	

The clock controls the schedules used for services such as ringing and routing services.

After a power failure, the clock is behind by the length of time power was lost. For example, if the power is out for two minutes, the clock is two minutes behind.

Adding or changing a system speed dial

You program a speed dial on your Norstar so that anyone in your office can dial a frequently used number using a three-digit code (001-255).

To change a speed dial that already exists, follow the same steps. The new programming overwrites the previous number and settings.

Jan 1 12:00pm	Press 😰.
Feature:	Press * * 266344.
Password: RETRY	Press 23646.

Begin the programming session

Choose a speed dial code

Terminals&Sets ⊳	Press Next three times.
Sys Speed Dial	Press Show
Speed dial #: LIST	Press 0 0 1.
You can pick any system	speed dial code between 001 and 255.

Speed dial #:001▶ Pre FIND

Press Show

Add or change the telephone number

001:No number CHAN	4GE	Press <u>CHANGE</u> .
001: CANCL	ок	Use the dialpad to program the telephone number that you want to add. The telephone number can be up to 24 digits long.
001:nnnnnnn_ CANCL BKSP	ок	Your display shows the telephone number, which is represented by the row of n-characters shown here. Press \underline{OK} .

Select a line for the speed dial code

001 : nnnnnnn CLR (CHANGE	Press Next
Use prime line	CHANGE	Press <u>CHANGE</u> to see your options: Use prime line, a specific line (for example Use line: @1), a line
		pool (for example Pool code:71), or Use routing tbl.

Stop pressing <u>CHANGE</u> when the display shows the prime line again.

Use prime line CHANGE In this example, the system selects the prime line automatically to dial speed dial code 001. This is the most common choice.

If you assign a specific line to a system speed dial number, only telephones with an appearance of that line can use the speed dial number.

Choose what shows up on the display

Use prime line CHANGE	Press Next
Display di9its:Y CHANGE	Your choices are Yes and No. Yes means the display shows the telephone number.
	Press <u>CHANGE</u> .
Display digits:N CHANGE	No means the display shows a name for the code.

Program a name for a speed dial

The system has a standard name to display, so it is not necessary for you to program one. However, if you have chosen not to display the telephone number, you may want a specific name.

Alpha tagging feature: This feature offers name display for calls coming in over lines that offer number-only display services.

If you specify a name for a speed dial, and that person calls in on an external line, the speed dial name you specify acts as the name display for the call if the call number matches the number in the speed dial list. If the telephone has also been configured to display Caller ID (Caller ID set) with the name of a caller first (1st display), then the name you program for the speed dial code is the name that displays.

For example: If you create a speed dial for the courier company you use, and assign the name Courier with the following process, when that company calls you, Courier would appear on the display for the call.

Display di9its:N CHANGE	Press Next
Name:Sys Spd Di CHANGE	Press Show
al 001 CHANGE	This is the name the display shows if you do not change it. Press <u>CHANGE</u> .
Name:	Decide the name you want to give to the speed dial code.

Press the dialpad button that has the first letter of the name until the display shows the letter you want.

Name:S Press $\xrightarrow{-->}$. BKSP $\xrightarrow{-->}$

32 / Use the dialpad and -- until you have the entire Name:S_ <---BKSP --> name. The name can be up to 16 characters long, including spaces. Press # on the numeric dialpad to add spaces. Name:SAVINGS BANK Press Next <---BKSP \rightarrow Press **•** to end your session. Name:SAVINGS BA.... CLR CHANGE Or you can press [Heading], then [Next] to program another speed dial number. End of session Changing the name of a telephone Begin the programming session

Press 😰 .

Press * * 2 6 6 3 4 4.

Press 2 3 6 4 6.

Change the name of a telephone

RETRY

Terminals&Se	ts⊧	Press Show
Show set:	LIST	Enter the internal number (DN) of the telephone or voice mail extension. In this example, the DN is 221.
If the set has alr	eady been	given a name, it appears after DN: on the display.
221:221	FIND	Press Show then Next.
Name:221	CHANGE	This is the name the display shows if you do not change it. Press <u>CHANGE</u> .

Jan 1

Feature:

Password:

12:00pm

Decide what name	you want to give to the telephone number.
------------------	---

Name:>	Press the numeric dialpad button that has the first letter of the name until the display shows the letter you want.
Name:J BKSP>	Press <u>></u> .
Name:J < BKSP>	Use the dialpad and $$ until you have the entire name.
Name:JEAN B < BKSP>	Press Next to use the name you have entered.
The name can be up to se	even characters long, including spaces.
Name:JEAN B CLR CHANGE	Press 🖚 to end your session.
	once to continue programming this telephone, or eturn to the Terminals&Sets heading.
End of session	
Changing	the name of a line
Begin the program	
Begin the program	nming session
Begin the program Jan 1 12:00pm	nming session Press 😰.
Begin the program Jan 1 12:00pm Feature: Password:	ming session Press Press * Press * Press 23646.
Begin the program Jan 1 12:00pm Feature: Password: RETRY	ming session Press Press * Press * Press 23646.

Press Show

|.

Lines⊁

34 /

Show line:____ LIST

Enter the three-digit number of the line you want to name. In this example, the line is 002.

This is the name the display shows if you don't change it.

Line002:Line002⊧ FIND	Press Show
Name:Line002 CHANGE	Press <u>CHANGE</u> .

Decide what name you want to give to the line.

 Name:
 -->
 Press the dialpad button that has the first letter of the name, until the display shows the letter you want.

 Name:
 BKSP
 -->
 Press -->.

 Name:
 BKSP
 -->
 Use the dialpad and --> until you have the entire name.

The name can be up to seven characters long, including spaces.

Name:LOCAL < BKSP>	Press Next to use the name you entered.
Name:LOCAL CLR CHANGE	Press 🕋 to end your session.
You can press Heading	once to continue programming this line, or press

You can press Heading once to continue programming this line, or press Heading twice to return to the Lines heading.

End of session

Making changes to Call Forward No Answer

Begin the programming session

Jan 1 12:00pm	Press 😰.		
Feature:	Press * * 266344.		
Password: RETRY	Press 23646.		
Change where a call goes when there is no answer			
Terminals&Sets ⊳	Press Show		
Show set: LIST	Enter the internal number (DN) of the telephone or voice mail extension. In this example the DN is 225.		
If the set has been given a name, it appears on the display.			
225:225 FIND	Press Show		
Capabilities⊧	Press Show		
Fwd no answer ⊧	Press Show		
Fwd to:None CHANGE	Press <u>CHANGE</u> and enter the internal number where you want the calls to be sent. In this example the internal number is 221.		

You can press \underline{CLR} to change the destination back to None.

Change the number of times the telephone rings before it is forwarded

Fwd to:221 CLR	CHANGE	Press Next
Forward dela	9:4 CHANGE	Use the <u>CHANGE</u> button to choose the number of times the telephone rings before it is forwarded.
Vour choices are 2, 2, 4, 6 and 10 rings		

Your choices are 2, 3, 4, 6 and 10 rings.

Forward delay:3 CHANGE $\label{eq:press} \ensuremath{\,\overline{\mbox{ress}}}\xspace$ to end your session.

You can press Heading to continue programming capabilities for this telephone, or press Heading four times to return to the Terminals and Sets heading.

End of session



Tip - If the Norstar set is a member of a Hunt Group, the Call Forward no answer feature is overridden and the Hunt Group call continues to ring until the hunt time has expired. For more information about Hunt Groups, see *Programming Hunt Groups* on page 165.

Making changes to Call Forward on Busy

Begin the programming session

Jan 1 12:00pm	Press 😰.
Feature:	Press * * 2 6 6 3 4 4.
Password: RETRY	Press 2 3 6 4 6.

Change where a call goes when a telephone is busy

Terminals&Sets ⊧	Press Show
Show set: LIST	Enter the internal number, which gets assigned as the intercom number, of the telephone extension. In this example, the intercom number is 225.

If the set has been given a name, it appears on the display.

225:225	FIND	Press Show
Capabilities)		Press Show
Fwd no answerl	•	Press Next
Fwd on busy	•	Press Show
Fwd to:None	CHANGE	Press <u>CHANGE</u> and enter the internal number where you want the calls to be sent. In this example, the internal number is 221.
You can press \underline{CLR} to change the destination back to None.		
Fwd to:221 CLR	CHANGE	Press 🕋 to end your session.

You can press Next to continue programming capabilities for this telephone, or press Heading three times to return to the Terminals and Sets heading.

End of session




Tip - If the Norstar set is a member of a Hunt Group, the Call Forward on busy feature is overridden and the Hunt Group call continues to ring until the hunt time has expired. For more information about Hunt Groups, see *Programming Hunt Groups* on page 165.

Making Changes to Do Not Disturb on Busy

When you are on a call and a second call comes in, your telephone rings softly to alert you to the second call. You can turn this feature on or off for each telephone.

Begin the programming session

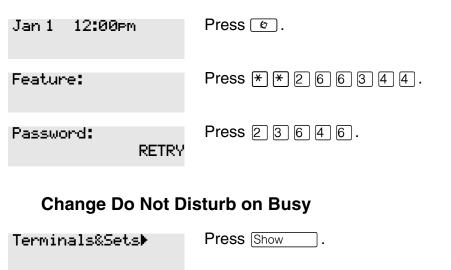

Show set:____ Enter the internal number of the telephone extension. This becomes the number for the intercom button. In this example, number is 225.

If the set has been given a name, it appears on the display.

225:225 FIND	Press Show
Capabilities▶	Press Show
Fwd no answer ≯	Press Next twice.
DND on Busy:N CHANGE	Press <u>CHANGE</u> to turn the feature on.
DND on Busy:Y CHANGE	A second press turns it off again. Press 🕋 to end your session.
	nue programming capabilities for this telephone, or nes to return to the Terminals and Sets heading.
End of session	

For more information about Call Forward and similar settings, see *Forwarding your calls within the system* on page 111.



What would you like to do next?

Some of the most common programming tasks are listed below. For a comprehensive list of settings and instructions, see either the *Table of Contents* on page 3 or the *Index* on page 271.

Redirect calls coming in on a line.	See <i>Turning on Line Redirection</i> on page 117.
Allow individuals to answer calls that are ringing at another telephone.	See <i>Picking up a call ringing at another telephone</i> on page 56.
Assign telephones to different zones for paging.	See <i>Paging</i> on page 123.
Turn the night service on and off.	See <i>Making additional telephones ring</i> on page 209.
Use a Basic password so others can take care of programming such as changing user speed dials, changing names, and changing the time and date.	See <i>Using passwords</i> on page 217.

Answering calls in Hunt Groups

Your Norstar system now allows you to establish Hunt Groups in your system. Hunt Groups are a group of Norstar set DNs that can be called by a single directory number. The Hunt Groups feature ensures calls are easily routed to the appropriate people. You can program:

- the members for a Hunt Group
- member position within a Hunt Group
- how calls are distributed
- how long a call spends looking for available members
- what happens if all members are busy

For more information about Hunt Groups see *Programming Hunt Groups* on page 165.

Answering an incoming call

There are three indications of an incoming call: ringing, a line button flashing, and a message on the display. You do not necessarily receive all three indications for any particular call. For example, you may have a line that has been set up not to ring at your telephone. If so, you see only a flashing line button. There are many possible combinations, depending on how your system is set up. See *Choosing a line using a line button* on page 77 for more information on the use of lines.

If you receive a priority call and your telephone has no free internal line buttons, you cannot transfer the priority call, you must accept or release it.

Line buttons

One line button for each line is assigned to your telephone. Press the line button to select the line you want to answer or use to make a call. Having several line buttons gives you immediate access to more than one line.

The 7000 and 7100 digital telephones, analog telephones, and Digital Mobility phones have two assigned intercom paths which are used instead of line buttons to answer and make calls. Each set can be assigned two lines. You can press **u** to switch between two calls, one active and one on hold.



Note: - On the Digital Mobility phone, the R (Recall) key provides the same function as the Hold key on the digital phones.

What line indicators mean

Flashing on and off for equal lengths of time	There is an incoming call on the line
Flashing on and off more quickly	You have placed a call on hold
Flashing on for longer than off	Someone else has put a call on hold on that line
On, not flashing	You are connected to the call on that line or the line is in use elsewhere
Off	The line is free

The **7316E digital phones** display a set of icons in place of flashing arrows when it is connected to a system with version 6.1 or newer software. If you connect a 7316E digital phone to a system that is running version 6.0 or previous versions, the standard line indicators display.

The **KIM** also displays some of these icons. Note that this piece of hardware is only supported by version 6.1 and newer software.

(▲	Active call	The line is active and/or you are connected to this telephone.
, T	Ringing	A call is coming into this line.
€	Hold	The call on this line is on Hold at this telephone.
C	Call forward	The call on this line has been forwarded.
	Active button	The feature assigned to this button is active.

Flash rate indicators for 7316E digital phone and KIM icons

On, not flashing	You are connected to the call on that line or the line is in use elsewhere or the service indicated is active
Off	The line is free
Flashing on and off for equal lengths of time	Existing alert rate
Flashing on and off more quickly (twinkle)	I-hold
Flashing on for longer than off (blink)	U-hold

Rings you may hear

A double beep every 10 seconds	A call has been camped to your telephone.
A long single ring	There is an external call on the line for you.
A shorter double ring	There is an internal call on the line for you or a call is being transferred to you.

A brief single ring	A call is being redirected on one of your redirected lines. You cannot answer this call.
Three beeps descending in tone	You are receiving a priority call.

Sorting calls by distinctive ring patterns

When lines, telephones and Hunt groups are configured on your system, they can be assigned one of four distinctive ring patterns (DRP). The default for all telephones is 1 and the default for lines and Hunt groups is None, which is the lowest priority. The highest priority is 4.

Call ringing: When multiple calls are presented to the telephone, the call with the highest priority DRP setting will be the call that rings at the telephone.

Call answering: When multiple calls are presented to a telephone, and the user picks up the handset, the call with the highest priority DRP setting is the call that is presented.

- **Note:** External calls always have a higher priority than internal calls.
- **Note:** If the ring type is changed on a telephone after the DRPs are set on the line, the line DRPs are overwritten by the telephone settings. If the DRPs are set for a line after telephone programming, then the telephone ring programming is overridden by the line DRP program. Refer to the *Modular ICS 7.1 Installation Guide* for information about setting distinctive ring for lines. If the call is to a Hunt group, and the Hunt group DRP is higher than the line DRP, the Hunt group DRP will take precedence within the Hunt group. Refer to *Assigning a distinctive ring pattern to a Hunt Group* on page 175.

Answering calls at a prime telephone

Each line in a Norstar system can be assigned a prime telephone. Calls not answered at their normal destinations are transferred to the prime telephone. The prime telephone is usually the attendant's telephone. The installer or customer service representative programs a prime telephone for a line.

Displays

DND from 221	The person at telephone 221 has forwarded a call to you using Do Not Disturb.
DND transfer	The system has transferred a call to you from a telephone with Do Not Disturb turned on.
DRT Line001	Nobody answered this call so the system transferred it to you.
Line001 callback CALLBACK	Someone has camped, parked or transferred a call on line 001, but no one has answered it. Press <u>CALLEACK</u> or the line button to connect to the call.
Line001 to prime	There is no telephone that can receive a call on line 001 so the system has transferred it to you.
Line002>Line157	The call coming in on line 002 was intended for target line 157. Line 157 is busy, so the call has come to you.

For other displays, see Common feature displays on page 249.

Expanding telephone capacity

You can add additional memory buttons to 7316E digital phones connected to KIMs (T24 key indicator modules). If you add the modules without identifying them as enhanced central answering positions (eCAPs) in programming, the user can program the module buttons as an expanded memory button set.


However, if you want to designate one or more users to be central answering positions for your system, you can program the CAPS as eCAPS. Enhanced CAPS support line appearances, multiple target line appearances and Hunt group designators. You can have five eCAPs on a Norstar Modular system. It is best if one of the eCAPs is the prime telephone and direct-dial telephone for the lines and telephones it serves.

Features for eCAPs are briefly described in this section. For details about configuring the KIM as an eKIM, refer to the *Modular ICS 7.1 Installer Guide*.

Using a 7316E+KIM as a central answering position

When you deploy a 7316E+KIM digital phone it can be configured as an eCAP by your installer. In this configuration, the KIM is referred to as an eKIM and each module supports line appearances, multiple appearances of target lines, and hunt group designators, as well as memory button programming. You can connect up to four eKIMs to a 7316E

If you do not need lines or hunt group appearances on the KIMs, there is no requirement for any system configuration. This configuration of the KIM is called an ordinary KIM (OKIM) and you can install up to nine modules on a 7316.

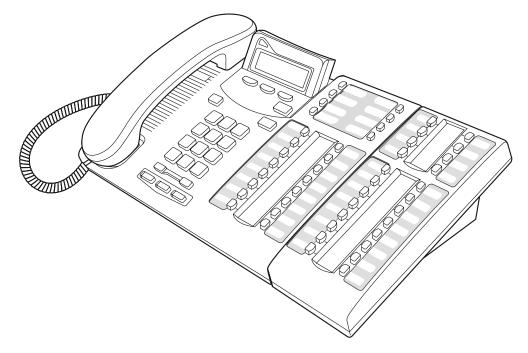

Norstar 7316E digital phone with added KIM

On all KIMs, at each telephone you can use the memory programming feature to:

- provide feature access (Refer to *Programming a feature code onto a memory button* on page 147)
- provide access to line pools (Refer to *Programming a memory button with a line pool* on page 79)
- provide one-press external autodial (Refer to *Storing a number on a memory button for Autodial* on page 87)
- configure system-wide call appearances (SWCA) by assigning SWCA feature codes

Cold starting the KIM

If your KIM fails, or if you want to erase programming on the KIM, there are two types of cold starts.




TIPs - If you are cold starting an eKIM that has line or Hunt group assignments, the cold start will erase current programming, and insert the line appearances, starting with the top, left button. After all the line appearances are assigned to lines, the system adds target line or Hunt Group appearances. If any buttons are left, the system will populate the buttons with autodialer assignments.

For both types of cold starts:


1. Unplug and replug the 7316E line cable.

The telephone will restart and all the icons will flash. When the telephone icons stop flashing, the KIM module icons start flashing.

- 2. At this point, do one of the following:
- KIM single-module cold start

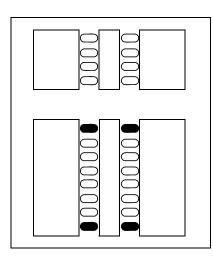

If you just want to cold start an individual module, on that module, simultaneously press the two top and two bottom buttons on the lower button set, as shown in the following diagram. The KIM displays a random pattern of icons as the KIM resets. • **KIM multi-module cold start** If you want to cold start all the KIMs attached to your telephone, simultaneously press the top two buttons on the upper button set, and the bottom two buttons on the lower button set, as shown in the following diagram.

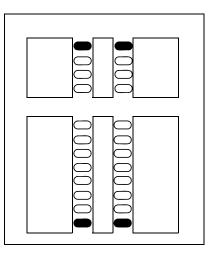

Customizing your eKIM

You can move external lines, target lines or hunt group appearances onto the eKIM by using 🔄 ¥ 🖲 1. See *Moving line buttons* on page 156.

Any of the buttons on the eKIM that do not have line assignments can be programmed to dial internal or external numbers automatically. You also still can program features directly onto eKIM and OKIM buttons. Refer to *Time savers for making calls* on page 87 and *Customizing your telephone* on page 145 for information about programming memory buttons.

eKIM button programming for CAP

Any lines and target lines assigned to the 7316E, which overflow to the eKIM, must be assigned by your installer. You can, however, use the Coordinator password to assign the telephone to the hunt groups for which you want to provide an appearance. Refer to *Programming Hunt Groups* on page 165 for information about programming hunt group appearances. Designating features or autodial numbers to the eKIM buttons, can be programmed using the Button programg, which is found under User Preferences under Terminals&Sets.

- 1. Place the programming overlay over the appropriate buttons on your two-line-display telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password). Terminals&Sets displays.
- 4. Press Show . Show set: displays.
- 5. Enter the DN number of the 7316E which is attached to the eKIM you want to program, then press <u>OK</u>.
- 6. Press Show . Capabilities displays.
- 7. Press Next two times until the display shows User preferences.
- 8. Press Show . Model displays (7316E+<n>KIM).
- 9. Press Next . Button programing displays.
- 10. Press the <u>KIM</u> softkey for the KIM for which you want to program buttons.



TIP - If no KIM softkeys appear, it means the telephone was not configured as a CAP under CAP/KIM assign in System prgrming.

- 11. Press Next until you find the button you want to program.
- 12. Press <u>TEL#</u> to enter an autodial number, or press <u>FEATR</u> to enter a feature code and feature programming. To make the button blank, press <u>CLR</u>.

Monitoring telephones from the KIM

The indicator icons beside the buttons on your KIM show the status of system telephones or lines assigned to the eKIM. Refer to *What line indicators mean* on page 42 for a description of the 7316E and KIM icons.

Release button

Pressing 🝙 ends a call. You do not have to put the receiver down. 🝙 also ends feature programming.

While you are on a call, do not press 🝙 to end a feature you are using. If you do, you disconnect the call. Use 😰 instead.

Hearing aid compatibility

The receivers on all system digital phones are compatible with hearing aids as defined in the FCC rules, Part 68, section 68.316. Not all hearing aids are optimized for use with a telephone.

Viewing information about a call on the display

If you subscribe to Call Display services from your local telephone company, one line of information about an external caller is displayed after you answer. Depending on the setting, and the external information available, either the caller's name or telephone number is displayed.

When you transfer an external call to another Norstar user, this information is displayed on the target telephone.

Call Display information becomes available between the first and second ring of an incoming call. If you answer before the Call Display information is available on your display, and you press 🔊 8 1 1, you see only the line number or line name.

To use logging features with Call Display, see *Using Call Log* on page 137.

Using Call Information for a particular call

Ø 8 1 1

Call Information allows you to see information about incoming calls. This information is more detailed than the Call Display information you can receive automatically. For external calls, you can display the name of the called-party telephone, telephone number, and the line name. For an internal call, you can display the name of the called-party telephone and the internal number of that telephone. You can see information for ringing, answered, or held calls.

Call Information is available for calls even if they have been transferred, forwarded or rerouted in some way.

Names and numbers for external calls are displayed only if you have subscribed to Call Display services from your telephone company.



Tip - Call Log displays the same information as Call Information, along with the date and time of the call, and the number of times the caller called.

Once you answer a call, new calls coming in on lines configured with CLID to telephones with CLID allowed, present the prompt: LineXXX Calling for two rings, and then the CLID of the caller will display for three seconds (XXXXX). If the call is being forwarded, the CLID will also display the number from which the call was forwarded (XXXXXYYYY).

This transient prompt will disappear if you press a programmed feature button, external autodialer, answer DN button, line button, intercom button, any dialpad button, or handsfree button. As well, an incoming Priority call or Voice call will clear the display and display the information for the Priority or Voice call.

Displaying Call Information before or after answering

To find out who is calling or to display information about your current call:

- 1. Press 🙋 8 1 1.
- 2. Press # or <u>VIEW</u> to display more information about an external call.

Call Display information becomes available between the first and second ring of an incoming call. If you answer before the Call Display information is available on your display, and you press 2 8 $\boxed{1}$ $\boxed{1}$, you see only the line number or line name.

Displaying Call Information for a call on hold

- 2. Select the line on hold. Information about the call is displayed.
- 3. Press # or <u>VIEW</u> to display more information about an external call.



Tip - If your telephone automatically displays Call Display information for a call, you still need to press (2) 8 1 1 before you can press # or <u>VIEW</u> to display more information about the call.

Making Call Display information appear automatically

Each telephone that rings for an external line can display Call Display information for that line. After the call is answered, Call Display information is always shown at the telephone that answered the call. Your installer or customer service representative can program telephones to have automatic Call Display.

This feature is not available to ISDN terminals.

Changing which information is shown first about a call

Depending on the services you subscribe to, Call Display information may contain up to three parts:

- the name of the caller
- the number of the caller
- the name of the line in your system that the call is on.

For each telephone, you can determine which information is displayed first.

- 1. Place the programming overlay over the appropriate buttons on your two-line-display telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show .
- 6. Press Next four times.
- 7. Press Show
- 8. Choose a setting at 1stDisplay: using the <u>CHANGE</u> button. The choices are Name, Numbr or Line.

You may see Unknown name or Unknown number on the display if the information is not available from your telephone company. You may see Private name or Private number on the display if the caller blocks that information.

Picking up a call ringing at another telephone

You can pick up a call ringing at another telephone by using Directed Pickup or Group Pickup.

Answering ringing telephones using Directed Pickup

You can answer any telephone that is ringing in your Norstar system, except private lines.

- 1. Press @ 7 6.
- 2. Enter the internal number of the ringing telephone.

To use Call Pickup (Directed Pickup), the telephone must be ringing. If, for example, the auxiliary ringer is ringing, but the call is not ringing at a telephone, the call cannot be answered using Directed Pickup. It must be answered normally at a telephone that has a flashing indicator for the call, or by using Trunk Answer. You can answer a call that is ringing because someone has transferred the call to a telephone and the call is ringing on an intercom button.



Tip - Directed pickup can retrieve calls that are ringing on an Answer DN. While you may enter the internal number of the telephone you hear ringing, it may be calls from another telephone you are answering.



Privacy issue

Target lines can be designated as Private (default is Public), however, such features as Call Pickup can still answer these lines at remote telephones. Only physical, analog lines set to Private are blocked from Call Pickup.

Answering any ringing telephone using Group Pickup

Your Norstar system can be divided into nine pickup groups. If you are a member of a pickup group, you can pick up a call that is ringing at any telephone in your pickup group.

1. Press @ 7 5.

Group Pickup cannot be used to retrieve a camped call.

If there is more than one incoming call at a telephone in a pickup group, a call ringing on an external line is answered first, followed by calls on the prime line and, finally, calls on internal lines.



Tip - A Hunt Group call ringing at a Norstar set DN that is also a member of a call pickup group can be picked up by any Norstar set in that call pickup group. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

Changing a telephone pickup group

Telephones can be put into and taken out of pickup groups.

- 1. Place the programming overlay over the appropriate buttons on your two-line-display telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Next five times.
- 7. Press <u>CHANGE</u> at Pickup grp: to assign the telephone to pickup group (1-9) or remove it from a pickup group (None).

Displays

Already joined	You are already connected to the telephone that made the call you are trying to pick up. This can happen if you are on a call to a co-worker and your co-worker dials the number of a telephone in your pickup group, and you attempt to pick up that call.
Pickup denied	There is no call that you can pick up or the ringing call was answered. You have tried to pick up a call on someone
	else's private line.
Pickup:	Enter the internal number of the telephone that is ringing. (You may use an internal autodial button to do this.)
	If you decide not to answer a ringing call after activating Directed Pickup, press .

Trunk Answer

The Trunk Answer feature allows you to answer a ringing call anywhere in the system from any telephone in the system. The line you are answering does not have to appear or ring at the telephone you are using.

Trunk Answer works only with calls that are ringing on lines for which a Ringing Service schedule is active and if Trunk Answer is enabled by your installer or customer service representative.

Answering a call using Trunk Answer

Press	Ø	8	0	0	
-------	---	---	---	---	--



Tip - *If there is more than one incoming call on lines in a Ringing Service, the Trunk Answer feature picks up the external call that has been ringing the longest.*

Displays

Line denied

Pickup denied

You have tried to pick up a call on someone else's private line.

The call that is ringing is on a line that is not in a Ringing Service.

Answer DNs and Answer keys

If you have Answer DNs assigned to memory buttons with displays, you can use an Answer DN button to monitor calls on another telephone. The calls that come to the monitored telephone that provide an appearance on the Answer DN button are determined by the system-wide Anskey setting.

Answer DN buttons are useful for attendants who monitor incoming calls for one or several other people. For example, a secretary may have appearances for three different bosses on her answer buttons. Once a call for boss A is answered by the secretary, the appearance stops at that set. This allows for another (simultaneous) call to come in on the same line. The same is true for boss B and boss C. When incoming call traffic becomes high, the calls can then be routed to a Hunt Group to optimize call handling. For more information about Hunt Groups, see *Programming Hunt Groups* on page 165.

Systems running MICS 7.0 and newer software can also use an Answer DN to autodial the telephone. The Answer DN must be idle (no indicator) for this feature to work. This feature does not prevent you from assigning a memory button as an autodial button for the same DN.

Digital Mobility phones and 7000 and 7100 digital phones can also have Answer DNs assigned. However, since these telephones do not have memory buttons with display keys, the Answer DN must be set to Ring Only. These telephones also only have two assigned intercom buttons. Therefore, a maximum of two Answer DNs can be answered and active at the same time.

Answer DNs are assigned under Terminals&Sets under Lines, Line Ass9n. This setting assigns the DN of another telephone to one of your telephone buttons. Answer keys are assigned under Sustem Framina, Featr settinas. This setting determines which calls will appear at the bottom. There are three levels: Basic, Enhanced, and Extended.

You need an Installer password to perform this programming. See the *Modular ICS 7.1 Installer Guide* for more information.

ISDN terminals cannot be assigned Answer DNs to monitor other telephones, but ISDN terminals can be monitored.

If more than one call is ringing at a telephone, the first call appears on the attendant Answer DN button. Any subsequent calls appear on intercom buttons, if they are available.



Tip - *More than one attendant may have an Answer DN button for the same telephone. This allows two or more attendants to handle calls for a busy person.*

Each telephone can handle calls for up to eight other people using a separate Answer DN button for each person.

Creating a Conference Call

You can talk to two people at once.

- 1. Make sure you have two calls, one active and one on hold.
- 2. Press @ 3.
- 3. Press the appropriate button to retrieve the held call.

This action occurs automatically on the 7000 and 7100 digital phones.

You can create a conference when you are on a call.

- 1. Make a second call.
- 2. Press @ 3.

3. Press the button where the first call is on hold to create a conference.

Only the person who established the conference can process the conference by using the procedures described in this section.



Tip - *You can create a conference by releasing privacy on a call. See Turning Privacy on or off for a call on page 72.*

Disconnecting one party

You can disconnect one party from a conference and continue talking to the other.

You can activate this feature on all system digital phones except for 7000 or 7100 digital phones and Digital Mobility phones.

- 1. Press the line button of the call that you want to disconnect. The call that you want to keep is automatically put on hold.
- 2. Press **•**. The call is disconnected.
- 3. Press the line button of the held call to speak to the remaining person.

On a 7000 or 7100 digital phone or a Digital Mobility phone:

- Press # 3, to place one caller on hold.
 Press /R again, to put the caller you want to keep on hold.
- 2. Press **•**. The call is disconnected.
- 3. Press \bigcirc /R to speak to the remaining party.

Independently holding two calls

For all telephones except the 7000 and 7100 digital phones and Digital Mobility phones, you can put the two people in a conference call on hold independently so that they cannot talk to each other.

- 1. Press the line button of one person. The other person is automatically put on hold.
- 2. Press **.** The second person is put on hold.

You can re-establish the conference.

- 1. Take one call off hold.
- 2. Press @ 3.
- 3. Take the other call off hold.

Putting a conference on hold

You can put a conference on hold, allowing the other two people to continue speaking to each other by pressing .

You can reconnect to the conference by pressing either of the held line buttons. For the 7000 and 7100 digital phones, press **.** For Digital Mobility phones, press R.

Splitting a conference

You can talk with one person while the other person is on hold.

You can activate this feature on all Norstar and Business Series terminals except for 7000 and 7100 digital phones and Digital Mobility phones.



TIP - *Refer to the Nortel Networks Digital Mobility Phone User Guide for details about the handset icons. On the Digital Mobility phone, the R (Recall) button performs the function of a Hold key.*

1. Press the line button of the person you want to speak to. The other person is automatically put on hold.

On 7000 and 7100 digital phones and Digital Mobility phones:

- 1. Press 😰 # 3. The first party is on hold.
- 2. Press , if necessary, to switch parties.

You can re-establish the conference.

- 1. Press @ 3.
- Take the held call off hold. This is not necessary for the 7000 and 7100 digital phones and Digital Mobility phones.

Removing yourself from a conference

You can remove yourself from a conference, and connect the other two callers through your Norstar system.

1. Enter the Transfer feature code (© 7 0.

When you remove yourself from a conference using the Transfer feature, and both callers are from outside your system, one of the callers must have called you on a disconnect supervised line, or the call is be disconnected.

3 parties only	You are trying to add a fourth party to your conference call, or to join two conferences together. Release one call from the conference before adding another, or keep the two conferences separate.
Conf.on hold	You have put a conference call on hold.
Conference busy	You have tried to make a conference call, but your system is already handling its maximum number of conference calls.
Line001 221 TRANSFER	You are on a conference with the two lines or telephones shown. You can drop out of the conference and leave the other two parties connected (Unsupervised Conference) by pressing <u>TRANSFER</u> or by entering the Transfer feature code.
Press held line	You have activated the Conference feature with one call active and another on hold. Press the line button for the call on hold to bring that person into the conference.

For other displays, see Common feature displays on page 249.

Displays

Listening to a call as a group

To allow people in your office to listen in on a call using Group Listening, press (2) 8 0 2.

You hear the voice of the caller through the speaker of your telephone. Continue to speak to the caller through the telephone receiver. The microphone of your set is off, so the caller does not hear people in your office.

Note: The 7000 and 7100 digital phones, analog phones, and the Digital Mobility phone do not support this feature.

Canceling Group Listening

Group Listening is canceled automatically when you hang up or when you press 🔄 # 8 0 2.



Tip - *Keep the receiver away from the speaker, or you may hear feedback. The higher the volume, the more the feedback. Press* **(r)** *to prevent feedback when hanging up.*

Using handsfree and mute

The ability to use handsfree must be turned on or off for each telephone. The type of handsfree can be changed. Refer to *Changing handsfree for a telephone* on page 70.

Handsfree must be set to **Std** or **Auto** in system programming for a telephone to be able to use a headset. This programming is performed by someone with the Installer password.

Note: Model 7000 and 7100 digital phones, analog telephones, and Digital Mobility phones do not support

handsfree or headsets, unless otherwise noted by the manufacturer. For these handsets, set Handsfree to None.

If the telephone is set to Auto, as the case for 7316E digital phones, the next incoming call defaults to the voice path used by the last call. For instance, if you answered your last call using the headset button, the next call will automatically default to the headset if you do not make any changes before answering the call. If you plug in a headset, the telephone will automatically switch the voice path to headset. This will not change the mute status of the call. You can also change the voice path by choosing either the handsfree or headset button.

7316E voice path features: The 7316E digital phone must be set to Auto to allow handsfree. On this telephone, the handsfree button is located under the dial pad, beside the mute and headset buttons.

Answering calls without lifting the receiver

- 1. Press the line button for the ringing call. This step is not necessary if you have a prime line assigned to your telephone.
- 2. Press the handsfree button. The internal microphone and speaker of the telephone automatically turn on.
- Note: The 7316E digital phone has a handsfree button located below the dialpad. This button only works if the telephone is wired to a system running version 6.1 or newer software, and Handsfree is set to Auto.



Tip - Direct your voice toward the telephone. The closer you are to the telephone, the easier it is for the microphone to transmit your voice clearly to your listener.

Making calls without lifting the receiver

- Press the handsfree button. If you do not have a prime line assigned to your telephone, press a line button. The internal microphone and speaker of the set are automatically turned on.
- Note: The 7316E digital phone has a handsfree button located below the dialpad. This button only works if the telephone is wired to a system running version 6.1 or newer software, and Handsfree is set to Auto.
- 2. Dial your call.
- 3. Speak normally.

Muting the set

- 1. Press the mute button to switch off the telephone microphone so that you can speak privately to someone in your office while you are on a handsfree call.
- 2. Press the mute button to turn the microphone back on again and continue your call.
- Note: The 7208, 7316 and 7316E digital phones have a mute button located below the dialpad. Other telephones have mute programmed as a handsfree/mute combination on the bottom memory button (right, column on telephones that have two rows of memory buttons). Refer to the user card for the telephones for specifics about using this button.

The 7000 and 7100 digital phones do not have mute buttons.

The Digital Mobility phone has a mute feature that is controlled by the handset firmware.

Changing a regular call to handsfree

- 1. Press the handsfree button.
- **Note:** The 7316E digital phone has a handsfree button located below the dialpad. This button only works if the telephone is wired to a system running version 6.1 or newer software and Handsfree is set to Auto in programming.
- 2. Hang up the receiver.

Changing a handsfree to a regular call

Lift the receiver.

Using handsfree

On models with separate handsfree and mute buttons:

- The indicator next to the handsfree button is solid when you handsfree is active and off when the telephone is set to handset or headset.
- The indicator next to the mute button blinks when you mute the microphone and turns off when the microphone is open.
- **Note:** Legacy telephones have only one button for both functions. In this case, when the telephone is on handsfree and the microphone is on, the light is solid. If the telephone is on handsfree and the microphone is off (mute), the light flashes.

Wait for your caller to finish speaking before you speak. The microphone and speaker cannot both be on at once. The voice of your caller may be cut off if you both speak at the same

time. Noises such as a tapping pencil could be loud enough to turn on your microphone and cut off the incoming sounds.

To prevent a possible echo, keep the area around your telephone free of paper and other objects that might screen your microphone. Turning down the microphone volume — press the left end of (*) (*) (*) while speaking — prevents echoes. When you change the volume level, both the microphone and speaker volume are adjusted. This is needed in order to prevent feedback problems.

Place the telephone so that any unavoidable local noise, such as an air conditioner, is behind it. This limits the amount of disruptive background noise.



Tip - In open-concept environments, use the receiver when handsfree communication is not necessary or when you need privacy during a call. Another option is to use a headset.

Changing handsfree for a telephone

You can program the type of handsfree used with each telephone or activate handsfree answerback.

- 1. Place the programming overlay over the appropriate buttons on your two-line-display telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Next three times.

7. Choose a setting at Handsfree: using the <u>CHANGE</u> button.

There are three ways to set handsfree for a telephone:

Handsfree:None CHANGE	Handsfree is not available to the telephone.
Handsfree:Std CHANGE	A standard version of handsfree described <i>Using handsfree and mute</i> on page 66. Not available for 7316E digital phones.
Need Handsfree	This prompt appears if you attempt to use handsfree or headset and the telephone not been configured with Auto under Handsfree.
Handsfree:Auto CHANGE	You can make or answer a call without having to pick up the receiver or press the button marked handsfree/mute. The internal microphone of the telephone and the speaker turn on automatically when you press a line or intercom button to make or answer a call.

For other displays, see Common feature displays on page 249.

Both Auto and Standard handsfree allow you to use a headset with a system digital phone.

A handsfree/mute button is automatically assigned to a legacy Norstar telephone that is programmed with handsfree and is always located in the lower right-hand corner of the memory button rows. For 7208 and 7316 digital phones, this button is assigned as a handsfree-only button. The mute button is located under the dial pad.

The handsfree setting for 7316E digital phones only displays Auto or None. The handsfree button on this telephone is located under the dialpad. If Handsfree is set to None, the handsfree button and headset feature do not function. Also, if the 7316E is attached to a system with software previous to MICS version 6.1, it acts like the 7316 digital phone, and the handsfree button under the dial pad is not active.

Handsfree Answerback


Handsfree Answerback allows you to answer a voice call without lifting the receiver.

This feature is always turned off for the 7000 and 7100 digital phones and the Digital Mobility phones.

You can turn handsfree answerback on or off for a telephone that is programmed to use handsfree.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🕑 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Next four times.
- 7. Choose a setting (Yes or No) at HF answerback: using the <u>CHANGE</u> button.

Turning Privacy on or off for a call



Lines in your system can be configured to have automatic privacy. If a line is not programmed with privacy, anyone with the line assigned to their telephone can join your call by pressing the line button. If a line is programmed with privacy, only one person at a time can use the line.

Privacy control cannot be used on internal or conference calls.

When another telephone joins a call, the participants on the call hear a tone, and a message appears on the Norstar display. You cannot join a call without this tone being heard.


Creating a conference by releasing privacy

If a line is programmed with privacy, you can turn privacy off to allow another person with the same line to join in your conversation and form a conference. All the rules applicable to a conference apply except there is only one line in use, instead of the usual two. This means that you cannot split a conference set up using Privacy.

- 1. Press @ 83.
- 2. Tell the other person to press the line button and join your conversation.


Only two system telephones, in addition to the external caller, can take part in this kind of conference.

Making a call private



If a line is programmed not to have privacy, you can turn privacy on for a call, preventing other people with the same line from joining your conversation.

Checking call length using Call Duration Timer



With this feature you can see how long you spent on your last call, or how long you have been on your present call.

Displays	
221 02:47	The display shows the last call you made, or the current call, and the total elapsed time.
Line001 01:45	You parked your last call. The display shows the period the call was parked. This display only shows when the call is active at, or has
	just been released by, your telephone.

Disconnecting by accident

If you accidentally drop the receiver back into the telephone cradle while answering a call, you can quickly retrieve the call.

Pick up the receiver again or press the handsfree button within one second to reconnect the call.

Time

Ø 8 0 3

Use this feature to display the current date and time while you are on a call.

Making calls

There are many ways to make a call, depending on the programming and the type of call, as follows:

- Pick up the receiver and dial. The Norstar system supports three methods of dialing. See *Changing how you dial your calls* on page 80.
- Pick up the receiver, press a line button, and dial (if the call is not on your prime line).
- Press the handsfree button and dial to talk without using the receiver. See *Using handsfree and mute* on page 66.
- Press the handsfree button, then press a line button, and dial to talk without the receiver if the call is not on your prime line.
- Press a line button and dial to talk without the receiver if handsfree answerback is assigned to your telephone.
- Use one of the features that make dialing easier. See *Time savers for making calls* on page 87.

Displays

221 bus9 PRIORITY LATER	The telephone you have called has no internal lines available. Press <u>LATER</u> to use the Ring Again or Message features or press <u>PRIORITY</u> to make a priority call.
9_ QUIT BKSP	You are dialing using Pre-dial. To erase an incorrect digit, press the left end of
95551234 TRANSFER	This prompt remains on your display as long as you are on a call you have dialed. To transfer the call, press TRANSFER .

Already joined	Your telephone is already connected to the telephone you are trying to call. Check your active line buttons, and return to that call.
Calling 221 PRIORITY LATER	Wait for the telephone to be answered. If no one answers, press <u>LATER</u> to use the Ring Again (page 84) or Message (page 127) feature, or press <u>PRIORITY</u> to make a priority call.
Can't rin9 a9ain	You cannot use Ring Again on your current call. You can only use Ring Again while you have a busy signal on an internal call or line pool request or while an internal call is ringing.
Do not disturb PRIORITY LATER	The telephone you are calling has Do Not Disturb turned on. Press <u>LATER</u> to use the Ring Again or Messages features, or press <u>PRIORITY</u> to make a priority call.
Expensive route	You have dialed a number, but the least expensive route that the system is programmed to use is busy. Unless you release the call, it goes through on a more expensive route.
Hidden number	The last number you dialed or the number you saved for Saved Number Redial was a speed dial number that displayed a name rather than the number. The number is dialed correctly, but you cannot see it.
Line denied	You have attempted to use the private line assigned to another user.
Line001 TRANSFER	Enter the digits of the number you want to dial.
No last number	You have not dialed an external telephone number since the last power interruption or system reset.
No line selected	Either you have no prime line or your prime line is busy. Select a line manually before dialing.
Not in service	You have entered the number of a telephone that is not in service.

On another call LATER	The telephone you have called is on another call. Press <u>LATER</u> to use the Ring Again or Message features.
Restricted call	The call you are trying to make has been restricted in programming. A possible reason is time-of-day restrictions on certain calls.
Rin9 A9ain? YES NO EXIT	Press <u>YE5</u> to use Ring Again. Press <u>N0</u> to send a message. See <i>Sending messages</i> on page 127 and <i>Turning on Ring Again</i> on page 85.
Select a line	Either you have no prime line, or the prime line is in use, or the line programmed for an autodial number, speed dial number, or Hotline is in use. Select a line and dial again.
Send messa9e? YES NO	Press <u>YES</u> to send a message. See Messages.

For other displays, see Common feature displays on page 249.

Choosing a line using a line button

You have one line button for each line assigned to your telephone. Press the line button to select the line you want to answer or use to make a call. Having several line buttons allows you immediate access to more than one line.

The 7000 and 7100 digital phones and the Digital Mobility phones each have two intercom paths assigned which are used instead of line buttons to answer and make calls. These paths do not show us as display keys. Instead, the user switches between two calls by pressing \frown (7000/7100) or R (on the DM phone). In this situation, one call is active and one call remains on hold.

Line pools

A line pool is a group of external lines that can be shared by many telephones. You can use a line in a line pool to make an external call.

The MICS system can have 15 non-PRI line pools and a maximum of four PRI line pools, depending on the hardware and profile configuration for your system. A telephone can be programmed to access any number of line pools. You can have several different line pools for your system, each one giving you access to a different set of external lines. It is one way of sharing lines across telephones in a system.

A line pool access code is a number you dial to get a non-PRI line pool. The access code can be up to four digits long. Your installer or customer service representative programs the line pool access codes and gives each telephone access to a line pool.

PRI line pools are accessed using destination codes. Destination codes differ from line pool codes, in that PRI line pools are assigned to specific routes that are then assigned a destination code. Destination codes can also be assigned to schedules, so that different pools are used at different times of the day.

Everyone in the office should have a list of the line pool access codes and destination codes for the line pools their telephones can use.

Using a line pool to make a call

Use this process to make a line pool call:

- 1. Press @ 6 4.
- 2. Enter a line pool access code or destination code.
- 3. Dial the number you are calling.

If you have a free internal line, you can make a call using a line pool without entering the feature code first.

- 1. Select an internal line (intercom).
- 2. Dial the line pool access code or destination code.
- 3. Dial the number you are calling.



Tip - If no lines are available in the line pool, you can use Ring Again at the busy tone. You are notified when a line in the line pool becomes available. See Using Ring Again on page 84.

Programming a memory button with a line pool

When you program a button with the line pool feature code, you must enter a line pool access code after the feature code. The programmed line pool button accesses a specific line pool, not the line pool feature. See *Programming feature buttons* on page 147 for more information.

If you program a button with an indicator to access a line pool, when all the lines in a line pool are busy, the indicator for the line pool button turns on. The indicator turns off when a line becomes available.

Making calls from an ISDN terminal

ISDN terminals do not have line buttons or intercom buttons as do Norstar telephones. To make an outgoing call from an ISDN terminal, access an external line by entering a line pool code or by using the ARS feature.

Dialing calls with a second dial tone

Some call destinations require a two-stage dialing sequence that requires a second dialing tone before the local numbers are dialed. Your system administrator will indicate which destination codes or numbers require this process.

- 1. Dial the destination code and any initial digits specified for the call.
- 2. When you hear the dial tone again, complete the dialing sequence.

Changing how you dial your calls

To change how how you dial your calls, use this feature:

- 1. Press ② ¥ 8 2.
- 2. Press # or <u>NEXT</u> until the dialing mode you want appears.
- 3. Press \frown or $\bigcirc K$ to select the displayed dialing mode.

The dialing modes feature code cannot be programmed onto a memory button.

Using Standard dial

Standard dial allows you to make a call by selecting a line and dialing the number. If you have a prime line, it is selected automatically when you lift the receiver or press the handsfree button.

You cannot use Standard dial on 7000 or 7100 digital phones unless you pick up the receiver first. If you have this type of telephone, use the Automatic dial or Pre-dial feature for on-hook dialing.

Digital Mobility phones only support standard dial. To dial, ensure that the handset is activated, and then dial the call number. The handset programming may allow pre-dial, but that feature would be specific to the handset. Refer to the user card that came with the handset for details about set-specific operation.

Using Automatic dial

Automatic dial allows you to dial a number without selecting a line. Your prime line is selected as soon as you start dialing a number.

Automatic dial does not work if your telephone has no prime line or if your prime line is in use.

Telephones connected to an analog terminal adapter (ATA) cannot use Automatic dial.

Using Pre-dial

Pre-dial allows you to enter a telephone number, check it, then change it before actually making the call. The call is not dialed until you select a line or line pool, or pick up the receiver. You can pre-dial both external and internal numbers. You must, however, select the correct type of line (external or internal) for the type of number you entered.



Tip - If your telephone starts ringing while you are pre-dialing a number, you can stop the ringing by turning on Do Not Disturb (8 5). This does not affect numbers you are entering.

You cannot pre-dial a telephone number if all the lines on your telephone are busy.

When the dialed internal number is busy

There are a couple of methods you can use if the telephone you are calling is currently busy.

Priority Call

If you get a busy signal or a Do Not Disturb message when you call someone in the office, you can interrupt them. Use this feature for urgent calls only.



Tip - *Priority calls cannot be made to Hunt Group DNs. For more information about Hunt Groups, see Programming Hunt Groups on page 165.*

Digital Mobility phones receive priority calls as ringing calls. The existing call automatically goes on hold and the priority call becomes the active call.

Making a priority call

- 1. Press @ 6 9.
- 2. Wait for a connection, then speak.

A person who receives a priority call while on another call has eight seconds to accept or block the call. For information about blocking calls, see *Stopping calls from ringing at your telephone: Do Not Disturb (DND)* on page 194. If the person does nothing, the priority call feature puts their active call, including conference parties, on Exclusive Hold and connects your call.

Giving a telephone the ability to make priority calls

Use system programming to allow a telephone to make priority calls.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 😰 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Next nine times. The display shows Priority call:
- 7. Press <u>CHANGE</u> to choose \forall (Yes) or N (No)

D	isplays	
	Call blocked	You tried to place a priority call to another system telephone. The person you called has blocked your call. Try to call later.
		has blocked your call. Try to call later.
Please wait	Please wait	The party you are calling has eight seconds to decide whether to accept or reject your
		priority call.
	Priority denied	The telephone you are calling has already received a priority call or is unable to receive
		priority calls.

You can make a priority call only while your telephone displays:

221 busy PRIORITY LATER	The set you are trying to call has call on all assigned lines.
Calling 221 PRIORITY LATER	
Do not disturb PRIORITY LATER	The set you are trying to call has the Do Not Disturb feature activated.
On another call PRIORITY LATER	The set you are trying to call is busy because the person is on another line.

Using Ring Again

Use Ring Again when you call someone on your Norstar system and their telephone is busy or there is no answer. Ring Again can tell you when they hang up or next use their telephone. You can use Ring Again to tell you when a busy line pool becomes available.



Tip - The Ring Again feature cannot be used when calling a Hunt Group DN. For more information about Hunt Groups, see Programming Hunt Groups on page 165

Turning on Ring Again

1. Press 😰 2 before you hang up.

Using Ring Again cancels any previous Ring Again requests at your telephone.

Canceling Ring Again

1. Press 😰 # 2 to cancel a Ring Again request.

Displays

Can't rin9 a9ain	You cannot use Ring Again on your current call. You can only use Ring Again while you have a busy signal on an internal call or line pool request, or while an internal call is ringing.
Rin9 A9ain? YES NO EXIT	Press <u>YES</u> to use Ring Again. Press <u>N0</u> if you prefer to send a message.

Time savers for making calls

Storing a number on a memory button for Autodial

You can program memory buttons for one-touch dialing of internal or external telephone numbers.

Buttons used for lines, answer DNs, or handsfree cannot be used as autodial buttons.

If the power to your Norstar system is off for more than three days, autodial numbers, and some other system programming, may be lost from the memory.

Adding an autodial button

Use these features to program external and internal numbers.

1. Press $\textcircled{e} \times \textcircled{1}$ to program an external number.

Press e * 2 to program an internal number.

2. Choose a button and then enter the number as if you were dialing it.

When programming autodial you can use:

- Last Number Redial
- Saved Number Redial
- destination codes use the intercom line
- host system signaling

Choosing a line for Autodial

To include a line selection for an external number, press the line or intercom button before you enter the number. To select a line pool, press a programmed line pool button, or press the intercom button and enter a line pool access code.

If you select a line before pressing the autodial button, the call goes out on the line you have selected instead of the line that is part of the autodialer programming.

For the 7000 and 7100 digital phones, an external autodialer can be programmed only by using a line and not a line pool.



Tip - *If you do not include a line selection in an autodial number, the call uses your prime line (if you have one).*

Digital Mobility phones do not support the auto dial feature.

Using intercom as the line for Autodial

If you press the intercom button as the line for an external autodial number, you must include a valid line pool access code or a destination code. If line pool access codes or destination codes are changed, remember to reprogram autodial numbers.

Displays

987_ QUIT	BKSP	ОК	Continue to enter digits until the number is complete. Press • or <u>BKSP</u> to
			erase an incorrect digit. Press \bigcirc or \underline{OK} when you are finished.
Autodia	al full		The memory allotted to autodial numbers in your Norstar system is full.

Button erased	While programming external Autodial, you erased the button by pressing or <u>OK</u> before entering any digits.
Enter di9its QUIT OK	Enter the number you want to program. Choose the line first, if necessary, then enter the number exactly as if you were making a call.
Intercom #: QUIT	Enter the internal telephone number you want to program.
Invalid number	You are programming an internal autodial button and have entered a number that is not an internal number on your system. Enter a valid internal number. If the number you are entering is a destination code, use external autodial.
Press a button QUIT	Press the memory button you want to program.
Pro9ram and HOLD	Enter the number you want to program onto the button, then press 🕒.
Pro9ram and OK QUIT OK	Enter the number you want to program onto the button, then press \frown or \underline{OK} . You may include a line or line pool selection in an autodial sequence by selecting the line before entering any digits.
Pro9rammed	The number is stored on the button.

For other displays, see *Common feature displays* on page 249.

Using Last Number Redial

Press 🕑 5 to redial the last external number you dialed.

Last Number Redial records a maximum of 24 digits.



Tip - If you have a programmed Last Number Redial button, you can use Button Inquiry (♥ ★ 0), then press the Last Number Redial button followed by #) to check the last number before you dial it.

Preventing a telephone from using Last Number Redial

Last Number Redial can be restricted at individual telephones.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show .
- 6. Press Next three times. The display shows Restrictions.
- 7. Press Show twice.
- 8. Press Next . The display shows Allow last no:.
- 9. Press <u>CHANGE</u> to choose Y (Yes) or N (No).

Hidden number	The last number you dialed was a speed dial number that displayed a name rather than the number. The number is dialed correctly, but you cannot see it.
No last number	You have not dialed an external telephone number since the last power interruption or system reset.



Tip - You can copy a number onto an autodial button using Last Number Redial.

Using Speed Dial

Norstar provides two types of speed dialing: system and personal.

- System Speed Dial programming allows you to assign a maximum of 255 three-digit speed dial codes (001-255) to the external numbers your co-workers call most frequently.
- User Speed Dial programming allows individuals to program a maximum of 24 speed dial numbers that are personal to their telephone. These numbers also have three-digit codes (256-279)

Speed dial numbers are subject to the same restriction filters as regularly dialed numbers. Your installer or customer service representative can program system speed dial numbers to bypass dialing restrictions.

Speed dial numbers may include host system signaling codes.

Making a speed dial call



Tip - *There is no difference between using User Speed Dial and using System Speed Dial. They differ only in how you program them.*

- 1. Press 😰 🛈 to quickly dial external telephone numbers that have been programmed onto speed dial codes.
- 2. Enter the appropriate three-digit speed dial code.

Changing and adding System Speed Dials

The system coordinator assigns numbers to System Speed Dial codes for the entire system. See *Adding or changing a system speed dial* on page 29.

Adding or changing User Speed Dial

To add or change a User Speed Dial number on your telephone:


- 1. Press 𝔄 ¥ 4.
- 2. Enter a three-digit code from 256 to 279 that you want to associate with a telephone number.
- 3. To include a line selection for this number, press the line or intercom button. To select a line pool, press a programmed line pool button, or press the Intercom button and enter a line pool access code. For the 7000 and 7100 digital phones, analog telephones and Digital Mobility phones, you can enter only a line pool access code.
- 4. Enter the number you want to program.
- 5. Press \bigcirc or \bigcirc K.

Displays

01:9 CANCL BKSP OK	Continue entering the number you want to program. You can change the number by pressing <u>BKSP</u> or <u>reservent</u> . When you are finished, press re or <u>OK</u> .
Enter di9its QUIT OK	Enter the telephone number you want to program exactly as if you were dialing it normally. When you are finished, press — or <u>OK</u> .
Invalid code	You have entered a code outside the code range (001-255 for system, 256-279 for user codes).
No number stored	There is no number stored on the speed dial code you have dialed.
Pro9ram and HOLD	If you want to program a line or line pool selection for this speed dial number, select the line or line pool. Otherwise, enter the telephone number exactly as if you were dialing it normally. When you are finished, press
Pro9ram and OK QUIT OK	If you want to program a line or line pool selection for this speed dial number, select the line or line pool. Otherwise, enter the telephone number you want to program exactly as if you were dialing it normally. When you are finished, press \underline{OK} .
Select a line	There is no line associated with the speed dial number you are trying to use. Select a free external line or line pool and enter the speed dial feature code again.
Unknown number	The system cannot dial the number stored. Reprogram the number.

For other displays, see *Common feature displays* on page 249.

Using Saved Number Redial



You can use this feature while you are on an external call that you dialed to save the number so that you can call it again later.

Each telephone can save one number at a time with Saved Number Redial, not one number for each line.



Tip - You can copy a number onto an autodial button using Saved Number Redial.

Saved Number Redial records a maximum of 24 digits.

Dialing a saved number

Press 🙆 6 7 when you are not on a call.

If you have a programmed Saved Number Redial button, you can use Button Inquiry (> > > 0) to check the last number before you dial it.

Blocking Saved Number Redial

Saved Number Redial can be restricted at individual telephones.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.

- 5. Press Show
- 6. Press Next three times. The display shows Restrictions.
- 7. Press Show twice.
- 8. Press Next twice. The display shows Allow saved no:.
- 9. Press <u>CHANGE</u> to choose Y (Yes) or N (No).

Displays

Hidden number	You have saved a speed dial number that displays a name rather than the number. The number is dialed correctly, but you cannot see it.
No number saved	You have tried to save the number of an incoming call. You can only save numbers that you have dialed yourself.
	that you have dialed yourself.

Handling many calls at once

Using Hold

You can temporarily suspend a call by pressing .

When a call is on hold, its indicator flashes on all telephones that have access to the line. The call can be retrieved from any of these telephones.

On the 7000 and 7100 digital phones and Digital Mobility phones use the hold button, or the equivalent, to alternate between two lines. One line is active, the other is on hold. These telephones cannot retrieve a call placed on hold by another telephone.



Tip - Answered Hunt Group calls can be placed on hold at the answering telephone. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

Retrieving a held call

You can connect to a call on hold by pressing the flashing line button of the held call.

On 7000 and 7100 digital phones and Digital Mobility phones, use the hold feature to toggle between to active calls.

On Digital Mobility phones, if the active call is disconnected, the call on hold will ring at the handset. If the handset moves out of radio range, external active and held calls will transfer to the prime set for that telephone, but internal calls will be dropped.

Listening on hold

If you have been put on hold, you can hang up the receiver while you wait for the other person to return.

- 1. Press 💽.
- 2. Hang up the receiver.
- 3. Press the line button of the call. You may hear indications from the far end that you are on hold, for example, tones or music.
- 4. When the person you were talking to returns, you hear them through your telephone speaker. Lift the receiver and talk.



Tip - If Automatic handsfree has been assigned to your telephone, you can use the handsfree and mute features instead of Listen on Hold.

This feature is not valid for the 7000 and 7100 digital phones and the Digital Mobility phones, since these telephones do not have speakers.

Holding a call exclusively

You can put a call on Exclusive Hold so that it can be retrieved only at your telephone.

Press (2) 9 or (2). The line appears busy on all other telephones, and the call cannot be picked up by anyone else in the office.

Displays

On hold: LINENAM

You have placed one or more calls on hold. The name of the line that has been held the longest is displayed.

Using Call Queuing

Ø 8 0 1

If you have more than one call ringing at your telephone, use this feature code to choose the call that has the highest priority.

Call Queuing answers incoming external calls before callback, camped, and transferred calls.

Transferring calls

Using the transfer feature

Transfer allows you to direct a call to a telephone in your Norstar system, within the network, or external to the network.

Transferring a call

- 1. Press @ 7 0.
- 2. Call the person to whom you want to transfer the call.
- 3. If you want to talk to the person to whom you are transferring the call, wait for them to answer, then speak to them before proceeding.
- 4. When you are ready to complete the transfer, press or <u>JOIN</u>.

Transfer notes:

- You cannot use Last Number Redial, Saved Number Redial, a speed dial code, Priority Call or Ring Again to dial the number for a transfer.
- Depending on how a private network call is routed, it may not always be possible for the system to return a transferred call to you if the transferred call is not answered. When transferring a call to a private network destination, stay on the line until the person to whom you are transferring the call answers.
- You cannot use the Line Pool feature code to access a line pool for a transfer. To use a line pool, use a programmed line pool button, or press the intercom button and enter a line pool access code or a destination code.

• If you have an auxiliary ringer programmed to ring for calls on an external line, and you transfer a call on that line without announcing the transfer, the auxiliary ringer rings for the transferred call.

Transferring external calls

If an external call is transferred to a busy telephone, or not answered after a few rings, the call automatically rings again at the telephone from which it was transferred, and the display indicates that the telephone was busy or that no one answered.

When transferring an external call to an external number, the external call you are trying to transfer must be an incoming call on a disconnect supervised line.

While on a conference call, you can remove yourself from the conference and connect the other two callers using the Transfer feature. However, if both of the other people are from outside the system, at least one of the outside callers must have called you and both of the outside calls must be on disconnect supervision lines.

Note: Transfer via Hold on DID lines is not supported. Once a call is answered, the line appearances on all other sets are free immediately to take other calls. This allows a greater number of calls to be received. Use the Call Park feature or assigned SWCA buttons/codes to transfer a call. Refer to *Using Call Park* on page 106 and *Systemwide call appearance (SWCA) codes* on page 108.

In certain situations, you may experience lower volume levels when transferring an external call to an external person, or when transferring two external callers from a conference call.

Canceling a transfer

You can reconnect to the person you are trying to transfer at any time before the transfer is complete.

- 1. Press 🙋 # 7 0 or <u>CANCL</u>.
- 2. If you are not reconnected to your original call, press **n** and then press the line button of the original call, which is now on hold.

Displays

lopiayo	
221>222 CANCL RETRY JOIN	You are talking to the person you want to transfer the call to. Press <u>RETRY</u> if you decide to transfer the call to someone else. Press • or <u>JOIN</u> to transfer the call.
221 no reply CALLBACK	The person to whom you tried to transfer a call did not answer. Press <u>CALLBACK</u> or the flashing line button to reconnect to the call. On 7000 and 7100 digital phones lift the receiver.
Do not disturb CANCL RETRY JOIN	The person to whom you tried to transfer a call has Do Not Disturb active on their telephone. Press <u>JOIN</u> to transfer the call anyway. Press <u>RETRY</u> to transfer the call to someone else. Press <u>CANCL</u> or the flashing line button to reconnect to the call (on 7000 and 7100 digital phones, press \bigcirc # 7 \bigcirc).
Invalid number CANCL RETRY	You entered an invalid internal number. Press <u>RETRY</u> and enter the number again.
Line001 hun9 up	The external caller you were transferring hung up before the transfer was complete.
Line001>221 CANCL RETRY JOIN	Press <u>JOIN</u> to transfer the call on line 001 to telephone 221. Press <u>RETRY</u> if, after talking to the person at extension 221, you decide to transfer the call to someone else.
Not in service CANCL RETRY	The telephone to which you are trying to transfer a call is out of service.

Restricted call CANCL RETRY	You cannot transfer the call because of telephone or line restrictions.
Still in trnsfer CANCL RETRY	Complete the transfer in progress before you access a new feature, answer another alerting call, or select an outgoing line.
Transfer denied CANCL RETRY	 Your transfer cannot be completed for one of these reasons: All the resources needed to perform a transfer are in use. Try again later. You have tried to transfer an external call to another external party. Some restrictions apply. You cannot transfer a conference call.
Transferto:2_ CANCL RETRY	Press <u>RETRY</u> if you entered the wrong internal number or if the person to whom you are transferring the call is unavailable.

For other displays, see *Common feature displays* on page 249.

Using Camp-on

You can transfer an external call to another telephone within the system, even if all of its lines are busy.

- 1. Press @ 8 2.
- 2. Dial the number of the telephone you want to camp the call to.

Camped calls appear on a line button on the receiving telephone, if one is available. If there is no line button available, you receive a message on the display and hear Camp tones.

Each set can handle only one camped call at a time.

Displays	
221 Camp max CALLBACK	You tried to camp a call to a telephone that already has a camped call. The call has come back to you. Press the <u>CALLBACK</u> button or the line button to reconnect to the call.
	On 7000 and 7100 digital phones, just pick up the receiver.
221 DND CALLBACK	The person to whom you redirected a call has Do Not Disturb active on the telephone. The call has come back to you. Press the <u>CALLBACK</u> button or the line button to reconnect to the call. On 7000 and 7100 digital phones, just pick up the receiver.
Camp denied	You have tried to camp an internal call. You can only camp external calls.
Camp to: CANCL	Dial the number of the internal telephone to which the call is sent.
Camped: 221 CALLBACK	The telephone to which you camped a call did not answer the call. The call has come back to you. Press <u>CALLBACK</u> or the line button to reconnect to the call. On 7000 and 7100 digital phones, just pick up the receiver.
Line001 hun9 up	A call you camped has come back to you, but the caller hung up before you could reconnect.
Not in service CALLBACK	The telephone to which you have camped a call is out of service or is being used for programming. The call has come back to you. Press <u>CALLBACK</u> or the line button to reconnect to the call. On 7000 and 7100 digital phones, just pick up the receiver.
Release a call	The line that the camped call is on is in use or that line does not appear at your telephone. Release the line or release an internal line.

For other displays, see *Common feature displays* on page 249.

Parking a call

You can suspend a call so that it can be retrieved from any telephone in your system.

- 1. Press @ 7 4.
- 2. Use the Page feature (2 6 0) or press <u>PAGE</u> to announce the retrieval code displayed by your telephone.

See also *System-wide call appearance (SWCA) codes* on page 108.

Retrieving a parked call

1. Select an internal line.

On 7000 and 7100 digital phones, pick up the receiver.

2. Dial the Call Park retrieval code.

Using Call Park

When you park a call, the system assigns one of 25 codes for the retrieval of the call. These codes consist of the Call Park prefix, which may be any digit from 1 to 9, and a two-digit call number between 01 and 25. For example, if the Call Park prefix is 1, the first parked call is assigned Call Park retrieval code 101. The call park prefix is assigned during system programming. Check your *Modular ICS Programming Record* if you are unsure about what range your system uses.

The Norstar system assigns Call Park codes in sequence, from the lowest to the highest, until all the codes are used. This round-robin approach means that a greater variety of codes are used, which makes it easier for a call to reach the right person when more than one incoming call is parked. The highest call number, which is made up of the Call Park prefix followed by 25, is used only by 7000 and 7100 digital phones, analog telephones, or devices connected to the system using an analog terminal adapter (ATA) or an Analog Station Module (ASM) and Digital Mobility phones.

Your installer or customer service representative programs both the Call Park prefix and the delay before parked calls are returned to the originating telephone. External calls parked for longer than the programmed delay are returned to your telephone.



Tip - Answered Hunt Group calls are parked in the same manner as other calls. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

Call Park can be disabled by your installer or customer service representative.

Displays

Already parked	The person you were talking to has already parked your call. You cannot park the same call.
No call to park	You have attempted to use Call Park with no active call on your telephone. If the call you want to park is on hold, reconnect to it before you park it.
Invalid number	You have entered an invalid retrieval code.
No call on: 101	There was no call on the retrieval code you entered.
Park denied	You have tried to park a conference call. Split the conference and park the calls separately. The person who retrieves the calls can reconnect the conference.

Parked on: 402 PAGE	EXIT	Record the code shown. Use Page (© 6 0) or press <u>PAGE</u> to announce the
		call and its retrieval code.
Parkin9 full		All available retrieval codes are in use. Transfer the call or take a message instead.

For other displays, see *Common feature displays* on page 249.

System-wide call appearance (SWCA) codes

This feature allows a call to maintain an appearance on buttons assigned with SWCA codes to a group of users.

SWCA buttons can be assigned to memory buttons using (a) * 3 to assign the SWCA feature codes: * 5 2 1 to * 5 3 6. See *Programming a feature code onto a memory button* on page 147 for general information about setting or changing button programming for a telephone.



Code change - Software releases prior to MICs 7.0 used a SWCA range of ♥★520 to ♥★535. If the first code was previously assigned as a SWCA code, reprogram that button for the affected telephones.

SWCA codes can also be assigned when the telephone DN record is set up. Visible assignments are set up in button programming. Non-visible assignments are set up on the SWCA call groups setting under Capabilities. For the latter group, users use the actual SWCA codes to park and retrieve the calls. Since there is no visibility to the users without button assignments, users must employ the voice call or page feature to provide the call location to other users.

There are also three SWCA feature codes that provide flexibility for parking and accessing SWCA calls. These are especially useful for users with non-visible SWCA assignemtns.



Special code function note - The special search and park codes only search among SWCA settings actually assigned to the telephone from which the code is envoked. To park and retrieve calls between groups with different sets of SWCA assignments, users still need to use the voice call or page feature to notify other users about SWCA assignments that are not specifically assigned.

• (2) * 5 2 0 searches for the next available free assigned SWCA position and parks the call on that position.

SWCA positions assigned to memory buttons will be searched first. If there are no available SWCA buttons, the system searches for any available assigned nonappearance SWCA positions.

- (*) * 5 3 7 retrieves the call that has been sitting on an assigned SWCA position the longest. The system searches only on codes assigned to the telephone.
- (c) * 5 3 8 retrieves the call that has most recently been parked on an assigned SWCA position. The system searches only on codes assigned to the telephone.

Refer to the *Module ICS 7.1 Installer Guide* for information about programming SWCA features through the programming interface.



Tips - Since SWCA buttons use the park feature, check with your system administrator to ensure that park is turned on for your system before adding SWCA assignments.

A SWCA call on park that exceeds the park timeout timer is released from the SWCA button and rings again at the original telephone.

Each group telephone must either have a line appearance of the call coming in, or a free intercom button to be able to retrieve a SWCA call.

Refer to the Norstar SWCA User Card for detailed information about how the feature is used.

Using Callback

When you direct a call you have answered to another telephone, the system monitors the call to make sure it is answered. If no one answers the call within a set length of time, the system directs it back to you.

Callback generates a variety of displays. Most occur after a set delay. Some occur immediately if the telephone to which you are directing a call is out of service or otherwise unavailable. These are listed with the descriptions of the specific features such as Transfer or Camp-on.

Forwarding your calls

Forwarding your calls within the system

Use this feature to forward your calls within your system or network.

- 1. Press @ 4.
- 2. Enter the number of the internal telephone to which you want your calls forwarded.

If you are forwarding calls outside the system, ensure that you enter the appropriate line pool access code or destination code to access the external system.

You can also use Line Redirection to forward calls outside the system. Line redirection takes precedence over Call Forward. However, line redirection is not supported on the 7000 and 7100 digital phones, analog telephones, or the Digital Mobility phone.



TIP - 7316E telephones display this call forwarding

icon when a call has been forwarded: 了

Canceling Call Forward

1. Press 😰 # 4.

Using Call Forward at your telephone

When you use (2), all calls go to the destination you select, regardless of how Forward on busy and Forward no answer are programmed.



Tip - If your telephone is a member of a Hunt Group, the Call Forward all calls setting is overridden by the Hunt Group routing for Hunt Group calls. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

If the telephone to which you forwarded your calls does not have the same external lines as your telephone, the forwarded calls appear on intercom buttons.

If a call is forwarded, it does not ring at your telephone. Instead, the line indicator flashes. You can answer the call by pressing the button next to the flashing indicator. This does not cancel call forward for other calls coming in.

Tip - Beware of creating call-forward loops



If you are one of a group of people who regularly forward their calls to one another, be aware that it is possible to set up forward loops where a call is forwarded from one telephone to another in a circle, and is never answered anywhere.

Overriding Call Forward

If you call someone who has their calls forwarded to you, your call rings at that telephone even though they are forwarding their calls to you.

Changing the automatic Call Forward settings

Call forwarding occurs automatically when a call is not answered or the line is busy. These automatic options are changed in programming.

For step-by-step instructions, see *Change where a call goes when there is no answer* on page 35.

Changing Forward no answer

Forward no answer redirects unanswered calls to another telephone on your Norstar system.



Tip - If the set is a member of a Hunt Group, the Call Forward no answer feature is overridden and the Hunt Group call continues to ring until the hunt time has expired. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

Line Redirection takes precedence over Forward no answer.

For instructions for changing Forward no answer refer to *Change where a call goes when there is no answer* on page 35.

Changing the delay before a call is forwarded

You can assign the number of times that the incoming call rings at your telephone before the call is forwarded. To estimate the delay time in seconds, multiply the number of rings by six.

For step-by-step instructions, see *Change the number of times the telephone rings before it is forwarded* on page 36.

Forward on busy

Forward on busy redirects your calls to another telephone on your Norstar system when you are busy on a call, or when you have Do Not Disturb activated at your telephone. For step-bystep instructions, see *Making changes to Call Forward No Answer* on page 35.

Line Redirection takes precedence over Forward on busy. Calls that are redirected by Line Redirection are not affected by any Call Forward features or Call Forward programming.

Telephones that have Forward on busy active can receive priority calls. If you are busy on a target line call, another call to that target line is redirected to the prime telephone for that target line.



Tip - If the set is a member of a Hunt Group, the Call Forward on busy feature is overridden and the Hunt Group call continues to ring until the hunt time has expired. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

DND on Busy

When you are busy on a call and a second call comes in, your telephone rings softly to alert you to the second call. If you find this second ring distracting, you can have the system prevent a second call from disturbing you by assigning Do Not Disturb (DND) on Busy to your extension.

When DND on Busy is turned on for the telephone, internal and private network callers hear a busy tone instead of ringing when you are on the telephone. External callers are transferred to the prime set used in your system. For step-by-step instructions, see *Making Changes to Do Not Disturb on Busy* on page 38. If you use DND on Busy, the line indicator for an external incoming call flashes, but your telephone does not ring.

Forward on busy takes priority over DND on Busy.

If an external call uses a target line, the call is processed according to the programming of the target line. If the target line is busy, the caller may hear a busy tone or the call may be routed to the prime set for the target line regardless of the DND on Busy programming for the telephone.



Tip - If a telephone is a member of a Hunt Group and the telephone activates this feature, the telephone does not receive notification of incoming Hunt Group calls while on a call. The DND on busy feature overrides the Hunt Group. For more information about Hunt Groups see Programming Hunt Groups on page 165.

Call Forward and Voice Mail

If you want a voice mail system to pick up unanswered calls automatically, do either of the following:

• use the internal number of your voice mail as the destination when you program Forward no Answer and Forward on busy

Note: If the voice mail hardware is attached to another system on the private network, the forwarded number for the voice mail system will be an external number on all systems in the network, except the one to which the voice mail system is directly connected.

• make the ring delay greater than the delay used by your voice mail system, if your voice messaging system or service automatically retrieves calls

Displays

Forward denied	There are several reasons why you may get this message. For instance, you cannot forward your calls to a telephone that has been forwarded to your telephone.
Forward>221 CANCL	Your calls are being forwarded to telephone 221.
Not in service	Two or more telephones are linked in a forwarding chain, and one of them is out of service or is being used for programming.

For other displays, see *Common feature displays* on page 249.

Line Redirection

Line Redirection allows you to send your external calls to a telephone outside the office. You may choose to redirect all your external lines or only some of them.

Line Redirection takes precedence over the Call Forward feature. If both features are active on a telephone, incoming external calls on redirected lines are routed to the specified Selective Line Redirection (SLR) external destination. Incoming internal calls are forwarded to the specified Call Forward destination.

You cannot use the Line Redirection feature on 7000 or 7100 digital phones, on Digital Mobility phones, or on an analog telephone connected to an ATA.

Turning on Line Redirection

Follow these steps to turn on Line Redirection:

- 1. Press 🙆 8 4.
- 2. Select the outgoing line to be used for redirected calls.
- 3. Enter the number to which calls are redirected.

Refer to the list below for suggestions.

4. Select the lines to be redirected.

In step 3, you can enter the telephone number to which you want to redirect calls, using one of the following methods:

- Press an external autodial button.
- Enter an external telephone number (using no more than 24 digits) then press or <u>OK</u>.
- Press or <u>OK</u> if the line you have chosen as the outgoing line is a private network line that does not require you to dial digits.

If you use <u>ALL</u> to redirect all your lines, it is important that you wait until all the lines on your telephone light up before pressing \bigcirc or <u>OK</u>. If you press \bigcirc or <u>OK</u> before all the lines light up, those lines not lit are not redirected.



Tip - *The line chosen for redirecting calls on other lines can be used normally when it is not busy on a redirected call. To avoid redirection failing because the chosen line is in use, choose a line pool with several lines in it.*



Tip - The system does not check that the number you give for line redirection is a valid one. If you redirect to an invalid number, redirection fails. Using an autodial button to enter the redirection number helps avoid this possibility. An autodial button used for line redirection must be programmed to use a specific line.

Canceling Line Redirection

When you are ready to resume service, use this procedure to cancel line redirection.

- 1. Press 🙋 # 8 4.
- 2. Select the lines you no longer want to be redirected.

Allowing a telephone to redirect calls

You can use programming to determine if a telephone can use the redirect calls feature and turn it on or off.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Back four times. The display reads Allow redirect:
- 7. Press <u>CHANGE</u> to select \forall (Yes) or N (No).

Turning the redirect ring for a telephone on or off

You can program a telephone to ring briefly (200 milliseconds) when a call is redirected to one of the lines assigned to it.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Back three times. The display reads Redirect ring:
- 7. Press <u>CHANGE</u> to select \forall (Yes) or N (No).



Tip - If a telephone has redirect ring enabled, it rings briefly for redirected calls on one of its lines even if another telephone set up the line redirection.

Displays while redirecting lines

Intercom	You selected the intercom button as the facility to place the call on. Enter a line pool code or a destination code.
Line Redirection QUIT ADD REMOVE	Press or <u>REMOUE</u> to begin redirection. Press or <u>REMOUE</u> to cancel a previous redirection.

No line to use	You have one external line on your telephone, but you need a second line to perform line redirection. Redirect your external line using a line pool as the outgoing line.
Out9oin9 line	You are attempting to redirect a line and the line you have chosen is the outgoing line you have selected as a destination. You cannot redirect a line to itself. Select another line.
Pool code: QUIT	Enter a valid line pool access code.
Redir by 221 OVERRIDE	You have attempted to redirect a line, but someone else has already redirected that line. Press 💌 or <u>OUERRIDE</u> to override the previous redirection and redirect the line as you want.
Redirect denied	You can redirect calls only on individual lines.
Select line out QUIT	Select the line that is used to redirect calls out of the system.
Select line(s) QUIT ALL	Press the lines to be redirected. To undo a line selection, press it again. Press <u>ALL</u> to redirect all your lines.
Selectline(s) ALL OK	Continue to press the lines to be redirected. Press \frown or \underline{OK} when you are finished.
Unequipped line	The line you are attempting to redirect cannot be redirected because the hardware does not support redirection.

Displays while canceling redirection

Select line(s) QUIT ALL	Press the lines that are no longer to be redirected. The lines light up as you press them. Once you cancel redirection for a line you cannot restore it by pressing the line again. Press <u>ALL</u> to cancel redirection for all your lines. To end, press \bigcirc or \underline{OK} .

Select	line(s) ALL	OK

Continue to press the lines that are no longer to be redirected. Press \frown or \underline{OK} when you are finished.

For other displays, see *Common feature displays* on page 249.

How Line Redirection is different from Call Forward

Call Forward forwards all calls that arrive at a particular telephone to another telephone within the Norstar system. Line Redirection redirects only the lines you specify, no matter which telephones they appear on, to a telephone outside the Norstar system. Line Redirection takes precedence over Call Forward.

Using Line Redirection

You redirect lines at a telephone, but once redirected, the lines are redirected for the entire system.

You can redirect only lines that appear at line buttons on your telephone.

You can answer the telephone if it rings while you are in the middle of programming Line Redirection, but none of the Norstar call handling features are available until the feature times out. If you need to use a Norstar feature to process the call, quit Line Redirection programming by pressing 🐑. Do not press 📭 or you disconnect the call you are trying to process.

While you are programming Line Redirection you do not receive any indication of calls that do not actually ring at your telephone.

Be careful to avoid redirection loops. If for example, you redirect your lines to your branch office and your branch office

redirects its lines to you, you can create a redirection loop. If these calls are long distance, you end up paying charges.

In certain situations, callers may experience lower volume levels when you redirect calls to an external location.

Centralized voice mail and auto attendant

How centralized voice mail and auto attendant systems are accessed, depends on which node users are attached.

Using a centralized voice mail system

If your system is part of a network that uses just one Meridian voice mail or Norstar voice mail system, how the users access the system will depend on which node they reside.

Users with telephones attached to the same system as the voice mail system use the internal prompts (2 9 8 1) to access messages.

Users with telephones attached to any other nodes, will be prompted to enter a mailbox number, then a password and the # button at the end of the sequence. The subsequent voice prompts will be the same ones that the users encounter when they dial into a system from a remote site. As well, instead of using e to access feature codes, users use the * button (* 9 8 1), just as they would if they were dialing into their own system from a remote location.

Communicating in the office

Paging

Paging allows you to make announcements over the Norstar system using the telephone speakers, or an external loudspeaker system, if one is available.

The 7000 and 7100 digital phones and the Digital Mobility phones can be used to make page announcements, but these telephones cannot receive page announcements.

Making a page announcement

- 1. Press @ 6 0.
- 2. Choose a page type. Page types are:
 - 1 through the telephone speakers (internal page)
 - 2 through an external speaker (external page)
 - 3 both internal and external (combined page)
- 3. If necessary, choose a zone.
- 4. Make your announcement.
- 5. Press **T**.



Tip - *Instead of entering the Page feature code followed by the page type, you can enter the following shortcut codes.*

F	Page zone 0 is all zones.		
	Internal	© 6 1 and zone (0 to 6)	
	External	© 6 2 (code 2 has no zones)	
	Combined	© 6 3 and zone (0 to 6)	

Activating and deactivating the ability to page

You can allow or disallow the page feature for each telephone.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Next seven times. The display reads Paging.
- 7. Press <u>CHANGE</u> to select the setting: Y (Yes) or N (No).

Creating page zones

Each telephone can be assigned to one of six zones for receiving pages.



Tip - Hunt Group DNs cannot be included in a page zone. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show twice.
- 6. Press Next six times. The display reads Page Zone.
- 7. Press <u>CHANGE</u> to select the setting: 1, 2, 3,4, 5, 6 or None.

You can make a telephone part of a page zone only if the telephone has paging set to \forall (Yes).

A zone is any set of Norstar telephones that you want to group together for paging, regardless of their location. The maximum number of sets in a page zone is 50.

Your installer programs whether a tone sounds before a page begins, and the maximum number of seconds a page can last before it is automatically turned off.



Tip - Make sure that everyone who needs to make page announcement has a list showing which telephones are in which page zones. Enter this information into your Modular ICS 7.1 Programming Record.

Displays

Enter zone:	ALL	Enter the desired page zone number (0- 6) or press <u>ALL</u> .
Invalid zone		You have entered a page zone code that is not between 0 and 6.
Pa9e choice: SETS SPKR E	30TH	Select the type of page you want. See the list in <i>Making a page announcement</i> on page 123.
Pa9e timeout		The time allotted for paging has expired.
Paging ALL		You are making a page. The display shows the page zone you have chosen. Press 😰 or 🖚 when you are finished.
Pa9in9 busy		A page is already being made in the page zone you have requested.

For other displays, see *Common feature displays* on page 249.



Tip - You can make an announcement to one person by placing a voice call to their telephone.

Using Page with external paging equipment

When you make a page that uses external paging equipment — external page or combined page — the Long Tones feature is automatically activated for the external paging system only. This allows you to control optional equipment with the Long Tones feature.

Sending messages

The Messages feature allows you to leave a message on the display of another system telephone. The Messages feature indicates if you have any messages waiting.

The Messages feature uses a message waiting list to keep a record of your internal messages and your external voice mail messages if you subscribe to a voice message service with visual message waiting indication.

Sending a message

You can leave a message on the display of another telephone in your Norstar system.

You can send up to four messages to different telephones, including your voice message center. If your telephone is a direct-dial telephone or a central answering position (CAP), you can send up to 30 messages.

If your reply to a message is forwarded or is answered at another telephone using the Call Pickup feature, the message remains on your telephone until you cancel it or successfully contact the telephone that sent the message.

- 1. Press 😰 🕇 .
- On a telephone with a two-line display, press <u>ADD</u>.
 Note: This step is not necessary on a telephone with a one-line display.
- 3. Enter the internal number of the person to whom you want to send the message. The person's display reads Message for you.

On analog telephones connected to an Analog Station Module (ASM), the message waiting indicator is activated.



TIP - Only the designated direct-dial telephone for an analog telephone connected to the system can send messages to analog telephones by pressing 2 1. Depending on the programming setup, the analog telephone provides either a Stuttered Dial Tone or a Message Waiting Lamp to indicate messages pending.

For analog telephones connected to an ASM, the message waiting indicator remains on until the user invokes Link # 6 5. If the analog telephone has the Message Reply Enhancement feature set to Yes, the message waiting indicator is turned off automatically after the reply call is answered no matter from where the call is answered.

For more information about the Message Reply Enhancement feature, see the Norstar Modular ICS 7.1 Installer Guide.

Canceling a message you have sent

- 1. Press 😰 # 1. The display reads Cancel for:
- 2. Enter the internal number of the person to whom you sent the message.

Viewing your messages

You can receive up to four messages from different telephones, including your voice message center. A single message from your voice message center may pertain to several voice messages.

On a telephone with a one-line display

- 1. Press 😰 6 5. The display shows the first message.
- 2. Press \bigstar or # to move through your messages.

On a telephone with a two-line display

- 1. Press <u>MSG</u>. The display shows your first message.
- 2. Press <u>NEXT</u> to move through your messages.

Replying to a message

You can call the person who sent a message or your voice message center while you are viewing the message.

On a telephone with a one-line display

• Press O.

On a telephone with a two-line display

• Press <u>CALL</u>.

If you want to call your voice message center using a line other than the programmed line, exit your message list and dial the voice message center telephone number using normal dialing methods.

Replying to a message using an analog telephone

On an analog telephone connected to an Analog Station Module or an analog telephone adaptor (ATA):

Press Link * 6 5.
 The system automatically retrieves and connects the user to the oldest message sender. (The message can originate from either the designated direct-dial telephone or the internal voice mail system.)

If the analog telephone has the Message Reply Enhancement feature set to Yes, and the sender is the designated direct-dial telephone, the message waiting indicator is turned off automatically after the reply call is answered, no matter from where the call is answered.

For analog telephones connected to an ASM, using the Message Waiting Reply feature (Link * 6 5), retrieves only internal messages sent to the user.

Analog telephones connected to an ASM cannot retrieve external messages by using the Message Waiting Reply feature ($\lim k$ * 6 5). For external messages, users must call back the external voice mail center to retrieve their messages. When doing so, the message waiting indicator on the analog telephone is turned off automatically.



Tip - If there is no voice mail system installed, only the designated direct-dial telephone can send messages to an analog telephone connected to an Analog Station Module (ASM) using (a) 1. The analog telephone can in turn invoke a single digit access code to reach the designated direct-dial telephone and retrieve messages.



Tip - If the designated direct-dial telephone of an analog telephone connected to an Analog Station Module (ASM) is changed, messages sent by the previous designated direct-dial telephone are kept in the incoming message list of the analog telephone until they are retrieved.

Removing items from your message list

You can erase a message while you are viewing it in your message list. If the message is from your voice message center, this only erases the message notification at your telephone. You need to erase the voice message at your voice message center. Refer to your voice message center documentation.

On a telephone with a one-line display

• Press 💽.

On a telephone with a two-line display

Press **ERASE**.

Removing items from your message list using an analog telephone connected to an ASM

To remove both internal and external messages on an analog telephone connected to an Analog Station Module

• Press Link # 6 5 to invoke the Cancel Message Waiting feature.

On analog telephones connected to an ASM, the Cancel Message Waiting feature cancels the oldest message received. The system no longer provides either a Stuttered Dial Tone or a Message Waiting Lamp if there are no messages pending.

Viewing messages you have sent

On a telephone with a two-line display, you can view the messages you have sent.

- 1. Press 😰 1.
- 2. Press <u>SHOW</u> to display your first sent message.
- 3. Press <u>NEXT</u> to move through your sent messages.


Displays

Cancel denied	You have entered an invalid number when attempting to cancel a message.
Cleared>LINENAM NEXT	You have cleared an external message from your message waiting list. The message itself exists in your voice message center until you erase it there.
In use: 221	You are trying to call from your message waiting list. The line that you want to use is being used by the identified Norstar user.
L001:LINENAMVMs9 NEXT CALL CLEAR	You are viewing your message list. The display shows the number and name of the line that was used for your voice mail message.
Messa9e denied	You have tried to send a message to an invalid internal number or to a telephone that is out of service.
Messa9e list SHOW ADD EXIT	<u>SHOW</u> appears only if you have outstanding messages. Press <u>SHOW</u> to review messages you have sent. Press <u>ADD</u> to send a new message.
Messa9e to:	Enter the internal number of the telephone to which you want to send a message.
Messa9es & Calls MSG CALLS	You have one or more messages and one or more new Call Logs. Press (2) 8 0 6 to change the first line of the display to the current time and date.

No button free	You have no line button free with which to reply to a message.
No number stored	There has been no number programmed for the voice message center. Contact your voice messaging service provider.
Start of list NEXT	You are at the beginning of your list of messages. Press <u>NEXT</u> to move through your messages.
Their list full	You are trying to send a message to a user whose message waiting list is full.
Your list full	You have tried to send a message but list of sent messages on your set is full. Cancel one of the messages you have sent, if possible, or wait until you have received a reply to one of those messages.

For other displays, see *Common feature displays* on page 249.

Using Voice Call



Use this feature to make an announcement or begin a conversation through the speaker of another telephone in the system.



Tip - Hunt Groups cannot accept voice calls. Answer buttons have no appearances for voice calls, and the telephone does not ring for voice calls. For more information about Hunt Groups, see Programming Hunt Groups on page 165. For more information about Answer buttons, see Answer DNs and Answer keys on page 60.

Muting Voice Call tones

When a voice call begins at your telephone, you hear a beep every 15 seconds as a reminder that the microphone is on. To stop it from beeping, pick up the receiver or press the mute button.

Answering a Voice Call with handsfree

If handsfree answerback is assigned to your telephone, you can respond to a voice call without touching the telephone.

Handsfree answerback is not available to the 7000 and 7100 digital phones, analog telephones, or the Digital Mobility phones. On these telephones, all voice calls are received as ringing calls.

When someone makes a voice call to you, simply start talking. Your telephone microphone picks up your voice.

Once you have answered a voice call, you can put it on hold, transfer it, or otherwise treat it as a normal call.

Blocking Voice Calls using Voice Call Deny



Use this feature to prevent voice calls to your set. The result is that Voice calls ring like regular internal calls. Your other calls proceed normally.

Canceling Voice Call Deny

Press	Ø	#	8	8	•
-------	---	---	---	---	---

Displays

Dial voice call	Dial the internal number or press the internal autodial button of the person to whom you want to speak.	
Microphone muted	Your handsfree microphone is muted. Press the mute button or pick up your receiver to respond to the voice call.	
Voice call	The line is open for you to speak.	
No voice call	The telephone receiving the call cannot accept voice calls for one of the following reasons:	
	 it is active or ringing with another call Call Forward is turned on Do Not Disturb is turned on Voice Call Deny is turned on it is not a Norstar telephone. 	

Your call proceeds automatically as a regular ringing call.

Using Call Log

Telephones can be programmed to automatically log Call Display information for calls on an external line. The line must appear on that telephone but it does not have to be a ringing line.

Alternatively, telephones can be programmed to log all calls coming into a telephone. This includes calls arriving on an Answer DN or through Call Forward. This option fills up the log space quickly, so it is recommended that you have autobumping activated on the telephone. Refer to *Enabling and disabling autobumping* on page 139.

The system administrator determines which type of logging the system will use, and which telephones will log calls or which lines on specific telephones log calls.



WARNING: If the method of call log programming is changed on a configured system, all existing logs will be deleted.

If your system is equipped with the appropriate equipment, and you have subscribed to the call information feature supplied by your service provider, you are able to capture information about incoming callers in your call log. The same feature is supplied by an ISDN service package that comes with calling line identification (CLID). For each call, the call log record can contain:

- sequence number in the Call Log
- name and number of the caller
- indication if the call was long distance
- indication if the call was answered, and identify who answered it
- time and date of the call
- number of repeated calls from the same source
- name of the line that the call came in on

Call Log can help you to

- keep track of abandoned or unanswered calls
- track patterns for your callers, for example, volume of calls and geographical location of calls
- record caller information quickly and accurately
- build a personal telephone directory from log items

The long distance indicator and the name and number of the call may not be shown in the log. This information depends on the Call Display services provided by your local telephone company and the local telephone company of the caller.


To use the features on the following pages, your telephone must have spaces available in its Call log. Your installer or customer service representative programs each telephone with an appropriate number of spaces.

Call Log options

With this feature, you can select the type of calls to be stored in your Call Log. Choose from four Autolog options: No one answered, Unanswerd by me, Log all calls, No autologging.

- 1. Press ♥ ★ 8 4. The display shows the current option.
- 2. Press # or <u>NEXT</u> to change the option.
- 3. Press \bigcirc or \bigcirc to select the display option.

Logging a call manually



If your calls are not automatically logged, you can manually log call information when you are connected to an external call. Storing information for your current call can be helpful in many situations.

For example, you may want to

- record caller information without using paper and pencil
- record only selected calls of your choice, rather than relying on the automatic Call Log
- quickly record caller information before a caller hangs up

Enabling and disabling autobumping

Your log has a set number of items that it can hold. When it becomes full, new calls cannot be logged. When your log is full, Autobumping automatically deletes the oldest Call Log item when a new call is logged.

Press 🕑 8 1 5 to enable autobumping.

Press 🔊 # 8 1 5 to disable autobumping.

Viewing your Call Log

To view your log:

- 1. Press 😰 8 1 2. The display shows the number or previously read items (old) and the number of new, unread items (new) in the log.
- Press ★ or <u>OLD</u> to view old items.
 Press # or <u>NEW</u> to view new items.
 Press O or <u>RESUME</u> to display the last item you viewed, the last time you viewed your Call Log.

Names and numbers for external callers are displayed only if you have subscribed to Call Display services from your local telephone company.

Viewing a Call Log item

Press • or <u>MORE</u> to view the information for a call log item.

Erasing log items

You should routinely erase log items to make space for new items in your log.

- 1. Display the item you want to erase.
- 2. Press \frown or <u>ERASE</u>.
- 3. Press **r** to exit.

If you accidentally erase an item, you can retrieve it.

- 1. Press or <u>UNDO</u> immediately.
- 2. Press **r** to exit.

Making a call using Call Log

You may find it helpful to place calls from within your Call Log. The number stored for each call may vary, depending on the type of call. For example, if the call was placed from a Centrex or PBX system, the first few numbers may need to be trimmed before you can make the call. If the number you want to call is long distance, or if you want to use a line pool, you may need to add numbers.

To place a call from a call log:

- 1. Display the log item for the call you want to place.
- 2. Display the associated telephone number.
- 3. Press or TRIM, once for every digit that you want to remove.
- 4. Dial any extra digits required.
- 5. Press an external line or line pool button.
- 6. Lift the receiver. (This is not necessary if handsfree is programmed at your telephone.) The displayed number is dialed.

Creating a password to your Call Log

To access your Call Log through a password:

- 1. Press ♥ ★ 8 5. The displays reads New Passwrdt.
- 2. Enter your four-digit password. The display reads Repeat New:
- 3. Re-enter your four-digit password. The display reads Password changed, which confirms that your password has been assigned.

To enter Call Log using your password:

- 1. Press 🔊 8 1 2 to enter Call Log. If you have programmed a password, the display reads Password:
- 2. Enter your four-digit password.

If you forget your Call Log password, it can be deleted in programming. See *Using passwords* on page 217.

Changing your Call Log password

Use this procedure when you want to change the Call Log password for your telephone.

- 1. Press (♥) ★ 8 5. The display reads 01d passwrd:
- 2. Enter your old password. The display reads New Passwrd:
- 3. Enter your new four-digit password. The display reads Repeat New:
- 4. Re-enter your password. The display reads Password changed, which confirms that your password has been changed.

Deleting an assigned password

Use this procedure when you want to delete an assigned password.

- 1. Press ♥ ★ 8 5. The display reads 01d passwrd:
- 2. Enter your old password.
- 3. The display reads New Passwrd:
- 4. Press \frown or \underline{OK} .

The display reads No pswd assigned, which confirms that your password has been deleted.

Displays

1:Unknown name	The caller name is unavailable.
1:Unknown number	The caller number is unavailable.
<u>12</u> :KATE SMITH NEXT ERASE MORE	_ indicates a new item.
12)KATE SMITH NEXT ERASE MORE	I indicates that the call was answered.
125KATE SMITH NEXT ERASE MORE	5 indicates a long distance call.
49/1234567890123 NEXT ERASE MORE	 indicates that the stored number has been shortened to its final 11 digits. Press
Call(s) bumped	One or more log entries have been deleted by the Autobumping feature while you are looking at the Call Log.
Hold or release	Hold or release your active call before entering Call Log.
In use: SETNAME	The external line is in use.
Jan 4 9:00a 3X NEXT ERASE MORE	The repeat call counter, shown along with time and date, indicates the number of calls you received from the same caller.
Line001) 227 NEXT ERASE MORE	This call was answered at another telephone (227).
Line001) Logit NEXT ERASE MORE	This call was logged manually.
Line001 NEXT ERASE MORE	This call was not answered.

Messa9es & Calls MSG CALLS	There are one or more items in your message waiting list, and there are one or more new items in your Call Log. Press © 8 0 6 to change the first line of the display to the current time and date.
New calls be9in	You have viewed your last old log item and now view your new log items.
No info to log	No information is available for the call.
No lo9 assi9ned	No log space has been assigned to the telephone.
No resume item	The resume item has been removed because of Autobumping, repeat call update, or log reallocation while you are looking at the Call Log.

For other displays, see Common feature displays on page 249.

Using external Voice mail

If you subscribe to a voice message service outside your office, you can access that service through your Norstar system. Your installer or customer service representative programs your Norstar telephone to indicate when you have a voice message waiting on a particular line.

To find out if your external voice message service works with Norstar, or if you have any problems with your service, contact your voice message service provider.

Customizing your telephone

Finding out what a button does using Button Inquiry

Ø ¥ 0

You can use this feature to check the function of any line, intercom, or programmed button on your telephone.

On the 7000 and 7100 digital phones, Button Inquiry shows the internal number of the telephone, followed by the function assigned to the memory button.

On Digital Mobility phones, this command displays the internal number of the telephone.

Displays

001 <linename> SHOW OK</linename>	The display shows the number and name of the line. Press <u>SHOW</u> to view the redirection status of the line.
123456789012345 VIEW→ OK	Press $\#$ or press <u>UIEW</u> or <u>+UIEW</u> to view a number that is too long to fit on the display. Press \frown or <u>OK</u> when you are done.
221 <setname> NEXT VIEW→</setname>	The display shows the directory number of the telephone, and the assigned name. Press <u>NEXT</u> to see the first line assigned to ring at the intercom button.
<feature name=""> SHOW OK</feature>	The name of the feature assigned to a button is displayed when you press the button. Press # or <u>SHOW</u> for additional information.
Press a button EXIT	Press the button you want to check. Press Or EXIT when you are finished.

For other displays, see Common feature displays on page 249.

Changing the set display contrast

Use this feature to adjust the contrast of system digital telephones.

- 1. Press \bigstar \bigstar $\fbox{}$ 7.
- 2. Press a number on the dialpad to choose the contrast level you prefer.

On a two-line telephone, you can use the <u>UP</u> and <u>DOWN</u> display buttons to adjust the contrast. The number of contrast levels available varies from one telephone model to another.

Changing the language on the display

You can select the language used on the display of each set. The languages supported depends on which Profile was installed on your system at Startup.

English is the default first language.

Refer to the *Modular ICS 7.1 Installer Guide* for a list of languages supported by each profile. Check the programming guide to determine which Profile was assigned to your system.

You can program $\textcircled{e} \times 5 \ 0 \ 1$, the first language code, on to a memory button. If you want subsequent languages to display, you can keep pressing the button until the language code you want appears on the display.

You cannot program 🔄 ¥ 5 0 2 or 🔄 ¥ 5 0 3	3
onto a memory button.	

Programming a feature code onto a memory button

You can program a feature code onto a memory button. In some cases, pressing the button a second time cancels the feature.

Programming feature buttons

Any memory button not programmed as an external or internal line, target line, Answer button, or handsfree/mute button, is available for features.

- 1. Press 𝔄 ¥ 3.
- 2. Press the memory button you want to program with a feature.
- 3. Enter the appropriate feature code you want to assign onto the button.

The following feature codes cannot be programmed onto a memory button: Long Tones and any code beginning with * except 2 * 5 0 1 (Language Choice) and 2 * 7 (Contrast Adjustment).



Tip - When you program a button with the line pool feature code, you must enter a line pool access code after the feature code. The programmed line pool button accesses a specific line pool, not the line pool feature.

Erasing a feature button

- 1. Press ♥ ★ 1.
- 2. Press the feature button.
- 3. Press \bigcirc or $\bigcirc K$ to erase the button.

Displays	
<feature name=""> SHOW OK</feature>	The name of the feature assigned to a button is displayed when you press the button. <u>SHOW</u> appears when there is more information available. Press $\#$ or <u>SHOW</u> for additional information.
Enter code:	If you are checking a speed dial button, enter the three-digit speed dial code that you want to check.
F QUIT CLEAR	Enter the feature code, or press • or <u>QUIT</u> to quit programming or <u>CLEAR</u> to clear the numbers you have entered. The system accepts the entry as soon as you enter a valid feature code.
Feature code: QUIT	Press c and enter the feature code you want to assign to the button. You cannot enter invalid codes.
Feature moved	You programmed a button with a feature that was already programmed onto another button. The feature has moved to the button you just programmed. Its original button is now blank.
Press a button EXIT	Press the button you want to check. Press Image: style="text-align: center;">Image: style:
Pro9ram and HOLD	Enter the number you want to program and press . To erase the button, just press .
Pro9ram and OK QUIT OK	Enter the number you want to program and press \underline{OK} . To erase the button, just press \bigcirc or \underline{OK} .

For other displays, see *Common feature displays* on page 249.

Labeling your set

The Digital phones have label strips that come with each telephone. You can print the label for each button on your telephone and install the strip beside the buttons. This section suggests the process for setting up the labelling for your set.


Applying button labelling

Before you apply button labels, use the Button Inquiry feature (()) to verify the button functions. For more information refer to *Finding out what a button does using Button Inquiry* on page 145.

Digital phones

The Digital phones telephones are labelled beside the buttons. You can use the Desktop Assistant utility to make changes and print a new label card. Your system administrator can access this application from the system CD or it can be downloaded from <u>www.nortelnetworks.com</u>.

7316 digital phone button label locations

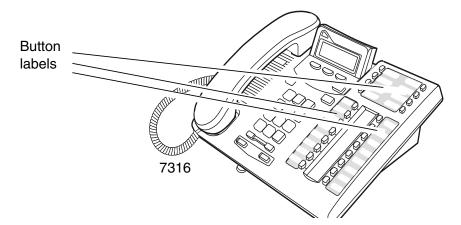

Default button assignments

During Startup, the Norstar installer chooses one of the available templates. Default features are assigned automatically to the programmable buttons on installed sets. These defaults vary depending on the template you choose, and the style of telephone. The Programming Record also contains a list of default settings.

The default features are listed below.




Tips - *Please consult your customer service representative to determine the type of template programmed into your system. Not all templates are available in all software loads.*

7316E button defaults

Refer to your Programming Records to identify the current button programming for each telephone or group of telephones.

7316E

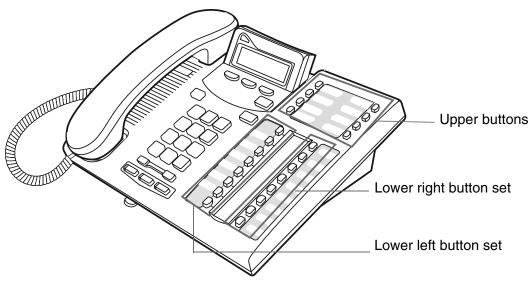

Line numbering starts on button 09 (default line assignments occur for DID, Hybrid and Square templates).

7316E digital phone upper buttons

Uppe	Upper left buttons						
PBX	PBX DID Hybrid Square Centrex						
	Contrast						
	Show time				02		
(bla	(blank) Privacy (blank)				03		
(blank)				04			

Uppe	Upper right buttons						
Btn #	PBX	DID	DID Hybrid Square Centrex				
05	(blank) Saved No.				0.		
06	(blank)	Sys Park					
07	Send Msg.						
08	Speed dial						

7316E digital phone lower buttons

			Lov	wer left butt	ons	-		ver right tons
PBX	DID	Hybrid	Square	Centrex	B	ßtn	#	All templates
Sys Park		Line <>	(XX>	(blank)	09		17	Call Timer
Saved	No.	Line Pool	Line <xxx></xxx>	Call Fwrd	10		18	Ring Again
	Ca	all Forward		Pickup	11		19	DND
Pickup			Page	12		20	Conf/Trans	
Page		Transfer	13		21	Last No.		
Transfer			Time/Date	14	1	22	Voice Call	
Time/Date			Leave msg	15	1	23	Intercom	
Receive msg			Flash	16		24	Intercom	

Note that this telephone has a separate handsfree button under the dial pad, therefore, the intercom buttons start on the first button at the bottom of the lower, right column of memory buttons. Also note that the current incoming call on this telephone defaults to the voice path last used. For example, if you answered the previous call using your headset, the next call will come in over your headset.


Upgrade programming note:

The 7316E digital phone uses 7316 programming when connected to systems running software prior to MICS 6.1. When those systems are upgraded to MICS 6.1 or newer software, the telephone converts to 7316E programming, which means that all assigned memory buttons are erased. As well, the line assignments, Answer DN assignments, and intercom buttons change to the 7316E default positions. Refer to the default assignments for both telephones.

7316 digital phone button defaults

The default button assignments for the 7316 digital phone depend on the template applied.

Note the button numbering for some of buttons of this telephone are not consecutive. This is because the buttons are mapped to a legacy telephone that had a second level of memory buttons on the top pad. However, since there is no second level to the memory buttons on the 7316, the button numbers only reflect the lower level. In Button programming, however, the absent button numbers appear, but they are not valid programming for this telephone.

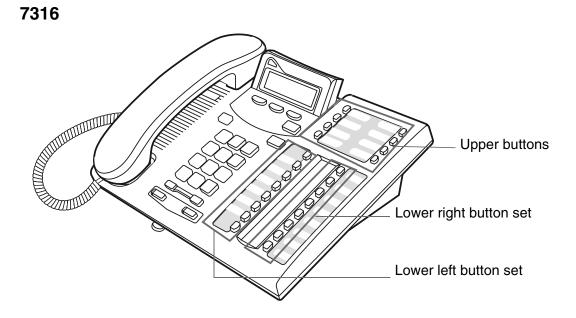

These examples show defaults for a system with three-digit internal numbers. The defaults do not actually exist on any telephone, as no telephone has an autodial button for itself. The position that would be taken by the autodial button for itself is blank.

7316 digital phone upper buttons (all templates)


Btn #	Left buttons	Btn #	Right buttons
23	Set: 227	31	Set: 231
25	Set: 228	33	Set: 232
27	Set: 229	24	Set: 239
29	Set: 230	26	Set: 240

7316 digital phone lower buttons

	Lower left						Low	er right
PBX	DID	Square	Hybrid	Centrex	E	Btn	#	
Set: 221					11		17	Set: 224
Set: 222				13		19	Set: 225	
	Set: 223				15		21	Set 226
DND	ND Line <xxx></xxx>				01		06	Conf/Trans
Trar	nsfer	Line <xxx></xxx>	Line Pool	Transfer	02		07	Last No.
Call Fwd					03		08	Voice Call
Pickup					04		09	Intercom
		Page		Link	05		10	Intercom


7208 button defaults

The default button assignments for the 7208 digital phones are the same, depending on which template was applied.

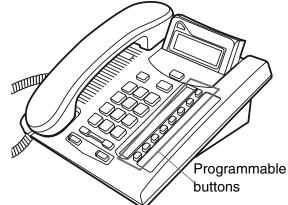

7208 button defaults

Btn. #	PBX	DID Square Hybrid			Centrex			
01	Pick up		Line <xxx></xxx>					
02	Tran	sfer	Line pool	Transfer				
03								
04		Page						
05	Conf/Trans							
06	Speed dial							
07	Intercom							
08		Intercom						



7100 digital phone button defaults

For all templates, the one programmable button on the 7100 digital phones is defaulted to Last Number redial.

Rules of default button assignment

- Line and intercom buttons are assigned by default templates and can be changed in programming.
- Handsfree and answer DN buttons are not assigned by default. If these features are defined, they are automatically assigned to specific buttons, starting with the bottom, right column.
- The handsfree/mute feature appears on the bottom righthand button on the legacy Norstar telephones, if the feature can be used by the telephones. When handsfree is assigned, the intercom button(s) move up one position. The 7208, 7316 and 7316E have a separate mute button, which is located under the numeric dialpad, beneath the volume rocker button. The 7316E digital phone also has a separate handsfree button, located beside the mute button. However, this button only works if the telephone is connected to a system that is running MICS 6.1 or newer software.
- Each telephone can have up to eight answer DN buttons. They are assigned to buttons above assigned intercom buttons, continuing up the button column, replacing the features on those buttons. On the 7208 digital phones, answer DN buttons appear above the intercom buttons and below external line buttons, in a single column. On the 7000 and 7100 digital phones and the Digital Mobility phones, answer DNs do not have line appearances, so they must be set to ring-only.
- External line buttons appear starting at the top button in the left column, moving down the row of buttons. Telephones with two rows of memory buttons allow line assignments to continue from the top of the right column of buttons when the left column of buttons are all assigned. Line buttons have priority over feature access buttons but cannot replace handsfree, intercom, or answer DN buttons.

The 7316 starts lines at button 01, which is the fourth button down, on the left side of the lower button set. The 7316E starts line numbering at button 09, which is the left top corner of the lower button set. Refer to the default charts for specific button placement for the telephones.

Moving line buttons

You can move external lines, hunt group appearances, and target line appearances to different buttons on your telephone, to arrange your lines in the way that makes the most sense to you. If you have an eCAP, you cannot move intercom or Answer DN assignments onto the module, but you can move your lines and Hunt group appearances over to the modules. If you have a 7316E+eKIM eCAP, you can move lines, target line appearances, and hunt group appearances over to the KIM.

Note: The 7000 and 7100 digital phones and Digital Mobility phones do not have buttons with indicators, therefore this feature is not valid for those telephones.

- 1. Press ② ¥ 8 1.
- 2. Press the button you want to move the line from.
- 3. Press the button you want to move the line to.

Displays

Exchan9ed	The two buttons you selected have exchanged position.
Invalid location	You have tried to move a line to a button that cannot be used as a line button, such as an intercom button, handsfree/mute button, or an answer button.

Move line from: QUIT	Press the button of the line you want to move. Press 😰 or <u>QUIT</u> when you have finished moving lines.
Move line to: QUIT	Press the button you want to move the line to. Neither of the buttons is erased. The lines, or the line and feature, simply switch places.
Press a line	The button you are trying to move is not a line button. If you are trying to switch a line and a feature, move the line to the feature button and not the feature button to the line.

Changing the type of ring

You can choose one of four distinctive rings for your telephone. This makes it easier to identify your telephone in an open office.

- 1. Press ♥ ★ 6.
- 2. Press 1, 2, 3, 4, or <u>NEXT</u>. You hear the selected ring for two seconds.
- 3. Repeat until you hear the ring you prefer, then press \bigcirc or $\bigcirc K$.



TIP - *The Digital Mobility phone has access to a number of ring patterns, but these are controlled by the handset. This setting does not affect the handset.*

Adjusting the Ring volume

Use this feature to adjust the ring volume.

- 1. Press 2 3 $\rule{3}{1}$ $\rule{3}{1} \\ \rule{3}{1} \\ \rule{3}{1}$
- 2. Press to adjust the volume; left end for lower and right end for higher.



TIP - *The Digital Mobility phone has a volume adjustment, but it is controlled by the handset. This setting does not affect the handset.*

Hiding the message or calls indication

The display that shows you have messages or calls can be replaced with the current time and date. You can retrieve your message and call information by using the display buttons that appear on the second line of the display. If you are using a telephone with a single-line display, the message or call indication is hidden.

- 1. Press 🔄 8 0 6. The current time and date appears on the top line of the display.
- 2. Press <u>MSG</u> or <u></u>© 6 5 to see your messages, or press <u>CALLS</u> or <u></u>© 8 1 2 to see your calls.

Restoring the messages and calls indication

Press 😰 # 8 0 6.

User Preferences

The User Preferences section of programming allows you to program memory buttons, speed dial codes and other settings for any system digital telephone.

For example, an employee may want to have the Do Not Disturb feature programmed onto a memory button or create a speed dial code. Instead of programming from the each specific set, you can go into programming on the telephone nearest you to make the change.

Using User Preferences

- 1. Press $\mathfrak{E} \times \mathfrak{V}$ SER ($\mathfrak{E} \times \mathfrak{K}$ 8737).
- Enter the Basic password (the default passwords is
 2 2 7 4 2). (Note: You can also use the Coordinator password to change User preferences.

By using a Basic password, it is possible to have someone else do day-to-day upkeep of the telephone programming without giving out access to sensitive programming. See *Using passwords* on page 217.

After you enter the proper password, the display shows you the telephone with the lowest internal number followed by its name (For example, 221:Reception).

- 1. Press Next to move through all the telephones on the system.
- 2. Press Show when you see the telephone you want to change. The display reads the model number of the telephone at the extension.

The display shows **Connect set** if no telephone is connected at that internal number.

- You cannot make changes if the model is Other.
- 3. Press Next to move through all the subheadings in User Preferences.

User Preferences programming is available under the heading Terminals&Sets.

Changing button programming

- Press Show at Button proming. The display shows the number of buttons on the telephone. An example is shown in Displays at the end of this section. If the telephone has a KIM module, you can press <u>KIM1</u> to see the buttons on the module.
- 2. Press Next to move through all the buttons on the telephone. Refer to *Default button assignments* on page 150 for button number mapping for each type telephone.
- 3. Use the display buttons to change the programming for a button.

The display buttons used in button programming.

<u>CANCL</u>	Moves you out of a setting without making any changes to it.
<u>CLR</u>	Erases the button.
<u>TEL#</u>	Programs the button as an autodial number for an internal or an external number. If it is an external autodial number, you must choose a line, line pool, or the routing table for the call to use.
<u>Change</u>	Used when you are setting up an external autodial number. Press <u>CHANGE</u> until you see the type of line or pool you want the number to use.
<u>Featr</u>	Press to store a feature code on the button.

- **FIND** Locates a specific button on a telephone by entering its number. Button numbers are shown in the illustrations.
- **LIST** Takes you to a list of feature codes. Press Next to move through the list and press <u>OK</u> when you see the feature you want to program on the button.

Note: User Preferences programming cannot change the buttons that are used by lines, intercom, and the handsfree feature, which are assigned by the system administrator. Refer to the *Modular ICS 7.1 Installer Guide* for details.

Changing User Speed Dial

- 1. Press Show at User Speed Dial. The display shows the number of speed dial codes that are available.
- 2. Press Next to see the first speed dial code (256).
- 3. Press Next to move through all the speed dial codes.
- 4. Press Show to find the code you want to change.
- 5. Press <u>CHANGE</u> and enter the telephone number the same way you would dial it on the telephone.
- 6. Press <u>OK</u>.
- 7. Press Next and choose the line (or enter a code for a line pool) the speed dial code should use.

Use the line pool code to select a particular line pool for use with Speed Dial. If you select Use rout ing tb1, a line or pool is chosen by the routing programming according to the initial digits in the number.

The route you choose for a User Speed Dial code must be one that the telephone can use. For example, if the telephone does not have access to Line Pool B and you use that pool code with the speed dial code, the code does not work. Lines and line pools are assigned to the telephones by the system administrator. Refer to the *Modular ICS 7.1 Installer Guide* for details.

To change a system speed dial code, see *Adding or changing a system speed dial* on page 29.

Changing Call Log options

- 1. Press Show at Call log opt'ns....
- 2. Press <u>CHANGE</u> until you see the option you want to use. See *Call Log options* on page 139.

Changing how calls are dialed

- 1. Press Show at Dialing opt'ns....
- 2. Press <u>CHANGE</u> until you see the option you want to use.

Descriptions for dialing options are found on the *Telephone Feature Card*, or see *Changing how you dial your calls* on page 80.

Changing the language used on the display

Press <u>CHANGE</u> at Language: until you see the language you want to use. See *Changing the language on the display* on page 146.

Making the display lighter or darker

Press <u>CHANGE</u> at Display cntrst until you see the value you want to use.

The display contrast on the telephone you are using for the programming session does not change when you are programming another telephone.

Changing the ring type

At Ring type:, press <u>CHANGE</u> until you see the option you want to use.

Descriptions for ringing options are found on the *Telephone Feature Card* or in *Changing the type of ring* on page 157.

Displays

10+24 buttons FIND	There are 10 memory buttons and 12 dual memory buttons on the telephone you are viewing. Press $Next$ to begin looking at what is on each button.
B01:L06:Line 001 FIND	A line appears on the button. You cannot store a feature or number on it.
B02:#Reply Msg CLR TEL# FEATR	A feature is stored on this button. Press Show to see the feature code. A full list of names and codes for features is included in the index.
Code:F#65 CLR TEL# FEATR	Shows the feature code stored on a button. Press Show to see the button number and feature name.
B03:160455512 CLR TEL# FEATR	The button has a telephone number stored on it. Press Show to see the rest of the number.
Externl tel # CLR TEL # FEATR	The autodial is an external number. Press Show to see what line or pool the call is programmed to go out on.
Internl tel # CLR TEL # FEATR	The autodial is an internal number. Press Show to see more information.
B04:Intercom FIND	The button is used for intercom. Press Show to see more information about the button. You cannot store a feature or number on it.
B05 : Ansr 93 FIND	The button is used for an Answer DN. You cannot store a feature or number on it.

B06:Blank button CLR TEL# FEATR	Either nothing is stored on the button or you have just cleared the button by pressing <u>CLR</u> .
B10:Handsfree FIND	The button is occupied by the handsfree feature. You cannot store a feature or
	number on it.

For other displays, see *Common feature displays* on page 249.

Programming Hunt Groups

The Hunt Groups feature allows a group of system telephones to be called by a single directory number ensuring that calls are easily routed to the appropriate group.

The Incoming Line Group (ILG) functionality is now accomplished through the Hunt Group feature. When upgrading from a pre-Modular ICS 4.0 system to a Modular ICS 7.1 system, any lines previously belonging to an ILG are not automatically converted to broadcast Hunt Groups. You must go in and program them to the new feature. Please refer to *Assigning or unassigning lines to a group* on page 169.

Hunt Groups are used in situations where a group of people performing the same task are required to answer a number of related phone queries. Some typical uses of Hunt Groups are:

- a sales department answering questions on product prices or availability
- a support department answering questions concerning the operation of a product
- an emergency department answering calls for help.

Hunt Groups can be used to route calls to a support service such as a Help Line for a software company. Specialists dealing with Product A can be in one group, and specialists dealing with Product B can be in another group. Incoming calls hunt for the next available telephone in the group. If no telephone is available, the call can be placed in a queue or routed to telephone designated as the overflow set. The Hunt Groups subheading in system programming is the area where programming changes are made to the following:

- members of a group
- member position in a group
- what lines are assigned to a group
- how incoming calls are distributed
- how long the system looks for available members
- where a call goes if all members are busy

Note: Videophones should not be programmed as members of a Hunt Group. Hunt Groups allow one B channel connection at a time and videophones use two B channels.

Features affected by Hunt Groups include:

- Call Forward All Calls
- Call Forward No Answer
- Call Forward on Busy
- Group Pickup
- Transfer via Hold
- Priority Call
- Line Redirection
- Page Zones
- Voice Call

Adding or removing members from a group

A DN for a telephone can be associated as a member of a Hunt Group, and is called a member DN.

Members of the group can be any Norstar or Business Series Terminal telephone, ISDN terminal, or portables. A telephone can be in more than one Hunt Group but is considered a member in each Hunt Group, increasing the total number of members in the system.

There can be only one appearance of the Hunt Group on a telephone, no matter how many lines are assigned to the group.

Hunt Group DNs cannot be members of other Hunt Groups.

Consult your customer service representative to determine your Hunt Group number range.

- 1. Place the appropriate programming overlay on your programming set.
- 2. Press 🔊 ¥ ¥ 2 6 6 3 4 4 (CONFIG). The display shows Password:
- 3. Press 2 3 6 4 6 (ADMIN). The display shows Terminals&Sets.
- 4. The display shows Terminals&Sets.
- 5. Press Next until the display shows System proming.
- 6. Press Show . The display shows Hunt groups.
- 7. Press Show . The display shows Show group.
- 8. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.

- 9. Press Show . The display shows Member DNs.
- 10. Press Show . The display shows the first group member, if there are members.
- 11. Press <u>ADD</u> and enter a telephone DN to add a member to the group. Press <u>REMOUE</u> to remove a member from the group. Press <u>Next</u> to move through the list.
- 12. Press **•** to exit or Next to continue programming.

Moving members of a group

Member order within a Hunt Group is important. The member order determines how a call is routed through a Hunt Group.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Show . The display shows the members for that group.
- 5. Press <u>MOUE</u> to move an existing member to another place within the Hunt Group. The display shows the member number followed by an arrow.
- 6. Enter the new position number for the extension.
- 7. Press **r** to exit.

Assigning or unassigning lines to a group

You can assign one or several lines to a hunt group.

Hunt group line notes:

- Configure the prime set for a Hunt Group line to None to avoid delayed ring transfer of external Hunt Group calls to the prime set before the Hunt Group can receive the call.
- A line can be assigned to only one group.
- Do not assign any hunt group lines to individual telephones. If any of the telephones that are part of the hunt group have the line assigned, remove the line from the telephone before assigning it to the hunt group.
- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next . The display shows Line assignment.
- 5. Press Show . The display shows Show line:
- 6. Enter the line number you want to program or press <u>SCAN</u> to go to the first line assigned to this group, or press <u>LIST</u> to go to the first line in the system.
- 7. Press <u>CHANGE</u> to program the line as Unassigned or
 Assigned.
 HGnn means the line is assigned to another Hunt Group.
- 8. Press **•** to exit or Next to continue programming.

Setting the distribution mode

There are three modes of call distribution:

- **Broadcast**—rings each telephone in the group simultaneously. Calls are handled one at a time, while succeeding calls are queued. As soon as a call is picked up, the call next in the queue is presented immediately to the group.
- In Broadcast mode, a single incoming call rings simultaneously at all the telephones in a group. This way, all receptionists in the group can share the load of answering large volumes of calls. All telephones automatically display the calling line identification (CLID), if available. A familiar example is a fund-raising campaign where a group of operators are waiting to take each call as it comes in.
- Sequential—starts the call at the first telephone in the Hunt Group. Distribution is complete when the first idle telephone is found. Simultaneous calls can be presented. Distribution is order based.
- In Sequential mode, you can program your top salesperson to be the first member of the group to receive calls.
- **Rotary**—the call starts at the telephone after the one which answered the last call. Distribution is complete when the next idle telephone has been found. Simultaneous calls can be presented. Distribution is order based.
- In Rotary mode, you can ensure that all your helpline people are receiving calls on an equal basis, rather than one person receiving the majority of calls. The call rings at one set at a time in a round robin fashion.

If a Hunt Group has available members but nobody answers the call, the call is rerouted through the list until someone answers the call. If all lines are busy, the call is routed according to whatever has been set for the busy line setting. Refer to 'Programming busy line setting' on page 172.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next until the display shows Mode.
- 5. Press <u>CHANGE</u> to set the mode: Broadcast, Sequential, Rotary.
- 6. Press **T** to exit or <u>Next</u> to continue programming.

Setting the hunt delay

This setting allows you to program the number of rings the system permits at a Hunt Group telephone before moving on to the next telephone in the Hunt Group.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next until the display shows Hunt delay.
- Press <u>CHANGE</u> to select the setting: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10.
- 6. Press **T** to exit or <u>Next</u> to continue programming.

Programming busy line setting

A Hunt Group is considered busy if one of two scenarios exists:

- all of its members are being presented an incoming Hunt Group call
- all of its members are active on a Hunt Group call

There are three routing options if all members are busy:

- **BusyTone**—the caller gets a busy tone (PRI lines only)
- **Overflow**—the call is routed to an overflow position. If the overflow DN is the hunt group DN for that same hunt group, the overflow option will not appear.
- **Queue**—the call stays in the system for a period of time. Within this period of time, the call is presented to an member if one becomes available. When the time-out occurs, the call is presented to an overflow position.
- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next until the display shows If busy:
- 5. Press <u>CHANGE</u> to set the mode: BusyTone, Overflow, Queue.
- 6. Press **•** to exit or Next to continue programming.

Programming the queue time-out

This setting allows you to program the number of seconds a call remains in the Hunt Group queue before it is routed to the overflow position.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next until the display shows Q Timeout:
- 5. Press <u>CHANGE</u> to set the queue time-out: 15, 30, 45, 60, 120, 180.
- 6. Press **•** to exit or **Next** to continue programming.

Programming the overflow set

This setting allows you to program the overflow telephone to which the Hunt Group calls are to be routed. Unless the overflow position is a Hunt Group telephone, the call ceases to be a Hunt Group call. If the overflow telephone is a Hunt Group telephone, the call is treated as a new call and goes to the bottom of the queue.

The overflow telephone can be a DN number associated with a voice mailbox.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.

- 3. Press Show . The display shows Member DNs:
- 4. Press Next until he display shows Overflow:
- 5. Press <u>CHANGE</u> to change the overflow position.
- 6. Enter the new overflow position.
- 7. Press **•** to exit or **Next** to continue programming.

Setting the name

This setting allows you to program the Hunt Group name, such as Service or Sales. The name can be up to seven characters in length. This name becomes the CLID display name when the DN is called.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next until the display shows Name:.
- 5. Press CHANGE.
- 6. Use the dialpad to enter the name of the Hunt Group.
- 7. Press Next to store the name.
- 8. Press **•** to exit or Next to continue programming.

Allowing/disallowing an auxiliary ringer

This setting allows you to allow/disallow an external ringer to sound when a call comes in for a specific hunt group. If you allow this service, you must have an auxiliary ringer properly installed on your system. Refer to *Using an auxiliary ringer* on page 226.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 3. Press Show . The display shows Member DNs:
- 4. Press Next until the display shows Aux. Ringer:
- Press <u>CHANGE</u> to choose Y (yes) to turn the ringer on or N (No) to disallow an auxiliary ringer.
- 6. Press **•** to exit or **Next** to continue programming.

Assigning a distinctive ring pattern to a Hunt Group

You can assign distinctive ring patterns to your Hunt Group so that calls can be rated in priority for the group. These distinctive ring patterns have the same characteristics as for line and extension distinctive ring patterns.

Note: Digital Mobility phones that are members of hunt groups do not reflect this feature.

The Hunt Group distinctive ring pattern determines how a call will ring within the Hunt Group. If members of the group have ring patterns assigned to their telephones that are higher than the ring patterns of the incoming line or the Hunt Group, then the Hunt Group will use the ring of the corresponding member telephones.

If the incoming call (line) has a higher ring pattern assigned than the Hunt Group, the Hunt Group will ring with the line ring pattern.

- 1. At Hunt groups, press Show . The display shows Show group.
- 2. Enter the Hunt Group number you want to program (1-30) or press Next to scroll through the groups.
- 4. Press Next until the display shows Dstnct Ring:NONE.
- 5. Press <u>CHANGE</u> to toggle to the ring pattern number you want to assign to the Hunt group line. (None, 2, 3, 4)
- 6. Press **•** to exit or Next to continue programming.

Using Silent Monitor

When silent monitor is activated on your system, you can use your SM supervisor two-line display telephone to monitor Hunt group calls based on which DN you select to monitor.

Note: Digital Mobility phones cannot be used as a supervisor telephone for silent monitoring.

Refer to the *Modular ICS Installation Guide* for detailed information about the fields that make up this feature.

To start a session, on a silent monitor supervisor telephone:

- 1. Enter 🙋 ¥ 5 5 0.
- 2. Type in the SM password (default: SILENT (745368))

3. Enter the DN of the hunt group telephone you want to monitor and press \underline{OK} .

If that telephone is currently on a Hunt group call, you will be automatically connected to the call. If the telephone is idle or not on a hunt group call, you will be prompted to pick another DN to monitor.



Tips - Your telephone is muted by default at the beginning of any monitoring session. Press the mute button or the display key under <u>JOIN</u> to enter the conversation.

To end a session: Press \frown , or press the display key under <u>OTHER</u> or <u>EXIT</u>.

While attempting to monitor a call, or during a call, you may get one of the following prompts:

OBSERVE RETRY	OK	Enter the DN for the Hunt Group telephone that you want to monitor. If you make a mistake entering a DN number, press <u>RETRY</u> and re-enter the number. If the number you entered is correct, press <u>QK</u> . The system redisplays this prompt if it is
		unable to establish a session with the telephone DN that you enter.
OTHER JOIN	EXIT	While a call is being monitored, you can choose to:
		 move to another Hunt group member (<u>OTHER</u>) join the current conversation (<u>JOIN</u>) oxit the silent monitoring (EVIT)

exit the silent monitoring (<u>EXIT</u>)

OTHER LEAVE EXIT	 When you join a monitored call, you can choose to: move to another Hunt group member (<u>OTHER</u>) mute your telephone out of the current conversation (this does not disconnect silent monitoring) (<u>JOIN</u>) exit the silent monitoring (<u>EXIT</u>)
Access denied	You tried to start a monitoring session on a telephone that does not support the feature.
Needs Handsfree	You entered the silent monitor feature code without picking up the handset, and the telephone does not support handsfree operation.
Release calls	You entered the silent monitor feature code on a telephone that already has an active call. To continue, you will have to release it.
Your number	You entered your own DN.
Invalid number	The DN you entered is invalid for your system.
Not in Service	The DN you entered did not respond to the system.
Not HG member	The DN you entered is not a Hunt Group member.
Supervisor	The DN you entered belongs to another Supervisor. You cannot monitor SM supervisor telephones.
Not Supported	The DN you entered belongs to a portable telephone or an ISDN terminal.
DN:Idle OTHER EXIT	The current call on the telephone you are monitoring is either not a Hunt Group call, or the call came in on a line button on that telephone. Note: You should not assign lines which are assigned to the hunt group to individual hunt group members

Need I/C key

No intercom button is currently available to support the feature.

Feature notes

- You can only monitor external hunt group calls.
- You must release all calls on your supervisor telephone before you attempt to run a monitoring session.
- The DN you choose to monitor must be a designated member of a hunt group.
- The supervisor telephone can be part of a hunt group. Supervisor telephones cannot be monitored.
- If the hunt group call gets transferred, the session is dropped because the call is no longer a hunt group call.
- If any of the parties release the call, the monitoring session is dropped, and the supervisor will be prompted to pick another DN to monitor.
- To transfer a session to your handset when you start the monitoring session in handsfree mode, press the display key under <u>DTHER</u> and re-enter the DN, otherwise the session will continue on your telephone speaker.
- If your telephone is in Silent Monitor idle mode, and you press the intercom button, the monitoring session will terminate.
- You can monitor calls that are forwarded to a hunt group member.
- If the call is parked, attached to a SWCA button, put on Hold, or camped, Silent Monitor will drop the monitoring session and the supervisor will receive an indication that the hunt group telephone is now idle.
- If the current hunt group call is part of a conference call, it cannot be monitored.

- You can initiate a session on a Hunt group telephone with Do Not Disturb or Auto Privacy are active.
- Using a headset automatically defaults Silent Monitor to mute. This is the recommended way of using the Silent Monitor feature.
- Messages received by the supervisor during a silent monitoring session, will not provide an indication on the display.
- Attempting to initiate any feature buttons on the supervisor set, while a session is active, will terminate the silent monitoring session.
- A priority call or ring again call will be indicated on the display. The monitoring session will terminate if the call is accepted.
- If a line is assigned to both a ringing group and a hunt group, calls coming in over this line cannot be monitored.
- If a voice call coming into a supervisor telephone is accepted, any active monitoring session will be released.
- 7316 digital phones used as supervisor may experience problems using mute when joining or leaving a silent monitor session.

MCDN constraints: The attendant cannot break-in to a call which is being monitored. Trunk Anti-Tromboning (TAT) will not be applied to a call that is currently being monitored. If a call has already had TAT applied, the call cannot be monitored.

Using the Hospitality features

This section describes the Hospitality Services feature which is used to administer room and alarm services in small to medium-sized facilities such as hotels, motels, or hospitals.

There are three types of sets that make up this type of system:

Common set—this telephone can be found in the lobby, office, or common area, and is not associated with a room. This type of telephone is used for public access, and cannot access the admin or room features.

Room set—this telephone resides in a specific room and can be used by both guests and cleaning staff to set alarms or to indicate room condition. Up to five DNs can be assigned to the same room number, such as for fax lines, internet dial-up, etc.

Administration set—this telephone must be a two-line display telephone, and is usually configured with a password to allow secure administration of room occupancy and condition services and alarm services.

Hospitality passwords

There are two passwords within the hospitality feature. One provides secure access to the administration set, and one provides secure access to a room condition setting from each room set for housekeeping staff.

Desk pswd

Change this password frequently, to maintain security.

- 1. Place the appropriate programming overlay on the set you are using to do programming.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4 (CONFIG). The display shows Password:.
- 3. Press 2 3 6 4 6 (ADMIN). The display shows Terminals&Sets.
- 4. Press Next until the display shows Hospitality.
- 5. Press Show . Desk pswd: displays. (default:4677)
- 6. Press CHANGE. New PSwd: displays
- 7. Enter a new password, then press \underline{OK} .

Cond pswd

Change this password frequently, to maintain security.

- 1. Place the appropriate programming overlay on the set you are using to do programming.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4 (CONFIG). The display shows Password:.
- 3. Press 2 3 6 4 6 (ADMIN). The display shows Terminals&Sets.
- 4. Press Next until the display shows Hospitality.
- 5. Press Show . Desk pswd: displays
- 6. Press Next Cond Pswd:None displays.
- 7. Press <u>CHANGE</u>. New pswd: displays
- 8. Enter a new password, then press \underline{OK} .

Room/desk information

There are two aspects to programming room information.

- First you must program individual DNs to a specific room and set up the room occupancy filters, which determine what types of calls can be made from a room set at various states of occupancy. Note: You can assign up to five DNs to the same room
 - number.
- Then you need to administer the room occupancy and state of the room.

Programming room information

Use this setting to assign set DNs to a specific room.

- 1. Place the appropriate programming overlay on the set you are using to do programming.
- 2. Press 🔊 ¥ ¥ 2 6 6 3 4 4 (CONFIG). The display shows Password:
- 3. Press 2 3 6 4 6 (ADMIN). The display shows Terminals&Sets.
- 4. Press Next until the display shows Hospitality.
- 6. Press Show . Show set: displays.
- 7. Enter a room set number or press <u>LIST</u> and press <u>Next</u> until you find the DN of the set you want to assign to a room.
- 8. Press Show . Room #:None displays.
- 9. Press <u>CHANGE</u> and enter the room number, then press <u>OK</u> to accept the change.

- 10. Press Next . Adm pwd rea'd: Y displays
- 11. Press <u>CHANGE</u> and choose Y or N, depending on your security requirements.

Call restrns

Call restrictions can be set up by the system administrator. Refer to the *Modular ICS Installer Guide* for details.

Service times

You can set the time when occupied rooms change from Service done to Service required. This setting affects the Room condition feature.

- 1. Place the appropriate programming overlay on the set you are using to do programming.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4 (CONFIG). The display shows Password:.
- 3. Press 2 3 6 4 6 (ADMIN). The display shows Terminals&Sets.
- 4. Press Next until the display shows Hospitality.
- 5. At the Hospitality heading, press Show until Service time displays.
- 6. Press Show . Hour: 00 displays.
- 7. Press <u>CHANGE</u> and enter the hour (00 to 23).

If the number is less than 13, the display shows AM. Press <u>CHANGE</u> to select PM, if required. Press <u>OK</u> to accept.

- 8. Press Next . Minutes: 00 displays.
- 9. Press <u>CHANGE</u> and enter the minutes (00 to 59).

Using the room/set programming

This section describes how the room occupancy and room condition settings are used.

Setting dialing filters by room state

- 1. Press 🙆 8 7 9.
- 2. Enter the Desk admin password if you are prompted for a password.

The set displays: Oc of rm#::

3. Enter the room number and press OK.

The set displays rrrrr: Uacant.

- 4. Press the <u>CHANGE</u> display key and select the required status for the room set.
- 5. To program other rooms, press the **FIND** or **NEXT** display key and return to step 3.
- 6. Press **r** to exit.

Note: Setting the room state to Vacant cancels any outstanding alarms.

Setting the room condition

You can use this feature on a room set or administration set to:

- set the room state to service done (Srvc done)
- set the room state to Needs service (Needs srvc)
- query the state of the room

Using the room set:

- Press ♥ 8 7 6 on a digital set or Link ♥ 8 7 6 on an analog set.
- 2. At the prompt, set the status of the room.

Note: You may be required to enter a Room condition password.

Press 1 to indicate Set to srv done.

Press 2 to indicate Set to needs srv.

The set displays the selected prompt.

3. Press **r** to exit.

Using the admin set:

- 1. Press 😰 8 7 8.
- 2. Enter the Desk admin password if you are prompted for a password.

The set displays: Cd of rm#:

3. Enter the room number and press \underline{OK} .

The set displays rrrrr: Uacant.

4. To update the condition, press <u>CHANGE</u> and select the required status.

To query the condition of other rooms, press the FIND or <u>NEXT</u> displays keys.

5. Press **r** to exit.

Programming the alarm feature

If you want to allow the room sets to program wake-up alarms, there are a couple of program settings that need to be entered.

- 1. Place the appropriate programming overlay on the set you are using to do programming.
- 2. Press 🔊 ¥ ¥ 2 6 6 3 4 4 (CONFIG). The display shows Password:
- 3. Press 2 3 6 4 6 (ADMIN). The display shows Terminals&Sets.
- 4. Press Next until the display shows Hospitality.
- 6. Press Next until Alarm displays.
- 7. Press Show . Attn attempts: 3 displays.
- 8. Press <u>CHANGE</u> until you find the number you want (1-5).
- 9. Press Next . Retry introl:4 displays.
- 10. Press <u>CHANGE</u> until you find the number you want (2, 4, 6, or 8).
- 11. Press Next . Attn duration: 15 displays.
- 12. Press <u>CHANGE</u> until you find the number of seconds you want (10, 15, 20, 30, 40, 50).
- 13. Press Next . Time format:12 hr displays.
- 14. Press CHANGE to choose either 12hr or 24hr.
- 15. Press Next . Expired alarms displays.
- 16. Press Show . Notify set: None displays.
- 17. Press <u>CHANGE</u> to enter a set DN to be notified.
- 18. Press Next ... Use tone: N displays.

19. Press <u>CHANGE</u> to choose either Y (yes) or N (no).

20. Press **•** to exit or Next to continue programming.

Using the Administration set to control alarms

Only a Hospitality Services set can use this alarm administration feature. This feature is also associated with a room number, and cannot be used on common sets.

Use this feature to:

- query a current or last alarm time set for a room
- assign an alarm time for any room
- change an alarm time for any room
- cancel an pending alarm for any room

To program the alarm, follow these steps:

- 1. Press 🙋 8 7 7.
- 2. Enter the Desk admin password if you are prompted for a password.

The set displays: **al of rm#**:

- 3. Enter the room number.
- 4. Press <u>UIEW</u>. The set displays Alrm: 07:00am OFF:.

If the alarm time is correct, press the <u>ON/OFF</u> display key.

If you want to change the time, enter a new four-digit alarm time.

If the clock uses a 24-hour format, enter an hour between 00 and 23, and minutes between 00 and 59. The set displays: Alarm ON hh:mm

If the clock uses a 12-hour format, enter the time, then when the set displays: hh:mm AM or PM?, press <u>AM</u> or <u>PM</u>. The set displays: Alarm ON hh:mm. 5. Press **r** to exit.

Using the alarm

To set an alarm on a digital telephone:

- 1. Press @ 8 7 5. The displays shows Alrm:07:00 OFF
- 2. Do one of the following:

If the alarm is correct, press <u>ON/OFF</u>. The set displays: Alrm:07:00am ON. Press <u>DONE</u> to exit.

If you need to change the alarm time, press <u>CHG</u>. The set displays: Enter time:

3. To enter a new time, do one of the following:

If the clock uses a 24-hour format, enter an hour between 00 and 23, and minutes between 00 and 59. The set displays: Alarm ON hh:mm

If the clock uses a 12-hour format, enter the time, then when the set displays: hh:mm AM or PM?, press <u>AM</u> or <u>PM</u>. The set displays: Alarm ON hh:mm.

To set an alarm on an analog set:

- 1. Press Link ***** 8 7 5. A tone sounds.
- 2. Enter a four-digit alarm time:

If the clock uses a 24-hour format, enter an hour between 00 and 23, and minutes between 00 and 59. A tone sounds.

If the clock uses a 12-hour format, enter the time, then press ★ to select am or # to select pm. A tone sounds.

To enter a new time, repeat the above steps and enter a new time. This overwrites the existing entry.

Canceling an alarm

Canceling the alarm time for any set cancels the alarm time for all the sets in the same room.

Digital set: Press	Ø # 8	7	5.		
Analog set: Press	Link	#	8	7	5

Turning off an alarm

When the alarm rings, the user can release the ring by doing one of the following, depending on the type of set in the room:

Digital set: Press any button except .

Analog set: Lift and replace the handset.

• acts like a snooze alarm and will temporarily disable the alarm for a programmed period. Refer to *Service times* on page 184.


If the user is on a call when the alarm sounds, they can press any button except **•**, which would release the call instead.

Telephone features

Installing digital phones


If you are connecting a 7316 or 7316E digital phone for the first time, refer to the following illustrations as a guide.

Installing the 7316/7316E digital phone connections

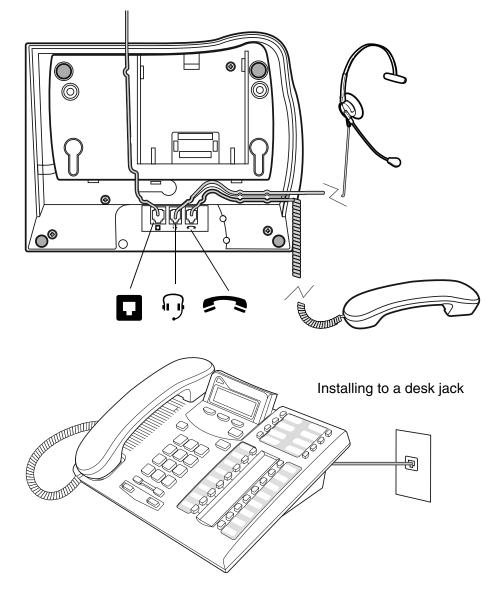


Mounting a digital phone on the wall

Installing without the angled base

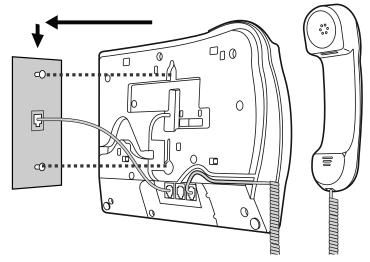


Mounting a digital phone using the stand

Tighten screws for a secure fit.

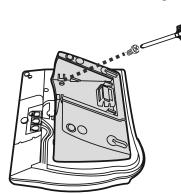

Mount the stand as shown and insert screw. Use the screw that came with your telephone.

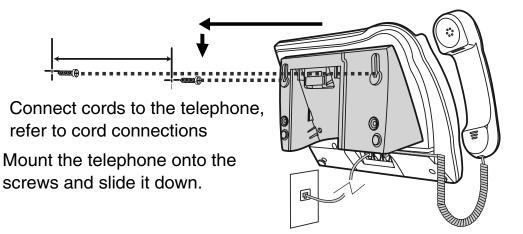

Connect line cord to wall jack.

Naming a telephone or a line

You can assign names to identify external lines, target lines, and each telephone. During a call, the name, if programmed, is shown on the telephone display instead of the external line number or internal telephone number of the caller. Step-by-step instructions for adding or changing the name of a telephone or a line are in *Changing the name of a telephone* on page 32.

Telephone names and line names can contain both letters and numbers, but cannot be longer than seven characters. You cannot use the # and * symbols.



Tip - You can give the same name to two or more telephones, or to a telephone and a line in your system. To avoid confusion, avoid such duplication. Use initials, abbreviations, or even nicknames to give each telephone a unique name.

If automatic telephone relocation is turned on, the name and internal number of a telephone are saved if the telephone is moved within your system.

Moving telephones

You may be required by law to report any telephone moves to your local telecommunications carrier or 911 service provider. For further details, consult your local carrier, your local 911 service provider, and/or your local telecommunications service provider.

If automatic telephone relocation is enabled in programming by your installer or customer service representative, you can move your telephone from one Norstar jack to another without losing any of its custom programming. If you want to replace a telephone and cancel the programming, ensure that the relocation setting is off.

Stopping calls from ringing at your telephone: Do Not Disturb (DND)

Stopping calls

Press 🔊 🖲 🕤 to stop calls from ringing at your telephone.

Only priority calls ring at your telephone. A line button flashes when you receive a call, but the call does not ring.

Refusing to answer a call

While you are on a call, you can refuse to answer a second call (including a priority call).

Press 🕑 🖲 🕤 while your telephone is ringing.

Canceling Do Not Disturb

Press 😰 #	8	5		
-----------	---	---	--	--

Displays

O 1 1 	
Allow	- C S I I C
HIIU	Calls

Your telephone receives calls normally.

Using Do Not Disturb


Once you turn Do Not Disturb on, calls are forwarded to the prime telephone only if there is no other telephone on which the line appears. If there is another telephone that shares the same line, the call may be answered by that person. The Delayed Ring Transfer feature transfers all unanswered calls to the prime telephone after a specified time.

Do Not Disturb prevents voice calls from alerting at your telephone. Voice calls are presented as normal intercom calls.




Tip - System digital phones that are members of a Hunt Group can temporarily leave a Hunt Group by activating this feature. Hunt Group calls arriving while a telephone is in Do Not Disturb mode are routed to the next member in the Hunt Group. For more information about Hunt Groups, see Programming Hunt Groups on page 165

Using Background Music



Use this feature to active the optional music feature. You will hear whatever music source is attached to the Modular ICS.

Your installer or service representative makes this feature available to all telephones in programming. You need to supply a music source, such as a radio, and have it attached to your ICS.

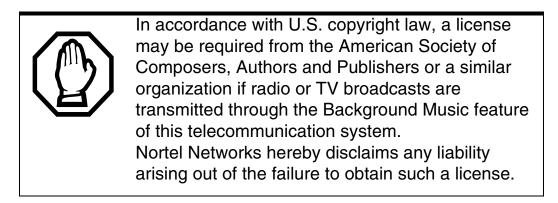

Note: The 7000 and 7100 digital phones, analog phones and the Digital Mobility phones do not support this feature.

Turning Background Music off

The music stops automatically if you make or answer a call, or press (2) # 8 6 to turn it off.

ISDN PRI and BRI

Integrated Services Digital Network (ISDN) technology provides a fast, accurate and reliable means of sending and receiving data, image text and voice information through the telephone system.

By using Primary Rate Interface (PRI) or Basic Rate Interface (BRI), your ISDN service allows for faster transmission speeds and the addition of a variety of powerful business applications, including remote LAN access, videoconferencing, file transfer and Internet access.

Your installer configures ISDN services and terminal equipment.

ISDN PRI

PRI is economical because separate analog trunks and data circuits are not needed for Direct Inward Dialing (DID), Direct Outward Dialing (DOD), and data transfer.

With PRI there is greater flexibility because B channels can be dynamically reconfigured to accommodate changes in traffic with the Call by Call feature. For more information, see *Call by Call service selection for PRI* on page 200.

PRI offers fast information access because channel usage is optimized to allow you the full benefit of available bandwidth and real-time connectivity.

PRI lines are configured as DID lines. Incoming calls on a PRI line can appear on a DID button or on an intercom button depending on how your target lines are assigned to the telephones. Outgoing calls are made using the intercom buttons. PRI lines can be accessed from all devices such as Norstar telephones, Business Series Terminals (BST telephones), ISDN sets, and WMC portable handsets.

ISDN PRI features

Selected ISDN network features can be used from a Norstar telephone. Your central office switch (ISDN network) determines which features are available to you.

Network Name Display for PRI

Your Norstar system displays the name of an incoming call when it is available from the service provider. Name information can be displayed on a Norstar or BST telephone, but not on an ISDN terminal. If the Calling Party Name has the status of *private*, it may be displayed as Private name. If the Calling Party Name is unavailable, it may be displayed as Unknown name.

Your Norstar system displays the name of the called party on an outgoing call, when it is provided by your service provider.

The Business Name concatenates with the set name on an outgoing call. This can only occur if the Business Name has been programmed.

The available features include:

- receiving Connected Name
- receiving Calling Name
- receiving Redirected Name
- sending Connected Name
- sending Calling Party Name

Consult your customer service representative to determine which of these features is compatible with your service provider.

Name and number blocking for PRI

When activated, (28 19 allows you to block the outgoing name and/or number on a per-call basis. Name and number blocking can be used with a Norstar or BST telephone, but not with an ISDN terminal.

Consult your customer service representative to determine whether or not this feature is compatible with your provider.

Emergency 911 Dialing

Modular ICS 7.1 with the ISDN PRI feature is capable of transmitting the telephone number and internal extension number of a calling station dialing 911 to the Public Switched Telephone Network. State and local requirements for support of Emergency 911 Dialing service by Customer Premises Equipment vary. Consult your local telecommunications service provider regarding compliance with applicable laws and regulations.

If transmission of internal extension numbers is not required or desired, then it is recommended that the System Coordinator maintain a site map or location directory that allows emergency personnel to rapidly locate a Norstar or BST telephone, given its DID number. This list should be kept up to date and readily available, and can be included with the Programming Record.

Two-way DID

With PRI, the same lines can be used for receiving direct inward dialing (DID) and for making direct outward dialing (DOD) calls.

The dialing plan determines how calls are routed.

Consult your customer service representative to determine whether or not this feature is compatible with your service provider.

Call by Call service selection for PRI

PRI lines can be dynamically allocated to different service types with the Call by Call feature. PRI lines do not have to be pre-allocated to a given service type.

Call types that may be available, depending on your service provider are:

Public	Public calls connect your telephone with a Central Office (CO). DID and DOD calls are supported.
Private	Private calls connect your telephone with a private network. DID and DOD calls are supported. A private dialing plan may be used.
Tie	Tie lines are private incoming and outgoing lines that connect Private Branch Exchanges (PBX) such as Norstar.
FX	Foreign Exchange calls connect your telephone to a remote CO. It provides the equivalent of local service at the distant exchange.
Outwats	Outwats is for outgoing calls. This allows you to originate calls to telephones in a specific geographical area called a zone or band. Typically a flat monthly fee is charged for this service.
Inwats	Inwats is a type of long distance service which allows you to receive calls originating within specified areas without a charge to the caller. A toll-free number is assigned to allow for reversed billing.

Consult your customer service representative to determine whether or not this feature is compatible with your provider.

Dialing Plan and PRI

The Dialing Plan supports PRI connectivity to public and private networks. The dialing plan is a collection of features responsible for processing and routing incoming and outgoing calls. All PRI calls must go through a dialing plan.

The Dialing Plan

- allows incoming calls to be routed to telephones, based on service type and digits received
- allows Enbloc dialing by buffering user-dialed digits until a complete DN has been dialed
- provides the ability to map user-dialed digits to a service type on a Call by Call basis
- allows long distance carrier selection via user-dialed Carrier Access Codes

Depending on the type of dialing plan chosen, you may also need to specify a Private DN length so the system knows when the user has completed dialing.

Refer to the Networking chapter in the *Modular ICS 7.1 Installer Guide* for more details about dialing plans. Consult your customer service representative to determine how your dialing plan is configured.

ISDN BRI

Modular ICS 7.1 supports a maximum of 30 ISDN sets on the system.

The following ISDN services are supported:

- incoming calls
- outgoing calls
- Calling Line Identification Presentation (CLID)
- sub-addressing
- bearer capabilities
- teleservices

The Call Forward All Calls feature can be used from ISDN terminals connected to Modular ICS.

Note: System digital telephones can accept voice calls only. Video and data calls do not alert at a digital phone.

Although an ISDN S-loop or LT-loop can support up to eight devices, the loop has a limit of two B-channels. If both Bchannels are in use, other devices on that loop cannot make or receive calls until a B-channel is available, or until both B-channels are available, in the case of a video terminal. Thus, the number of terminals installed must take into account whether you require dedicated access for the terminals on that loop.

Note: System telephone features, other than Transfer and Call Forward All Calls, are not available to ISDN terminals. In addition, you cannot retrieve a parked call, or reach a Direct-Dial set by using the Direct-Dial digit from an ISDN terminal.

Line access from an ISDN terminal

ISDN terminals do not have line buttons or intercom buttons, as do system Digital phones such as the 7316E. To make an outgoing call from an ISDN terminal, access an external line by entering a line pool code or by using the ARS feature.

ISDN BRI features

Selected ISDN network features can be used from a system Digital phone. Your central office switch (ISDN network) determines which features are available to you.

Network Name Display for BRI

Your Norstar system displays the name of an incoming call when it is available from the service provider. Name information can be displayed on a system Digital phone, but not on an ISDN terminal. If the Calling Party Name has the status of *private* it may be displayed as Private name. If the Calling Party Name is unavailable it may be displayed as Unknown name.

Your Norstar system displays the name of the called party on an outgoing call, when it is provided by your service provider.

As with PRI, your Norstar system sends the Business Name concatenated with the set name on an outgoing call, but only if a Business Name has been entered for the set.

The available features include:

- receiving connected name
- receiving calling name
- receiving redirected name
- sending connected name
- sending calling party name

Consult your customer service representative to determine whether or not this feature is compatible with your service provider.

Name and number blocking for BRI

When activated, (2819) allows you to block the outgoing name and/or number on a per-call basis. Name and number blocking can be used with a system Digital phone but not with an ISDN terminal.

Consult your customer service representative to determine whether or not this feature is compatible with your service provider.

Service provider features

Consult your customer service representative to determine if the new ISDN features are supported with your service provider.

Call Forward

Call Forward allows you to forward your calls to an external telephone number.

- 1. Select an ISDN line by selecting a line button, a line pool, or the handsfree button, or by lifting the handset (if an ISDN line is your prime line).
- 2. Consult your service provider for the appropriate feature code to enter on your dialpad. Listen for three tones followed by dial tone.
- 3. Enter the internal number of the telephone to which you want your calls forwarded. If the call is answered, stay on the line for at least five seconds to activate the Call Forward feature.

Canceling Call Forward

- 1. Select an ISDN line by selecting a line button, a line pool, or the handsfree button, or by lifting the handset (if an ISDN line is your prime line).
- 2. Consult your service provider for the appropriate feature code to enter on your dialpad. Listen for a series of tones.
- 3. Press **T**.

Calling the number your calls are forwarded to

- 1. Select an ISDN line by selecting a line button, a line pool, or the handsfree button, or by lifting the handset (if an ISDN line is your prime line).
- 2. Consult your service provider for the appropriate feature code to enter on your dialpad.

Automatic Call Back

If you call a number and it is busy, enter the appropriate feature code designated by your service provider to receive a distinctive ring at your set when the line becomes available for calls.

Automatic Recall

Automatic Recall allows you to automatically dial the number of the last call you received. You may not see the number on the display if the information is not available from your service provider, or if you do not have Caller ID as part of your ISDN service.

Consult your service provider for the appropriate feature code to enter on your dialpad.

MCID (profile 2)

The MCID feature allows you to enter 🙆 🖲 🧿 7 to have call information recorded on the central office system for an incoming call on a specific line (ETSI EURO ISDN lines, only).

The user must invoke the feature code either during the active call or within 30 seconds (time varies on different networks) after the caller hangs up, but before the user hangs up.

Note: The Digital Mobility phone does not support this feature.

Call traced	The MCID request was accepted by the network.
No response	No response to the MCID request.
Not incoming	MCID can only be invoked on received calls.
Not available	The caller information is not available. The CO is not able to log the information or it is not an ETSI BRI/PRI type of call.
Not subscribed	MCID feature is not subscribed to.
Invalid state	MCID is not allowed in the current state of the call.
Not allowed	Invalid interaction with another supplementary service.

MCID prompts

Network Call Diversion (profile 2)

This feature is a network function that allows forwarding and redirection of calls outside the Norstar network when using an ETSI ISDN line. Functionality is similar to that of External Call Forward (ECF). NCD redirects calls using the same line on which they arrive. Call forward is efficient since there is no need for additional outside lines.

Overlap dialing (profile 2)

This feature allows a break in the dialing sequence when dialing on ETSI PRI lines that require overlap dialing.

ISDN BRI terminals

Your Modular ICS allows connection of eight Basic Rate Access loops (four 2B+D channels) that can be used for fully digital connections to ISDN networks and devices. Loops are connections between the ICS and devices or between the ICS and the network.

Each loop provides two separate B-channels that can be used to make two simultaneous voice or data calls, or one data call and one voice call.

ISDN applications for **BRI** and **PRI**

ISDN terminal equipment delivers a wide range of powerful business applications:

• Videoconferencing and video telephony: Video conferencing offers instant visual and audio contact between distant parties using either studio-based or desktop ISDN terminals.

- Desktop conferencing: ISDN allows computer users in distant locations to share and edit any image, data or text file on their own computer screens while they discuss the information.
- File transfer: The ISDN network allows you to transfer files containing data, text, images, data, or audio clips, faster and cheaper than with a conventional modem.
- Telecommuting: Convenient retrieval, processing and storage of files is possible for the employee working at home by using ISDN lines to give high-speed access to information resources at the office.
- Group 4 fax: ISDN fax applications save money by increasing both transmission speed and the quality of resolution.
- Remote LAN access: ISDN provides an affordable and fast means for employees at remote sites (at home or branch offices) to access local area networks (LANs).
- Leased line backup: Essential backup for leased lines can be provided using ISDN as required, rather than duplicating costly permanent leased lines.
- LAN to LAN bridging: Local area network (LAN) bridge/ routers allow flexible interconnection between LANs using ISDN, with charges incurred only when information is actually transmitted.
- Internet and database access: The fast call set up and high bandwidth of ISDN are ideal for accessing information services such as the Internet and databases.

Using System features

Using alternate or scheduled services

There are three types of Services to make your Norstar system handle calls differently on different days and at different times of the day: Ringing service, Restriction service and Routing service.

Each of the three services, and the six schedules available to each service, are customized for you by your installer or customer service representative. They program which telephone is used to turn Services on and off, and display what Services are in use. This is called the control telephone.

Preventing certain calls from being made

Restriction service prevents a user from making certain kinds of calls from a telephone or from lines that are available at the telephone. The restrictions are programmed by your installer or customer service representative. For example, you might want to restrict long distance dialing between certain hours of the day.

Making additional telephones ring

Ringing service makes additional telephones ring for incoming calls on external lines. For example, all incoming external calls can ring at a security telephone during the night. Or calls to one attendant can ring at another telephone during lunch. This service does not suppress your normal ringing assignment.

Changing the lines used by outgoing calls

Routing service allows you to assign alternate routes to calls during different schedules. In this way you can take advantage of lower costs available on particular routes on certain days and at certain times. Both the regular and alternate routes are programmed by your installer or customer service representative.

Note: Your system administrator can also assign alternate routes for destination codes that are defined to run on a schedule. In this case, alternate routes are offered only in the case where the original route is not available. Refer to the section on least-cost routing in the *Modular ICS Installer Guide*.

Turning Services on and off

The master control for how different services and their schedules are used by your system is in programming. There are three settings: Manual, Automatic and Off.

- **Manual** allows you to turn the service on and off at any time from a control telephone using a feature code.
- Automatic allows you to use the preassigned stop and start time for a service. You are able to start and stop the service by entering the appropriate feature code at a control telephone. If you select this setting, you use the start and stop times programmed by your installer or customer service representative.
- Off prevents the service from being activated. In the case of restriction settings and routing, this means that the Normal schedule will be in effect.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 😰 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Next twice. Services displays
- 5. Press Show . Ringing Service displays.
- 6. Press Next until you see the service you want to program.
- 7. Press Show and Next until you see the schedule you want to program.
- 8. Press Show and use <u>CHANGE</u> to select the setting that works best for your office: Off, Manual or Automatic.

Each schedule can have its own configuration of a Service which works independently of automatic start and stop times. For example, there may be a version of Restriction service called Night Schedule that prevents anyone from making long distance calls. But calling it Night Schedule does not mean it can only be used with a schedule. You can turn the Night Schedule for Restriction Service on or off, as needed, any time of the day or night. If you decide to run a service on a schedule, the system uses the start and stop times used for that schedule.

An example of how to turn on a Service manually


You may have Ringing service, as your night service, set up to run according to the Night Schedule. You may decide you want that ringing arrangement to come into effect only when it is turned on and off manually.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Next twice. Services displays
- 5. Press Show . Ringing Service displays.
- 6. Press Show . The display reads Sched:Night.
- 7. Use <u>CHANGE</u> to set the Service to Manual.

Night Schedule for Ringing Service no longer follows the schedule but can be turned on and off by using the feature code and selecting Night Ringing. See *Turning Services on and off* on page 213.

Turning Services on and off

The master control for services is in programming. See *Turning Services on and off* on page 210. Day-to-day use of Services is controlled using the following feature codes.

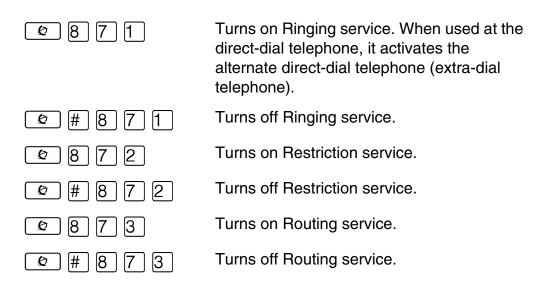

To turn a Service on:

- 1. Enter the appropriate feature code from a control telephone.
- 2. For Restriction and Routing service you have to enter the System Coordinator or Basic password.
- 3. Press <u>NEXT</u> to move through the schedules until the display shows the version of the service you want to be turned on.
- 4. Press <u>OK</u> to select the setting, or press <u>QUIT</u> to exit the feature without making any changes.

To turn a Service off:

- 1. Enter the appropriate feature code from a control telephone.
- 2. For Restriction and Routing service you have to enter the System Coordinator or Basic password.



Setting a Service to Normal is not the same as canceling a Service using a feature code. If you set the Service to Normal, the normal version of a Service overrides any automatic schedule and remains in effect until you manually cancel it. If you cancel the Service, you return to the automatic schedule.

Viewing the active Services on a two-line display

When a Service is active, the control telephone display reads Services ON.

- 1. Press <u>LIST</u>. The display shows the first active Service and the schedule that is in use.
- 2. If there are several active Services, press <u>NEXT</u> to see them all.
- 3. Press **EXIT** to exit the feature.

Viewing the active Services on a one-line display

- 1. Press 😰 8 7 0. The display shows the first active Service.
- 2. Press # to move through the active schedule.
- 3. Press **r** to exit.

Displays

<sched>Restr'n EXIT</sched>	NEXT	You are viewing the active Services. Press # or <u>NEXT</u> to see the other active Services. Press \frown or <u>EXIT</u> to quit.
<sched>Restr'n QUIT OK</sched>	NEXT	The name of the current Restriction service schedule displays. Press # or <u>NEXT</u> to see the other Ringing service schedules. Press • or <u>OK</u> to select the desired schedule.
<sched>Rin9in9 EXIT</sched>	NEXT	You are viewing the active Services. Press $\#$ or <u>NEXT</u> to see the other active Services. Press (a) or <u>EXIT</u> to quit.
<sched>Rin9in9 QUIT OK</sched>	NEXT	The name of the current Ringing service schedule displays. Press # or <u>NEXT</u> to see the other Ringing service schedules. Press or <u>OK</u> to select the desired schedule.
<sched>Routin9 EXIT</sched>	NEXT	You are viewing the active Services. Press $\#$ or <u>NEXT</u> to see the other active Services. Press r or <u>EXIT</u> to quit.
<sched>Routing QUIT OK</sched>	NEXT	The name of the current Routing service schedule displays. Press $\#$ or <u>NEXT</u> to see the other Routing service schedules. Press \checkmark or <u>DK</u> to select the desired schedule.
<sched>until* QUIT OK</sched>	NEXT	Press • or \underline{OK} to select this schedule, # or <u>NEXT</u> to see the next available schedule, or • or <u>QUIT</u> to exit. If you select this schedule, it is in effect until the next automatic schedule takes effect.
No services ON		You have entered the Show Services feature code and there is no active Service.
Services	ON LIST	There is a Service active in your system. Press $*$ or <u>LIST</u> to view the active Services.

For other displays, see *Common feature displays* on page 249.

Services that have been turned on automatically are indicated by an asterisk (*) before the name on the display. You can neither manually activate nor cancel automatically-scheduled services, although you can override them by manually turning on another schedule.

The control telephone can override Services that are turned on and off according to a schedule at any time by entering a Services feature code, and then selecting a different schedule. This override remains in effect until it is canceled. If you select a schedule with an asterisk (*), the next automatic service schedule comes into effect at the programmed time.

Direct-dial calls to a direct-dial telephone ring at the extra-dial telephone only when you enter the Ringing service feature code (2871) at that direct-dial telephone. Note that only the extra-dial telephone is activated, not the actual Ringing service. This is the case unless that direct-dial telephone is a control telephone. The extra-dial telephone is designated by your installer or customer service representative.



Tip - Norstar provides six service schedules named Night, Lunch, Evening, Sched 4, Sched 5, and Sched 6. Your installer or customer service representative can change these names to suit your business.

Using passwords

Your passwords prevent unauthorized or unintentional changes to your Norstar system. To keep your telephone service secure, distribute the password only to selected personnel or make use of the basic password described below. Record your password in a secure place and change it periodically.

If you forget the administration or basic passwords, you cannot do any programming. Call your customer service representative to assign a new password.

The password is a one to six-digit number. It is advised to make your password at least six digits long for security reasons. If you press <u>CHANGE</u> but do not enter a new password, the existing password is erased. Anyone can then access programming without a password.

The default System Coordinator password is $A D M \square N$, which is the same as 23646.

One password cannot be a subset of another one. For example, you cannot have 123 and 12345.

Using a Basic password

In addition to a System Coordinator password, there is a Basic password. This allows you to delegate some of the duties of being a system coordinator to someone else without allowing access to sensitive programming.

```
The default Basic password is \mathbb{B} \land \mathbb{S} \mid \mathbb{C} or \mathbb{2} \mid \mathbb{2} \mid 7 \mid \mathbb{4} \mid \mathbb{2}.
```

You can enter the Basic password after the following feature codes:

- $\mathfrak{O} \times \mathfrak{O}$ **E R** to access User Preferences
- 🔄 * * T I M E to change the system time and date

Because the Basic password can be used to change the time, you should give it out with care and change it when necessary, for example, when an employee leaves the company. If restrictions, routing or other services operate on a schedule, changing the time can allow someone to bypass the programming.

Changing passwords

You can change your password in system programming.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Next four times. Passwords displays.
- 5. Press Show . Call Log pswds displays.
- 6. Press Next until you see Programing pswds .
- 7. Press Show . Sys Admin: displays.
- 8. Press Next until you see the name of the password you want to change.
- 9. Use Show , CHANGE and the dialpad to enter the new password. Press OK to accept the new password.

You cannot erase or eliminate the ability to program passwords.

Clearing a Call Log password

If an individual has forgotten their Call Log password, you can clear it in programming. The individual can then enter a new password from his or her telephone.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Next four times. Passwords displays.
- 5. Press Show . Call Log pswds displays.
- 6. Press Show and enter the internal telephone number of the telephone where you want to clear the Call Log password.
- 7. Press Show , then press <u>CLR</u> to clear the password after the Log pswd: prompt.

Hospitality passwords

There are two passwords within the Hospitality feature. One provides secure access to the administration set for programming the service, and one provides secure access to a room condition setting from each room set for housekeeping staff.

Desk pswd

Change this administration password frequently, to maintain security.

AtHospitality:

- 1. Press Show . Desk pswd: displays. (default is 4667)
- 2. Press <u>CHANGE</u>. New pswd: displays
- 3. Enter a new password, then press \underline{OK} .

Cond pswd

Change this password frequently, to maintain security.

AtHospitality:

- 1. Press Show . Desk pswd: displays.
- 2. Press Next . Cond PSwd:None displays.
- 3. Press <u>CHANGE</u>. New pswd: displays
- 4. Enter a new password, then press \underline{OK} .

Silent Monitor password

Users must enter a password when they use $\textcircled{>} \times 550$ to monitor Hunt group calls.

It is advisable to change this password frequently.

At SM Passwd (default: 745368 (SILENT)):

1. Press CHANGE.

New pswd: displays

- 2. Use the keypad to enter a new password.
- 3. Press <u>OK</u>.

Using special telephones

Direct-dial

You can reach the direct-dial telephone by dialing a single digit. The direct-dial telephone is usually in a central location, such as at the desk of an administrative assistant or attendant. You can have up to five direct-dial telephones for your Norstar system. It is usually the prime telephone or the central answering position (CAP).

The direct-dial telephone can send up to 30 messages and can invoke Services to activate the extra-dial telephone.

You cannot forward calls to a direct-dial telephone that is outside your Norstar system. See *Making changes to Call Forward No Answer* on page 35.

Note: ISDN terminals cannot use the Direct-Dial digit to reach a Direct-Dial set.

Changing the direct-dial telephone assignments

Your installer or customer service representative sets up the direct-dial telephone.

You can change which direct-dial telephone a telephone is assigned to, or assign it no direct-dial telephone.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show at Terminals&Sets.

- 5. Enter the internal number of the telephone you want to program and press Show . The display reads Carabilities.
- 6. Press Show .
- 7. Press Next until the display reads D-Dial.
- 8. Press <u>CHANGE</u> to select Set1, Set2, Set3, Set4, Set5 or None.

Any number of telephones can be assigned to call the direct-dial telephone.



Tip - *The digit you dial in order to get the direct-dial telephone to ring can be programmed by your installer or customer service representative.*

The Norstar system cannot verify that the number you assign as an external direct-dial telephone is valid. Check the number before assigning it as a direct-dial telephone, and call the direct-dial telephone after you've assigned it in order to test it.

Hotline

A hotline telephone calls a preset internal or external telephone number when you pick up the receiver (or press the handsfree button).



Tip - *Label the telephone to inform anyone using it that Hotline is active.*

Bypassing a Hotline

Press a line button, or use the Pre-Dial or the Automatic Dial feature before you pick up the receiver or press the handsfree button on a hotline telephone. See the *Telephone Feature Card* or see *Changing how you dial your calls* on page 80.

Making a telephone a hotline telephone

You can set up a telephone as a hotline.



Tip - *A* Hunt Group set DN can be specified as a Hotline telephone. For more information about Hunt Groups, see Programming Hunt Groups on page 165.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 😰 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show at Terminals&Sets.
- 5. Enter the internal number of the telephone.
- 6. Press Show . The display reads Carabilities.
- 7. Press Show
- 8. Press Next until the display reads Hotline.
- 9. Press <u>CHANGE</u> to select the type of call the hotline makes: None, Intrn1, or Extrn1.
 - Internl assigns an internal number.
 - External assigns an external number.

If you select an external number, you can select the line on which the call is made:

- the prime line
- an external line
- a line in a line pool, and a line pool access code For this type of line, you must specify the line pool access code.

• a line selected by the routing table For this type of line, the number dialed is treated as a destination code and is routed according to the routing tables.

A prime line, line pool access codes, and access to a line pool can be programmed by your installer or customer service representative.

Control telephone

The control telephone allows you to place the telephones and external lines for which it has responsibility into and out of service schedules. See *Using alternate or scheduled services* on page 209. Settings for this telephone can be copied from one control telephone to another.

SM Supervisor

A telephone designated as an SM Supervisor allows you to monitor Hunt group calls without or without a conference tone indicator to the other two parties. See *Using Silent Monitor* on page 176.

Using Set lock

Set lock limits the ways in which you can customize your telephone. There are three levels of Set Lock: Full, Partial, and None. None allows you to access all features on your telephone.

Partial prevents:

- programming autodial buttons
- programming user speed dial numbers
- programming feature buttons
- moving line buttons
- changing the display language

- changing dialing modes (Automatic Dial, Pre-Dial, and Standard Dial)
- using Voice Call Deny
- saving a number with Saved Number Redial

Full, in addition to the restrictions outlined for Partial lock, prevents:

- changing Background Music
- changing Privacy changing Do Not Disturb
- using Call Forward all calls
- using Send Message
 - using Trunk Answer
- using Ring Again

activating Services

Changing Set Lock programming for a telephone

You change the Set Lock in system programming.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show at Terminals&Sets and enter the internal number of the telephone you want to program.
- 5. Press Show .

- 6. Press Next until the display reads Restrictions.
- 7. Press Show twice.
- 8. Press Next until the display reads Set lock.
- 9. Use <u>CHANGE</u> to select one of the three options: None, Partial and Full.

Using an auxiliary ringer

An auxiliary ringer is a separate device that has to be connected to Norstar. Refer to the section on installing optional equipment in the *Modular ICS 7.1 Installer Guide*.

Turning the auxiliary ringer for a telephone on or off

Use system programming to turn an auxiliary ringer on or off.


- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show at Terminals&Sets.
- 5. Enter the internal number of the telephone you want to program and press Show . The display reads Capabilities.
- 6. Press Show .
- 7. Press Next until the display reads Aux. ringer.
- 8. Use <u>CHANGE</u> to select Y (Yes) or N (No).

Your installer or customer service representative can program the auxiliary ringer to start ringing for incoming lines as part of Ringing Service.

Using Host System dialing signals

You can access host systems, such as private branch exchanges (PBX) from Norstar by using host system signaling features (known as end-to-end signaling). These features either send a special signal to the host system or allow you to program delays required by host systems in external autodial or speed dial sequences.

Link



If your Norstar system is connected to a private branch exchange (PBX), you can use a Link signal to access special features. On some telephones, Link is called FLASH.

The Link signal can be included as part of a longer stored sequence on an external autodial button or in a speed dial code. The Link symbol (■■) uses two of the 24 spaces in a dialing sequence.

Preventing a telephone from using Link

Link can be restricted at individual telephones by using system programming.

- 1. Place the programming template over the appropriate buttons of the programming telephone.
- 2. Press 🔄 ¥ ¥ 2 6 6 3 4 4.
- 3. Press 2 3 6 4 6 (the default System Coordinator password).
- 4. Press Show and enter the internal number of the telephone you want to program.
- 5. Press Show . Capabilities displays.

- 6. Press Next three times. The display reads Restrictions.
- 7. Press Show twice.
- 8. Press Next three times. The display reads Allow link:
- 9. Press <u>CHANGE</u> to choose Y (Yes) or N (No).



Tip - If your Norstar system is connected to a private branch exchange (PBX), program Link onto a memory button for one-touch access.

Pause

Ø 7 8

The Pause feature enters a 1.5-second delay in a dialing sequence on an external line. This is often required for signaling remote devices, such as answering machines, or when reaching through to PBX features or host systems.

You can program more than one pause in an external autodial or speed dial sequence.

The Pause symbol () uses one of the 24 spaces in a dialing sequence.

For pulse dialing,	★ inserts a	1.5-second	pause i	into 1	the
dialing sequence.					

Long Tones

The Long Tones feature allows you to control the length of a tone so that you can signal devices such as fax or answering machines which require tones longer than the standard 120 milliseconds.

- 1. While on a call, press 🙆 🖲 🖲 .
- 2. Press the dialpad buttons to produce the appropriate tones. Each tone sounds for as long as you hold down the button.

Long tones can be used on any call except a conference call. You can use internal lines of the Norstar system to activate a device connected to an analog terminal adapter (ATA) in another area of your office, or external lines to access devices outside the Norstar system.

Digital Mobility phones provide a static three-second DTMF tone when this feature is activated.

Displays

Lon9 Tones:

At the appropriate time, press any dialpad button. Hold each button down for as long as necessary. Press 😰 or 💽 to cancel Long Tones.

Programmed Release



The Programmed Release feature performs same function as in a programmed dialing sequence. When the system encounters Programmed Release in a dialing sequence, it stops dialing and hangs up the call.

The Programmed Release symbol (**2b**) takes up two of the 24 spaces in a programmed dialing sequence.

The system ignores any digits or commands that follow a Programmed Release in a programmed dialing sequence.

Run/Stop

Ø ¥ 9


Run/Stop inserts a break point into a sequence of dialed numbers or characters used for automatic dialing. This may be necessary when you are connecting to a PBX or similar host system.

For example, you can call a company with an automated attendant that instructs you to dial the internal number you need. You can program the company number, a Run/Stop, then the internal number on one external autodial button. Press the autodial button once to dial the company number. When you hear the automated attendant, press the autodial button again to dial the internal number.

The Run/Stop symbol (**1**) uses one of the 24 spaces in an autodial or speed dial sequence.

You can include up to three Run/Stop commands in a dialing string. The system ignores a fourth Run/Stop, and any digits or commands that follow it in a programmed dialing sequence.

Wait for Dial Tone



Wait for Dial Tone causes a sequence of numbers to pause until dial tone is present on the line before continuing to dial. This is useful if you must dial a remote system and then wait for dial tone from that system before dialing the rest of your number.

The Wait for Dial Tone symbol (**DS**) uses two of the 24 spaces in an autodial or speed dial sequence.

Displays

Invalid code

You have entered a code that can be used only in a programmed autodial or speed dial sequence, not on a call you dial directly. Programmed Release and Run/Stop are for use in programmed dialing sequences only.

Using tone dialing for a call

If your external telephone lines use tone dialing, you can temporarily switch to tone dialing by pressing # after selecting the line. Tone dialing allows your Norstar telephone communicate with devices and services that respond to tone signals, such as automatic switchboards, and fax or answering machines.

Using your Norstar system from an external location

You can use the lines and some of the features of a Norstar system from outside the system. You can do this over the public telephone network when you are away from the office, or you can call from another system, over a private network.

An example of how remote access works is a sales representative who spends a lot of time out of the office and who needs to make long distance calls to the European office. Your Norstar system has a leased line to Europe with reduced transatlantic charges. You provide the sales representative with a Class of Service (COS) password that gives access to the transatlantic line. The sales representative can then telephone into the Norstar system from a hotel, enter their Class of Service password, and use the leased transatlantic line to make calls. Remote users can access Norstar lines, line pools, the page feature, and remote administration, if that features is enabled through Software Keys. The exact facilities available to you through remote access vary, depending on how your installer or customer service representative set up your system.



Tip - If the loop start line used for remote access is not supervised, auto-answer does not function and the caller hears ringing instead of a stuttered tone or the system dial tone.

Controlling access to your Norstar system

It is important to maintain the security of your Norstar system by limiting access to authorized users and limiting those users to the features they need.



Remote users can make long distance calls.

Remember, a remote user can make long distance calls that are charged to your company and can make page announcements in your office unless you create the proper restrictions for external access lines.

Direct inward system access (DISA)

Control access to your Norstar system with direct inward system access (DISA). Access to your Norstar system from the public telephone network should always be controlled with DISA. If your installer or customer service representative programs the line used for remote access to answer a call automatically and wait for a DISA internal number, callers hear a stuttered dial tone and must enter a Class of Service password before they are allowed into the system.

Class of Service (COS)

To control the level of telephone service a remote user can access, your installer can assign a remote filter and remote package to the line used for remote access. The remote filter restricts the numbers that can be dialed on the line, and the remote package restricts the use of line pools and the page feature. To change the restrictions for the line, the user can enter their Class of Service (COS) password when the system answers with DISA, or can dial the DISA internal number and enter their Class of Service password.

Maintaining security

To maintain the security of your system, the following practices are recommended:

- Warn anyone to whom you give the remote access number, to keep it confidential.
- Change Class of Service passwords often.
- Warn anyone to whom you give a Class of Service password, to remember it and not to write it down.
- Remove the Class of Service password of anyone who leaves your company.

Accessing Norstar remotely over the public network

- 1. Dial the Norstar system remote access number.
- 2. When you hear a stuttered dial tone, enter your COS password.
- 3. Wait for the system dial tone.

To use the system remotely, you must use a telephone with tone dialing to call the system.

Remote access is possible only on lines that your installer or customer service representative programs to auto-answer calls.

To use features on a remote Norstar system, press * followed by the feature code. Even if you are calling from a Norstar system, such as within a private network, press * instead of 2.

In certain situations, you may experience lower volume levels when using Norstar remotely.

Tones

You may hear some of the following tones while accessing Norstar remotely.

Tone	What it means
Busy tone	Dialed a busy line pool access code. You hear system dial tone again after five seconds.
Norstar system dial tone	You may use the Norstar remotely.
Fast busy tone	You have done one of the following
	 Entered an incorrect COS password. Your call is disconnected after five seconds.
	 Taken too long while entering a COS password. Your call is disconnected after five seconds.
	 Tried to use a line pool or feature not permitted by your Class of Service. You hear system dial tone again after five seconds.
	 Dialed a number in the Norstar system which does not exist. Your call is disconnected after five seconds.
Stuttered dial tone	Enter your COS password.

Using Class of Service (COS) passwords

Class of Service passwords permit controlled access to system resources both by internal and remote users. When you enter a Class of Service password at a telephone, the restriction filters associated with your Class of Service password apply, rather than the normal restriction filters. Similarly, when a remote user enters a Class of Service password on an incoming autoanswer line, the restriction filters and remote package associated with their Class of Service password apply, rather than the normal restriction filters and remote package. COS passwords are programmed by either your customer service representative or installer.

Users should memorize their COS passwords instead of writing them down. Typically, each user has a separate password. Several users can share a password or one user can have several passwords.

Individual COS passwords should be deleted when an employee leaves the company. Group COS passwords should be changed if one of the group members leaves the company.

Changing your Class of Service

You must enter a Class of Service password each time you want to make a call that is normally restricted on a line or telephone.

To change the restriction filters on a line or telephone:

- 1. Press @ 6 8.
- 2. Enter your six-digit COS password.

COS passwords allow you to define individual passwords and determine the restriction filters, and remote package associated with each.



Tip - If you use your Norstar system from outside the office, you may have to enter a Class of Service password to gain access to the system. See Using your Norstar system from an external location on page 231.

Displays

	(Blank display) Enter your password. It is not shown on the display.
Invalid Password	You have entered a password that is not programmed into your system.

General System features

The following features are available for the entire Norstar system.

Set profile

Set profile allows you to view but not change the programming settings for each Norstar telephone. You can access Set Profile from any two-line display system telephone, even while you are on a call.

- 2. Enter the internal number of the telephone whose programming you want to review.
- 3. Use <u>BACK</u>, <u>SHOW</u> and <u>NEXT</u> to navigate through the settings.

Line profile

Line profile allows you to view but not change the programming settings for each Norstar line. You can access Line Profile from any two-line display system telephone, even while you are on a call.

- 2. Enter the number of the line whose programming you want to review.
- 3. Use <u>BACK</u>, <u>SHOW</u> and <u>NEXT</u> to navigate through the settings.

Pulse or tone dialing

If your external lines use pulse dialing, you can switch temporarily to tone dialing to communicate with devices such as answering machines, to access the features that PBX systems may offer, or to use another Norstar system remotely.

Press # while on an active line. Once you hang up, your telephone returns to pulse dialing.

Disconnect supervision

When Disconnect Supervision is assigned to a line, the Norstar system monitors it to detect if an external caller hangs up. This allows the system to release the line for other uses. Your installer or customer service representative assigns disconnect supervision.

Hunt Groups

Your Norstar system allows you to establish Hunt Groups. Hunt Groups are a group of system digital phones which can be called by a single directory number. The Hunt Groups feature ensures calls are easily routed to the appropriate people.

You can also monitor hunt group calls using the Silent Monitoring feature. The Digital Mobility phone, however, cannot be used to as a supervisor set, although it can be assigned as a hunt group member.

For more information about Hunt Groups and the Silent Monitoring feature see *Programming Hunt Groups* on page 165.

Internal numbers

Each telephone in the Norstar system has its own internal number. The length of internal numbers in your system can be from three to seven digits. All numbers in your system are the same length. Your installer or customer service representative sets the length of internal numbers, called the DN length. The default DN length is three.

To find out your internal number, use the Button Inquiry feature ($\textcircled{2} \\ \textcircled{3} \\ \end{array}}$

Line assignment

Any of the lines in your system can be assigned to any of your telephones. Your installer or customer service representative assigns lines to telephones in Configuration programming, under Terminals&Sets. Lines can be assigned to appear only, appear and ring, or to ring only.

Usually, only the lines that are appropriate for a particular person appear at their telephone. When a line is assigned to a telephone, it is automatically given a line button on that telephone, if a button is available.

Calls on lines that ring, but which do not appear at a telephone, are presented at an intercom button.

The 7000 and 7100 digital phones and Digital Mobility phones do not have line buttons or visible intercom buttons. Calls assigned to these telephones must be set to Ring only. You may be able to answer a call on a line that does not appear or ring at your telephone. To pick up such a call, use Call Pickup, Call Park, or Trunk Answer.

A telephone may have buttons assigned for lines 001 to 003, but have only lines 001 and 002 programmed to ring as well. An incoming call on any of the three lines causes a line button indicator to flash, and the telephone can be used to answer the call. This is especially useful for people who monitor other telephone lines, but want only their own lines to ring.

Target line

A target line is used to route a call directly to a particular telephone or group of telephones. Target lines are used only for incoming calls. A single incoming line may provide connections to several different target lines. This allows each person or department in the office to have their own number without having a separate external line for each number.



Tip - *The maximum number of target lines available in the fully expanded XC system is 224.*

Maxi system: lines 157-284

Expanded: lines 157-380



Privacy issue

You can set a target line to Private (default is Public), however, such features as Call Pickup can still answer these lines at remote telephones.

Line pools

A line pool allows each telephone access to external lines from a group (or pool) of external lines. You can access such lines by pressing an intercom button and entering a line pool access code or a destination code, or by pressing a memory button programmed with the line pool feature code and a line pool access code.

Overflow call routing

If a call comes in for a target line that is busy, Norstar routes the call to the prime telephone for that target line. If there is no prime telephone assigned to the target line, or if a call cannot be directed to a target line, the call goes to the prime telephone for the external line used.

Overflow routing for incoming calls is used with the Routing Service programmed by your installer. A Service must be active for overflow routing to be in effect. Overflow routing is not available in Normal service.



Tips - When you make a call and the programmed route is busy, you hear the expensive route warning tone and see a display indicating that an expensive route is being used. To avoid using the normal, expensive route, release your call.

Because overflow routing directs calls using different line pools, a call may be affected by different line filters when it is handled by overflow routing.

If you are not sure how the filters are assigned, refer to the Programming Record for a description of line filters and for a list of line assignments.

Telephones with no line buttons

The 7000 and 7100 digital phones and the Digital Mobility phone do not have line buttons, therefore, they work differently from other Norstar telephones.

- Where other telephones can require that you select a line button to answer a call, on the these telephones you simply pick up the receiver.
- Where other telephones require you to select a line button to take a call off hold, you press Hold on the these telephones.
- Also on these telephones, you can answer a second call by pressing or R (Recall). Your active call is put on hold and you are connected to the waiting call. You can have no more than two calls at a time.

There is no handsfree button on these telephones. When applicable, special instructions are included with each feature description.

Memory buttons

Memory buttons are the buttons beside the main dialpad on the digital telephones. Some telephones have two rows of memory buttons, others have only one row. The 7100 digital phone has only one memory button.

Memory buttons can be configured as answer DNs, autodial, line, and programmed feature buttons. Line, intercom and answer buttons must have indicators, and are programmed by the system administrator.

One-line display

The 7100 and 7208 digital phones have a one-line display.

Other telephones have a second line on the display which shows the functions of the three buttons directly below it. These indicators are known as display buttons.

Some display buttons, such as <u>TRANSFER</u> and <u>ALL</u>, are simply shortcuts which are not available on a one-line display.

Other display buttons, such as \underline{OK} and \underline{SHOW} , perform essential functions. For a one-line display telephone, use the following buttons instead of these display buttons.

Substitutes for display buttons

Display button	Dialpad button	Display button	Dialpad button
<u>0K</u>		<u>CANCEL</u>	#
<u>QUIT</u>	T	<u>VIEW</u>	#
<u>add</u>	*	<u>OVERRIDE</u>	#
<u>SHOW</u>	#	<u>BKSP</u>	

All displays listed in this book are shown as they appear on the two-line display.

Prime line

Your telephone can be programmed to select an internal or external line or a line pool automatically whenever you lift the receiver or press the handsfree button. This is your prime line.

Private lines

A private line is exclusive to a particular telephone. Calls that are put on hold or left unanswered on a private line cannot be picked up at any telephone except the prime telephone.

Volume bar

The volume bar controls the volume of the receiver, telephone ringer, handsfree speaker, and headset. Press either end of the volume bar (*) ** to adjust the volume.

Using the alarm telephone

An alarm telephone displays Modular MICS system alarm codes, should they occur. Alarm telephones are system digital phones with two-line displays that are specifically assigned by the installer to receive system alarm codes.

Reporting and recording alarm codes

If an alarm message appears on the alarm telephone display:

- 1. Record the alarm number.
- 2. Press <u>TIME</u> and record the time displayed.
- 3. Call your installer or customer service representative and report the alarm code.
- 4. After speaking to your installer or customer service representative, press <u>CLEAR</u>.

Displays

Alarm:	61-4-2
TIME	CLEAR

Report this alarm and the time it occurred to your installer or customer service representative.

Testing the telephone

If you suspect something is wrong with a button, the speaker, the displays, or some other part of the telephone hardware, you can do a quick test to see which part of the telephone is broken.

Digital mobility phones do not use the following procedures. They may have internal tests. Refer to the user card that came with the handset.



Tip - Ensure that the function of a button matches its label by pressing ♥ ★ ○ and then pressing the button to see its function.

You can end the telephone testing session anytime by pressing or , unless you are testing those buttons. The test feature times-out after 30 minutes of no activity.

Testing the telephone display

Use a display test if you suspect that one of the indicators on the telephone is not working.

- 1. Press 🔊 8 0 5. The display reads Display test.
- 2. Press **TEST** or **Solution** to go ahead with a display test.
- 3. Adjust the contrast for the telephone display so you are able to see the test results clearly. Enter a number to change the contrast or press <u>DOWN</u> and <u>UP</u>.
- 4. Press OK or \Box to go ahead with the test.

During the test, the display should be filled with solid, dark blocks and all the indicators next to the buttons on the telephone should be turned on. Attachments, such as Key Indicator Modules (KIMs) that are attached to the telephone should be completely lit. You lose any information that was showing on the display before the test started.

Pressing any button ends the test.

Testing the telephone buttons

- 1. Press 😰 8 0 5, then # or <u>NEXT</u>.
- 2. Press <u>TEST</u> or \frown to go ahead with a button test.
- 3. Press the button to see its function. If the button you pressed uses an indicator, it turns on when you test the button.
- 4. Pressing the **r** button puts **R1s** button on the display briefly and returns you to the **Button test** display.

Testing the speaker in the telephone handset

The handset test is not available if you have a headset plugged into the telephone.

- 1. Press @ 8 0 5, then # or <u>NEXT</u> twice. The display reads Handset test.
- 2. Press **TEST** or \frown to go ahead with a handset test.
- 3. Pick up the handset and listen. Dial tone sounds through the handset at maximum volume. The volume is reset to maximum only while the test is going on.
- 4. Pressing any button or hanging up ends the test.

Testing the telephone headset

The headset test is not available to telephones that do not have a headset jack or a headset plugged in.

- 1. Press 🔊 🖲 🔘 🕤, then # or <u>NEXT</u> until the display reads Headset test.
- 2. Press <u>TEST</u> or **Solution** to go ahead with a headset test.

You should hear dial tone through the headset. The volume is reset to a default level during the test.

3. Pressing any button ends the test.

Testing the telephone speaker

- 1. Press 2805, then # or <u>NEXT</u> until the display reads Speaker test.
- 2. Press <u>TEST</u> or \frown to go ahead with a speaker test.

A page tone sounds through the telephone speaker at the maximum volume. The volume returns to its previous setting when you end the test.

3. Pressing any button ends the test.

Testing the power supply to a telephone

- 1. Press (2) 8) (0) 5), then (#) or <u>NEXT</u> until the display reads Power test.
- 2. Press <u>TEST</u> or **u** to go ahead with a power supply test.

You should see all the indicators on the telephone go on and hear ringing at maximum volume. When the test has ended, the display should briefly show **Power OK**.

The test lasts for five seconds or until you press a button.

Common feature displays

5	
Access denied	Someone is already using programming, or the feature you are trying to use is not compatible with the configuration of the telephone or line.
Denied in admin	You have tried to use a feature, but you have not been given access to it in administration programming.
Feature timeout	You have taken more than 15 seconds to press a button in response to a display.
Inactive feature	You have entered a feature code that is used by an application program that your system does not have.
Invalid code	You have entered an invalid feature code.
Not available	You have tried to use a feature that is not available in the present setup of your Norstar system.
Set locked	You cannot use the feature you have chosen because your telephone is locked. See <i>Using Set lock</i> on page 225.
1234567890123 VIEW <u>→</u> OK	Press # or press <u>UIEW+</u> or <u>+UIEW</u> to view a number that is too long to fit on the display. Press • or <u>OK</u> when you are finished.
5	This indicates a long distance call. (May be available with Call Display services.)
239>221	You are receiving an internal call from telephone 239 forwarded by telephone 221 or you have an Answer button for telephone 221 and an internal call from 239 is ringing on 221.
221	You are connected to an internal call.

You may see the following displays when you use a feature.

TRANSFER

Press TRANSFER to transfer the call.

221 callin9	You are receiving a call from telephone 221.
Call 221? YES NO	You have received a Ring Again offer for a call to an internal telephone. Press the flashing internal line button or $\underbrace{\text{YES}}$ to call the number again. On 7000 and 7100 digital phones, just lift the receiver. Otherwise, press $\underbrace{\text{ND}}$ or wait 30 seconds for the Ring Again offer to expire. For an explanation of Ring Again, see Using Ring Again on page 84.
Camped: 221 CALLBACK	The person to whom you camped the call did not answer it. The call has come back to you. Press the line button or <u>CALLBACK</u> to reconnect to the call.
Line001 TRANSFER	You are connected to an external call. Press <u>TRANSFER</u> to transfer the call.
Line001>221	You are receiving an external call forwarded from telephone 221 or you have an answer button for telephone 221 and an external call is ringing on that telephone.
Line001 transfer	The call on line 001 is being transferred to you by someone else in your Norstar system.
Line001 waitin9	A camped call is waiting. Press the line button or use Call Queuing to answer the call. Press the Hold button if you have 7000 and 7100 digital phones or Digital Mobility phones.
No calls waitin9	You tried to use Call Queuing but no call was ringing at your telephone.
No line selected	There is no call ringing at your telephone. If you have a flashing line button but your telephone is not ringing, press the line button to answer the call on that line.
Not in service	The telephone to which you directed a call is not in service or is otherwise unavailable. The call is returned to your telephone.

Parked call CALLBACK	No one answered the call you parked. The call has come back to you.
Pick up receiver	You have used the Call Queuing feature without picking up the receiver. Auto handsfree has not been assigned to your telephone. You must use the receiver or the button marked handsfree/mute to answer a call.
Priority> 221 BLOCK	You are receiving a priority call. If you are on another call, inform the person you are speaking to that you are about to put the call on hold. Press the flashing line indicator of the priority call or wait until the call connects automatically (eight seconds). The priority call goes through when you hear the next beep. Your active call is placed on Exclusive Hold. It is reconnected automatically when the priority call ends, unless you transfer the priority call, in which case you must press the line button of your original call to reconnect). Use DND (© 8 5) or press <u>BLOCK</u> to reject a priority call.
Release a call	You have no free line buttons on which to receive a call. Release one of your current calls and try again to answer the incoming call.
Use line Pool? YES NO	You have received a Ring Again offer for a line pool. Press the flashing internal line button or <u>YES</u> to use the line pool. On 7000 and 7100 digital phones, just lift the receiver. Otherwise, press <u>ND</u> or wait 30 seconds for the Ring Again offer to expire.
Hold or release	You cannot program a feature button while you are on a call.
Release calls	You have tried to use a feature while you were on a call or had calls on hold. Release the call or calls, before using the feature.
Line in use	The line is in use. Make the call using normal methods or wait until the line is free.

No button free	You have tried to make, receive or pick up a call when no line button was available. Some features require you to have a button free. Releasing calls can free up line buttons.
Make calls first	The feature you tried to use requires you to be on an active call at your telephone. This display appears when information about a call has been cleared by a system reset.
No free lines	All the lines or line pools available to the telephone are in use. This display appears when you have tried to dial an external number or use a feature that conflicts with the lines, line pools or prime line used by the telephone. This must be corrected by your customer service representative or installer.
No line selected	The telephone has been set up to dial an external number on a prime line but the telephone does not have a prime line. This must be corrected by your customer service representative or installer.
In use:221	You have tried to program redirection while someone else is programming redirection. Only one person can program line redirection at a time.
Incomin9 only	The line you are trying to use for redirecting calls is for incoming calls only. Choose an outgoing line.
9_ QUIT BKSP OK	Continue entering digits. Press (*)(*) or <u>BKSP</u> to delete incorrect digits. Press [•] or <u>0K</u> when you are finished.
Invalid number	You have entered an invalid line pool code or an invalid destination code.
Line denied	You have selected a line that is private to another telephone.
Restricted call	The destination you have chosen for line redirection is restricted.

Glossary

Symbols

7000 digital phone This telephone has a no display. It does have four memory buttons. (Note this telephone is only supported on systems running Profile 2, 3, or 4).

7100 digital phone: A telephone with a single line display and one programmable memory button without an indicator.

7208 digital phone: A telephone with a single-line display and eight programmable memory buttons with indicators. This telephone has a separate mute key and supports a headset

7316 digital phone: A telephone that has a two-line display, three display buttons, 16 programmable memory buttons with indicators, and 12 memory programmable buttons without indicators. This telephone has a separate mute key and supports a headset.

7316E digital phone: This telephone has the same functionality as the 7316 digital phone, with some additional features, such as a separate handsfree key, special display icons (when running on a MICS 6.1 or newer system), and CAP capability by adding KIMs.

7406 digital phone: The 7406 base station desk set can support three handsets, which function like the other digital phones on the system. It has six programmable memory keys.

7420/7430: These Digital Mobility phones allow you to set up an extended cell of base stations that allow users to contact the system from a variety of locations within a site.

Α

access code: Different sequences of characters used to gain access to these Norstar features: Line pools, Call park, external lines, Direct-Dial telephone, Auto DN, and DISA DN. Destination codes are also a form of access code.

alarm code: A number that appears on the alarm telephone display, informing you that the ICS has detected a fault in the system.

alarm telephone: A telephone that is designated to receive reports of Norstar system problems. This function is usually assigned to a prime telephone, but this can be changed under Feature settings in Sus programmong.

Answer button: A telephone button with an indicator that is used to monitor another telephone. The answer button indicates incoming calls destined for the other telephone. Someone working at a telephone with answer buttons (an attendant, for example) can receive all ringing and visual indication of incoming calls for other telephones, and answer those calls when necessary.

One telephone can have up to four Answer buttons. An Answer button is automatically assigned to a telephone when that telephone is assigned an Answer DN.

Answer DN: The internal or directory number (DN) of a telephone that is monitored by an Answer button. You can assign up to four Answer DNs to a telephone under Line Access in Terminals and Sets programming.

Autobumping: 2815

A feature that determines what the system does with new Call Log items when your Call Log is full. When Autobumping is on, a new log entry causes the oldest entry to be deleted. If Autobumping is off, your Norstar system does not log calls when your log is full.

autodial button: A memory button that, if programmed, provides one-touch dialing of external or internal numbers.

autolog options: A feature that allows you to select the type of calls that are stored in your Call Log. You can choose to log calls that were not answered by anyone within the system, to log calls that were unanswered at this telephone but which were answered elsewhere in the system, to log all calls answered and not answered at this telephone, or to not have calls automatically logged.

Automatic Dial: A feature that allows you to dial without having to pick up the receiver or select a line. You must have a prime line to use Automatic Dial. Automatic Dial is assigned under Dialing options in Terminals&Sets programming.

Automatic handsfree: A feature which automatically activates handsfree operation when you make or answer a call. Automatic handsfree is assigned under handsfree in Terminals&Sets programming.

Automatic Hold: A feature that automatically places an active call on hold when you select another line.Automatic Hold (Full AutoHold) is assigned in Lines programming.

Automatic Privacy: See Privacy.

Automatic Daylight Savings

Time: A feature that switches the system to standard or extended daylight savings time at pre-programmed dates. It is programmed under AutoDS time in System programming, Feature Settings.

Automatic Telephone

Relocation: A feature that allows a telephone to retain personal and system programming when the telephone is plugged into a different Norstar modular jack. Automatic Telephone Relocation is enabled under Set relocation in Sus programmong.

auxiliary ringer: A separate external telephone ringer or bell which can be programmed to ring when a line or a telephone rings. An auxiliary ringer may be programmed to ring only when the system is in a particular schedule. Programming of an auxiliary ringer is done in Services programming after the feature has been enabled under Capabilities in Terminals&Sets programming.

В

Base station: A portable handset component that is mounted on walls and ceilings to provide a radio link to an office or other area where portable telephones are used. Each base station houses two radios that allow portables to send and receive calls through the ICS.

Background Music: A feature that allows you to hear music from the speaker of your Norstar telephone. It is available only if a music source has been attached to the ICS and the feature has been enabled under Feature settings in Sus programma.

Basic password: A one- to six-digit password that prevents unauthorized access to the most commonly-used telephone settings. The Basic password can be assigned and changed in Passwords programming.

Business series terminals These terminals were developed to replace the Norstar M-series terminals. Therefore, their functionality closely parallels the M-series terminals.

button caps: Interchangeable plastic caps that fit over the buttons of Norstar telephones. They are used to indicate the features programmed onto each programmable memory button. Button caps are either pre-printed or have clear windows that allow you to insert labels.

Button Inquiry: 😰 ¥ 🛈

With this feature you can check the function of each programmable button on your system telephone.

С

Call Duration timer: 2 7 7

A feature that allows you to see how long you spent on your last call, or how long you have been on your present call.

Call Forward: (2) 4

A feature that forwards all the calls arriving at your telephone to another telephone in your Norstar system. To have calls forwarded outside the system, use Line Redirection.

Call Forward No Answer: A feature that forwards all calls arriving at your telephone to another designated telephone in your Norstar system after a specific number of rings. Call Forward No Answer is assigned under Capabilities in Terminals&Sets programming.

Call Forward On Busy: A feature that forwards all calls at your telephone to another designated telephone if your telephone is busy. This feature is assigned under Capabilities in Terminals&Sets programming.

Call Forward Override: An

automatic system feature that allows you to call someone and ask them to stop forwarding their calls to you. **Call Information:** (2) 8 1 1 Call Information allows you to display information about incoming calls. For external calls, you can display the caller name, telephone number and the line name. For an internal call, you can display the name of the caller and the internal number. You can obtain information about ringing, answered, or held calls.

Call Log: 2812

Enter your Call Log to view a record of incoming calls. The log could contain the following information for each call: sequence number in the Call Log, name and number of caller, long distance indication, indication if the call was answered, time and date of the call, number of repeated calls from the same source, and name of the line that the call came in on. See Autobumping, Autolog options, and Call Log for further information.

Call Park: (2) 7 4

With this feature you can place a call on hold so that someone can retrieve it from any other telephone in the Norstar system by selecting an internal line and entering a retrieval code.

The retrieval code appears on the display of your telephone when you park the call. You can park up to 25 calls on the system at one time.

Call Park Callback: See Callback.

Call Park prefix: The first digit of the retrieval code of a parked call. This digit cannot conflict with the first digit of any existing DNs, Line Pool access codes, the Direct-dial digit, or the external line access code. The default Call Park prefix digit is 1. It may be set to none, in which case Call Park is disabled. Call Park prefix is assigned under Access codes in Sus programma.

Call Pickup Directed: 276

A feature that allows you to answer a call ringing at any system telephone by entering the internal number of that telephone before taking the call. Call Pickup Directed is enabled under Feature settings in Sys prommong.

Call Pickup Group: See Pickup Group.

Call Queuing: (2) 8 0 1 If you have several calls waiting at your telephone, you can invoke the Call Queuing feature to answer them in order of priority. Priority is given to incoming calls, followed by callback and camped calls.

Callback: If you park, camp,

or transfer a call to another telephone and it is not answered there, it will ring again at your telephone. How long the system will wait before Callback occurs is set under Feature settings in Sus prgrmmng.

Camp-on: (2) 8 2

A feature that allows you to reroute a call to a telephone even if all the lines on that telephone are busy. To answer a camped call, use Call Queuing or select a line if the camped call appears on your telephone. Priority is given to queued calls. Note: Systems which use a centralized voice mail system attached to a Meridian 1, can provide this service to all nodes of the network.

Camp timeout: The length of a delay before a camped call is returned to the telephone that camped the call. The length of delay is set under Feature settings in Sus programma.

Central answering position

(CAP): A 7316E+KIM that provides additional memory buttons. An enhanced CAP (eCAP) is a 7316E+eKIM that has been designated as an eCAP under CAP-KIM assign in Sus prommong. The eCAP provides backup answering by supporting line appearances and multiple appearances of target lines as well as hunt group designators. An eCAP can be used to monitor the telephones within a Norstar system.

Class of Service (COS): The set of Norstar features and lines available to the user for a call. The Class of Service for a call is determined by the restriction filters and remote access packages assigned to the telephone in Lines programming. The Class of Service for a call can be changed by entering a sixdigit Class of Service password. (Internal users cannot change their access to features with a COS password, only their restriction filters.) Class of Service and Class of Service Passwords are assigned in Passwords programming. See Remote Access.

Class of Service password:

A six-digit code that allows you to switch from your current Class of Service to one that allows you to dial numbers prohibited by your current Class of Service.

Conference: 🖉 3

A feature allows you to establish a three-person call at your Norstar telephone.

contrast adjustment: 😰 ¥ 7

Allows you to set the contrast level of your telephone display.

control telephone: A control telephone can place the lines for which it has responsibility in or out of a Service Mode.

The direct-dial telephone is a control telephone for directing calls to the extra direct-dial telephone. A telephone is made a control telephone and has lines assigned to it in Services programming.

Coordinated Dialing Plan: (CDP)

This dialing plan uses a steering code to identify each node in a private network. This one-digit code becomes part of the set DN number rather than a separate code. In this way, system A might have codes in range 2100 to 2999, whereas system B might have codes in range 3100 to 3999.

COS: See Class of Service.

cursor: A short horizontal line that appears on the system telephone display to indicate that characters can be entered using the dialpad.

D

data terminal: A device, such as a modem, that can be used to transfer data instead of sound over a telephone network. You cannot use Norstar programming to set up such devices. See the documentation that accompanies the device.

date: See Show Time or Time and Date.

defaults: The settings for all Norstar features when the system is first installed. Settings are changed from their defaults in programming. In this manual, default settings are shown in **bold** text.

Delayed Ring Transfer (DRT) to

prime: After a specified number of rings, this feature transfers an unanswered call on an external line, to the prime telephone associated with that line. This feature is activated under Feature settings in Sus prommng.

destination code: A two- to sevendigit number that the system interprets and then translates into the digits that you want dialed out. Both the code and its associated dialed digits are assigned under Routing service in Services programming. **dialing restriction:** See Restriction filter.

dialing modes: 😰 ¥ 8 2

This feature allows you to set the dialing mode of your telephone. Norstar supports three dialing modes: Automatic Dial, Pre-Dial, and Standard Dial. All three modes support on-hook dialing, meaning you can dial a call without picking up the receiver. The special features of the Automatic and Pre-Dial modes are available only when you dial on-hook.

Digital Mobility phones: These telephones connect to the system through station modules connected to a Nortel Networks Digital Mobility controller.

Direct-dial: A feature that allows you to dial a designated telephone in your Norstar system with a single digit, such as the main receptionist. As many as five direct dial sets can be established. Each telephone in the system is assigned to one direct-dial telephone. There is a single, system wide digit for calling the assigned direct-dial telephone of any telephone. Direct-dial telephones are established in System programming. Telephones are assigned to a direct-dial telephone under Carabilities in Terminals&Sets programming.

Direct-dial #: A digit used systemwide to call the Direct-dial telephone. The digit is assigned under Access codes in Sus prgrmmng.

Direct-dial number: The digit used to call the direct-dial telephone.

Direct inward system access (**DISA**): The feature that allows remote users to dial directly into the Norstar system and use Norstar features. Callers will hear stuttered dial tone and will be required to enter a Class of Service password to gain access to the system. See Remote Access. **directed pickup:** See Call Pickup Directed.

Directory number (DN): A unique number that is automatically assigned to each telephone or data terminal. The DN, also referred to as an internal number, is often used to identify a telephone when settings are assigned during programming.

Default DN assignments start at 221.

DISA DN: The received number assigned to the Norstar direct inward system access facility. If a caller dials a number that is assigned to the DISA DN, the caller hears stuttered dial tone and must enter a Class of Service password. Once the password is accepted, the caller hears system dial tone and can use Remote Access features. See Remote Access.

Disconnect Supervision: A setting that enables the Norstar system to detect if an external caller hangs up. Once an external caller hangs up, the Norstar system can disconnect its line. Disconnect Supervision is enabled under Trunk/Line data in Lines programming.

display: A liquid crystal display (LCD) on the telephone that guides you through feature operation and programming.

display button: Two-line display telephones are equipped with three buttons located directly beneath the display. During feature operation or programming, some or all of these buttons may be used to provide further options. If an option is available, it is shown in the bottom row of the two-row display, directly above the corresponding display button. Display buttons are represented in this manual as underlined capital, such as <u>OK</u>.

DN: See Directory number.

Do Not Disturb: 😰 8 5

A feature that stops calls from ringing at your telephone. Only Priority Calls will ring at your telephone. A line button will flash when you receive a call, but the call will not ring.

DTMF: See Dual tone multifrequency.

dual tone multifrequency: Two distinct telephone signaling tones used for dialing.

Ε

Emergency 911 dialing: The capability to access a public emergency response system by dialing the digits 9-1-1. State and local requirements for support of Emergency 911 Dialing service by Customer Premises Equipment vary. Consult your local telecommunications service provider regarding compliance with applicable laws and regulations.

emergency telephone: A single-line telephone, also referred to as a 500/2500 telephone, that becomes active when there is no power to the ICS.

evening schedule: See Schedules, and Services.

event message: Event messages are stored in the system log and displayed during a Maintenance session. They record a variety of events and activities in the Norstar system.

exceptions: See Overrides.

external call: A call to a destination outside the Norstar system.

External Call Forward: See Line Redirection.

external code: The number you dial to get an external line. By default it is 9, but this can be changed under Access codes in Sus programma. You do not always need an external code. It is primarily to support the 7000 and 7100

digital phones, and analog telephones connect to Analog Terminal Adapters or analog station modules.

external line: A line on your system telephone used for making calls to destinations outside the Norstar system.

external music source: See Music source.

external paging: A feature you can use to make voice announcements over an externally-mounted loudspeaker connected to the ICS. The external speaker is not a Norstar component and must be supplied by the customer.

F

feature button: Many Norstar features are invoked by pressing the Feature (>) button followed by a feature code. The feature button is also used to exit a feature.

feature code: A number that is used to activate a particular feature.

Feature programming: (▷) ★ ③ Allows you to program a feature code onto a memory button.

Forward: See Call Forward.

Full Autohold (on idle line): When this feature is on, if you select an available line and then do something that selects another line, the first line is put on hold. Full Autohold is enabled under Trunk/Line data in Lines programming.

Full handsfree: See handsfree.

G

Group Listening: (a) 8 (d) (2) A feature that allows you to have others in your office hear a caller through your telephone speaker. The caller hears you only when you speak into the receiver. They cannot hear other people in the office. You can cancel Group Listen for the current call. Group Listen is cancelled automatically when you hang up the Group Listen call.

Η

Handsfree:

A feature you can use to make calls without using the telephone receiver. Full Handsfree is activated under Capabilities in Terminals&Sets programming. When it is activated, a handsfree button is automatically assigned to the telephone.

Handsfree (HF) Answerback:

When activated, this feature automatically turns on the microphone at a telephone receiving a Voice Call so that the person receiving the call can respond without lifting the receiver. It is activated under Capabilities in Terminals&Sets programming.

Handsfree/Mute button: See handsfree.

Hardware: A section in programming that shows what equipment has been installed in the ICS. This section is accessed by the installer.

headset: A head-mounted or ear-mounted telephone receiver that is used instead of the hand-held receiver. Headsets are not Norstar components and must be supplied by the customer.

Held (Line) Reminder: A system telephone rings and displays the message On hold: LINENAM when an external call has been placed on hold for a certain period of time. The Held Line Reminder feature and Remind delay are set under Feature settings in Sys prgrmmng.

HF Answerback: See handsfree answerback.

Hold button: 💽

This button is used to suspend calls so that the person using the telephone can perform another task without disconnecting the caller.

Hook Switch Flash: See Link time.

Host system signaling: (Also referred to as end-to-end signaling.) System telephones can access a remote system or dial a number on an alternate carrier by means of host feature activation, such as Link, Pause and Run/ Stop.

Hospitality The Hospitality features allow business which use hospitality telephones, or room-based telephones, to control access, alarms, and maintenance duties through the telephones.

Hotline: This feature automatically calls a pre-assigned number when the telephone receiver is lifted or the handsfree/mute button is pressed. A Hotline number can be an internal or external number. Hotline is assigned under Capabilities in Terminals&Sets programming.

Hunt group: The hunt groups feature allows a group of sets to be called by a single directory number ensuring that calls are easily routed to the appropriate group.

I/C: An abbreviation of intercom.

ICS (integrated communication

system): The central hardware component in the Norstar system. The ICS has its own processor and memory, and provides a physical point of connection for the various types of devices, telephones, and expansion modules used in Norstar. The ICS can function on its own as a basic system (with 32 system telephones and up to 48 external lines), or with the addition of Trunk Modules (TM) that supports more external lines, or Station Modules (SM) that support more system telephones.

Integrated Services Digital

Network (ISDN): A digital telephone service that allows for a combination voice and data connection over a single, high-speed connection. ISDN service can operate over the same copper twisted-pair telephone line as analog telephone service.

intercom button: A button that provides access to internal lines used for calls within a Norstar system and access to external lines through a line pool or external code. A telephone may be assigned zero to eight Intercom buttons. This is done under Line access in Terminals&Sets programming.

intercom buttons: See Intercom button.

internal line: A line on your telephone dedicated to making calls to destinations inside your Norstar system. An internal line may still connect you with an external caller if you use it to access a line pool or to pick up a call using Norstar call handling features such as Call Park or Call Pickup Directed.

internal number: A number, also referred to as a Directory Number or DN, that identifies a Norstar telephone or device.

internal user: Someone using a system telephone within a Norstar system.

ISDN: See integrated services digital network.

ISDN DN: A directory number (DN) used by ISDN terminal equipment connected to the ICS. The system uses a maximum of 30 ISDN DNs.

Κ

Key indicator module (KIM) This

hardware unit allows you to expand the receive capability of a 7316E digital phone. You can configure the resulting CAP into an enhanced CAP (eCAP) to support lines, multiple appearances of target lines, and hunt group designators.

L

Last Number Redial: (2) 5

A feature that allows you to redial the last external number you dialed.

Fixed line:

A telecommunications line between two service points leased from a communications carrier for private use, usually incurring a monthly service rate. Fixed lines setting is used solely by data modules.

Least cost routing: See Routing service.

line: The complete path of a voice or data connection between one telephone (or other device) and another.

Lines: A programming section that allows you to assign settings to each trunk and external line. Lines programming can be done by an Installer or a System Coordinator Plus. A System Coordinator can program the name of a line.

Line number: A number that identifies an external line. The total number of lines depends on how many Trunk Modules are installed.

Line Pool: 264

A group of lines used for making external calls. Line pools provide an efficient way of giving a telephone access to external lines without taking up many line buttons. A line is assigned to be part of a line pool under Trunk. Line data in Lines programming.

Line Redirection: 🔊 8 4

A feature that allows you to redirect all calls on an incoming line to a destination outside the Norstar system. Once a line is redirected it cannot be answered within the Norstar system. The system may be set up to give a brief ring when a call comes in on a redirected line, under Capabilities in Terminals&Sets programming.

This feature differs from Call Forward in two ways: It redirects only external calls, not internal calls, and it redirects calls to destinations outside the system. Call forward redirects calls only to destinations inside the Norstar system. See Call Forward.

Link: 😰 7 1

If your Norstar system is connected to a Private Branch Exchange (PBX), you can use a Link signal to access special features. The Link signal can also be included as part of a longer stored sequence on an External Autodial button or in a Speed Dial code. The Link symbol (III) uses two of the 24 spaces in a dialing sequence.

Long Tones: (2) 8 0 8

A feature that allows you to control the length of a tone so that you can signal devices such as fax or answering machines which require tones longer than the standard 120 milliseconds.

Lunch schedule: See Schedules, and Services.

Μ

Malicious Caller ID (MCID) This feature is a European ETSI-based network feature that allows a user to use (2) 8 9 7 record the caller information at the service provider. **memory buttons:** Buttons that can be programmed to dial frequently used features or numbers automatically.

message: A feature that allows you to send a message to another Norstar user. The Message feature also allows you to know if you have any messages waiting and maintains a Message Waiting List to keep a record of your internal messages and your (external) voice mail messages.

Message Waiting Indicator: PRI lines can provide the signal that cause the set to display a message-waiting message, or light a lamp on the set to indicate a voice message.

Monitoring See Silent Monitoring.

Move Line buttons: (* 8 1 A feature that allows you to move assigned lines to different buttons (with indicators) on your telephone.

Music source: A radio or other source of music can be connected to the Integrated Communication System to provide music for the Music on Hold and Background Music features. A music source is not part of the Norstar system and must be supplied by the customer.

Ν

Names: Names can be assigned to System Speed Dial numbers, external lines, telephones, and service schedules. This is done in programming. You can use up to 16 characters to name a System Speed Dial number, and seven characters to name a telephone, line, or schedule. If a Name has not been assigned, the line number or DN will appear on the display instead of a name.

Network DN: A number supplied by the ISDN network service provider for ISDN terminal equipment. **Night schedule:** See Schedules, and Services.

0

On hold: A setting, programmed under Feature settings in Sus Frgrmmng, that controls whether external callers hear music, periodic tones, or silence when they are placed on hold.

overlay: See Programming overlay.

overflow: A setting in Routing Service that allows users to decide what path an outgoing call will take if all the lines used in a particular route are in use when the call is made.

Overrides: One component of a restriction filter. Overrides are numbers you can dial even if they are forbidden by a more general restriction. See Restrictions.

Ρ

Page: @ 6 0

A feature you can use to make announcements over the Norstar system. You can make page announcements over the telephone speakers and/or external speakers.

Page Time out: A setting that controls how long a Page Announcement can last. It can be assigned under Feature settings in Sys prgrmmng.

Page zone: An area in the office that receives internal page announcements independently of the rest of the office.

Each page zone is identified by a number. Telephones are assigned to page zones under Carabilities in Terminals&Sets programming.

Park prefix: See Call park prefix.

Park timeout: The time before an unanswered parked call is routed back to the telephone that parked it. Park timeout is configured under Feature settings in Sus prgrmmng.

Password: A password is a specific sequence of digits that you enter to gain access to Norstar programming, to override dialing restrictions, or to use remote access with DISA.

Passwords: A programming section that allows you to assign or change COS passwords, Call log passwords, or any of the programming passwords. Under Passwords programming, you can only modify the passwords for your level of programming.

Pause: (2) 7 8

A feature that enters a 1.5-second delay in a dialing sequence on an external line. This is often required for signaling remote devices, such as answering machines, or when reaching through to PBX features or host systems. The Pause symbol (♥) uses one of the 24 spaces in a dialing sequence. For pulse dialing, ★ inserts a 1.5 second pause into the dialing sequence.

PBX: private branch exchange.

Pickup Group: @ 7 5

A telephone can be placed into one of nine call pickup groups. A call ringing at a telephone within a pickup group can be picked up at any other telephone within the same pickup group. A telephone is assigned to a pickup group under Capabilities in Terminals&Sets programming.

Pool: See Line pool.

portable telephone: See Digital Mobility phones. portable telephone

Pre-dial: A feature that allows you to enter a number and check it on your telephone display before it is actually dialed. If the number is incorrect, you can edit it. The number is dialed only when you pick up the receiver or select a line.

Primary Rate Interface (PRI): An

ISDN interface which uses 23 B channels and a D channel (23B+D) for profiles 1, 3 and 4, and D channel (30B+D) for Profile2.

Prime line: The line on your telephone that is automatically selected when you lift the receiver, press the handsfree/mute button or use an external dialing feature.

A Prime Line is assigned to a telephone under Line access in Terminals&Sets programming.

Prime Set (prime telephone): A

telephone that provides backup answering for incoming calls on external lines. The prime telephone for a line will ring for any unanswered calls on that line. A prime telephone is assigned to a line under Trunk/Line data in Lines programming.

Priority Call: @ 6 9

If you get a busy signal when you call someone in your office, you can interrupt them for an urgent call. This feature is enabled for a telephone under Capabilities in Terminals&Sets programming.

Privacy: This feature determines whether a Norstar user may select a line in use at another telephone and join an established call. **Privacy** is enabled under **Trunk/Line** data in **Lines** programming, but can be turned on and off by users during individual calls.

Private line: See Private to.

Private Monitoring This feature allows a user with a two-line display telephone that has been designated as a supervisor telephone, to monitor Hunt group calls from external sources using $\textcircled{e} \times 550$.

Private network: A telephone network consisting of owned or leased telephone lines used to connect different offices of an organization independently of the public network.

Private Network Identifier (PNI) this is an identifying digit or set of digits assigned to each system in a private network with a Meridian system. These codes are provided by the Meridian system administrator when the node is brought on to the network.

Private to: Allows you to select the telephone that will use the line exclusively. The line cannot appear on any other telephone, except the prime telephone for that line. Private lines cannot be placed into line pools. Private lines are assigned under Trunk/Line data in Lines programming.

Programmed release:

★ 8 9 A feature that performs the function of the button in a programmed dialing sequence.

programming: Setting the way the Norstar system will work. Programming includes system-wide settings and individual telephone and line settings.

programming overlay: A paper template that is placed over the four memory buttons with indicators on the two-line display telephone during programming. The overlay labels indicate the special function that each of the four buttons takes on in programming. **public line:** An external line that can be assigned to any telephone and to many telephones. A line is assigned as Public under Trunk./Line data in Lines programming.

public network: The regular telephone network that connects most homes and businesses.

Public Safety Answering Point (**PSAP**): This is the first point of contact a caller reaches after dialing 911.

pulse/tone dialing: An external line setting for pulse or tone dialing. Pulse is the traditional method of dialing used by rotary-dial or push- button single-line telephones. Tone dialing allows telephones to communicate with other devices such as answering machines. Tone dialing is required to access the features that PBX systems may offer or to use another Norstar system remotely.

R

recall: See Link time.

receiver: The handset of a telephone.

receiver card: An abbreviated list of system feature codes that is stored under the telephone receiver. The card is found on a perforated sheet that comes with a system telephone.

Remind delay: A feature that causes a telephone to beep and display the message On hold: LINENAM when a call has been on hold for a programmable period of time. This period is the Remind delay.

Remote access: The ability to dial into a Norstar system from outside the system and make use of selected Norstar features. The lines, features, and dialing capabilities available to a remote user are determined by the Class of Service. If the remote access line is answered with DISA, the user must enter a Class of Service password to gain access to the Norstar system features.

remote access dial restriction: See Remote restriction.

Remote capability: A subset of Norstar features that are available to users connected through remote access.

Remote monitoring: A feature that allows an off-site technician with a PC call in and troubleshoot your system through the built-in modem.

Remote paging: This feature allows remote users to use the Norstar paging feature. Access to this feature is governed by the Class of Service for the call. See Remote Access and Class of Service.

Remote restriction: A restriction filter applied to a line in order to control which digits can be dialed during an incoming remote access call. It is the equivalent of a set filter for a remote user.

remote user: Someone who calls into a Norstar system from a telephone outside that system and uses Norstar features or lines. See Remote Access.

Restriction filter: Through a combination of restrictions and overrides, restriction filters prevent certain telephone numbers or feature codes from being dialed. Restriction filters can be applied to lines, sets, specific lines on a set, and to Class of Service passwords. The Norstar system can handle up to 100 restriction filters.

Restriction service: A Services section that allows you to assign alternate dialing filters to lines, telephones, lines on a particular telephone, and alternate remote filters to lines at specified times of the day and on specified days.

restrictions: One component of a Dialing filter. Restrictions are numbers you cannot dial when that dialing filter is in effect. See Exceptions.

Ring Again: 😰 2

A feature that can be used when you can't get through to someone on your Norstar system because their telephone is busy or there is no answer. Ring Again instructs the Norstar system to inform you when they hang up or next use their telephone.

ring group: A setting under Services that allows you to assign a number of different telephones to ring during one of the schedules.Up to 20 ring groups can be programmed by an installer or a system coordinator plus.

ring type: 😰 ¥ 6

A feature that allows you to select one of four distinctive rings for your telephone.

ring volume: [€] ★ 8 0 A feature that allows you to set the

volume at which your telephone rings.

ringing service: A Services section that allows you to make additional telephones ring at specified times of the day and on specified days.

Release button: Ends a call in the same way that hanging up the receiver does. The Release button may also be used to end programming, Maintenance sessions, and feature operations.

Routing: See Routing service.

Routing service: A programming section that allows outgoing calls to be directed automatically based on the numbers a caller dials. For Norstar systems linked in a network, routing can create a transparent or coordinated dialing plan. It can also be used to direct calls to the least expensive lines according to a Services schedule (sometimes called least cost routing).

Run/Stop: <a>♥ ♥ 9

A feature that creates a break point in a programmed external dialing sequence. When you press a programmed button, the system dials the number up to the run/stop. When you press it again, the system dials the digits following the run/ stop.

S

Saved Number Redial: (2) 6 (7) A feature that allows you to save the number of the external call you are on (providing you dialed the call) so that you can call it again later.

Schedules: Any of six different sets of services that can be applied to your Norstar system. A schedule can be activated manually from a control telephone or activated automatically at specified times. See also Services.

Selective line redirection: See Line Redirection.

Service modes See Services.

Service Profile Identifier: See SPID.

Services: A programming section that allows you to assign which telephones ring, which restrictions apply, and which call routing is used during any of six different schedules. There are three services: Ringing service, Restriction service and Routing service, all found in Services programming.

set: A telephone.

Set Copy: A programming section that allows you to copy programmable settings from one telephone to another of the same type. Set Copy provides two options: duplicating System Data and User Data, or duplicating System Data only. Set Copy does not provide the same copy capability as <u>COPY</u>, which is more selective of the settings that can be duplicated.

Set filter: See Restriction filter.

Set lock (telephone lock): This feature allows you to limit the number of features that may be used or programmed at a telephone. Full set lock allows very few changes or features, Partial set lock allows some changes and features, and No set lock allows any change to be made and any feature to be used. Set lock is assigned under Capabilities in Terminals and Sets programming.

Set relocation: See Automatic Telephone Relocation.

Silent Monitoring

This feature allows a user with a twoline display telephone that has been designated as a supervisor telephone, to monitor Hunt group calls from external sources using $\textcircled{e} \times 5 5 0$.

Show Time: (2) (8) (0) (3) While on a call, accessing this feature allows you to see the current date and time on the Norstar telephone display.

Startup programming: When a Norstar system is first installed and powered up, Startup programming must be performed before any programming can be done. Startup initializes the system programming to defaults.

Station: An individual telephone or other Norstar device.

System coordinator: The person responsible for customizing the Norstar system through programming and for helping co-workers use the Norstar system.

System coordinator password: A

one- to six-digit password that prevents unauthorized access to programming. The System coordinator password can be assigned and changed in Passwords programming.

System coordinator plus: A

system coordinator who also performs technical and maintenance functions for the Norstar system.

System coordinator plus

password: A one- to six-digit password that prevents unauthorized access to programming. The System coordinator plus password can be assigned and changed in Passwords programming.

System coordinator

programming: The programming settings that are most commonly changed once the Norstar system is installed.

system data: An option in the Set Copy function. System Data refers to the programmable system settings that apply to all telephones and lines.

System programming: A

programming section that allows you to assign and maintain certain settings on the Norstar system. System programming is performed by an installer or system coordinator plus.

System speed dial code: A threedigit code (001 to 255) that can be programmed to dial a telephone number up to 24 digits long. System speed dial codes are programmed for the entire Norstar system under the System Speed programming heading.

System ID: The System ID (or System Security number) can be accessed on any programming telephone display by

pressing © * * S Y S I D, or © * * 7 9 7 4 3.

System-wide Call Appearance (SWCA) keys E \rule{E} $\rule{$

Т

Target lines: Lines used to answer incoming calls only. A target line routes a call according to digits it receives from an incoming trunk. They are referred to by line numbers in the same way as physical lines.

Telco features: A programming section that allows you to specify the external telephone numbers that are dialed by the Message feature to retrieve voice messages, or to set up CLASS (CMS) services for lines and sets. Telco features are accessed by an installer or a system coordinator plus.

Terminal equipment (TE): A

generic term for devices that connect to an ISDN network. Examples of ISDN TE are ISDN telephones, computers equipped with ISDN cards and video terminals.

Terminals and Sets: A

programming section that allows you to assign and change settings that apply to the telephones and other devices connected to the Norstar system. Terminals and Sets programming is performed by an installer or a system coordinator. Time and date: A programming section that allows you to manually change time or date. The time and date can also be changed by pressing ★ ★ T M E and entering the Basic password or one of the programming passwords.

Transfer: @ 7 0

A feature that allows you to redirect a call to another telephone in your Norstar system, over a network or outside your Norstar system.

Transfer Callback: If a transferred call is not answered after a specific number of rings, the call will return to the telephone that made the transfer. The number of rings is assigned under Feature settings in System programming. Transfer Callback does not apply to calls transferred externally.

Trunk: The physical connection between the Norstar system and the outside world using either the public telephone system or a private network.

Trunk Answer: (2) (8) (0) A feature you can use to answer a call on any line that has an active Ringing service Service Mode, even if that line does not appear on your telephone. Trunk Answer is enabled in Services programming.

U

Uniform Dialing Plan: (UDP) This type of dialing plan uses a location code to identify each node on a private network. Dialing sequence: (destination code)+(location code)+DN.

User Data: User Data is an option in the Set Copy feature. User Data refers to the personal settings that are unique to an individual telephone, and are not programmed for the system. User Data is programmed at each telephone. These settings, for example, include user Speed Dial and the assignment of programmable memory buttons.

User Filter: See Restriction filter.

User Preferences: a programming section that allows you to assign autodialers, user speed dial codes, display contrast, and other settings to a specific telephone or person. You do not have to program these settings at the person's telephone. User preferences are assigned in Terminals and Sets programming.

User Speed Dial:

Three-digit codes (256-279) can be programmed to dial external telephone numbers. User Speed Dial numbers are programmed for each telephone, and can be used only at the telephone on which they are programmed.

V

Voice Call: 2 6 6

A feature you can use to make an announcement or begin a conversation through the speaker of another telephone in the Norstar system. The telephone you call will not ring. Instead, the person you call will hear a beep and then your voice. Their telephone will beep periodically to remind them that their microphone is open.

Voice Call deny: 😰 8 8

A feature that prevents your telephone from receiving Voice Calls.

Voice message center: If you have subscribed to Call Display services you can receive visual Voice Message Waiting Indication, providing your telephone has a display. If you have Voice Message Waiting Indication, you can program the telephone numbers required to access up to five different Voice Message Centers. You can also program which of the five Centers is to be accessed by each specific line.

W

Wait for dial tone: (a) 8 0 4 A feature that causes of sequence of numbers to pause until dial tone is present on the line before continuing to dial. The Wait for dial tone symbol (a) uses two of the 24 spaces in a dialing sequence. This feature requires a Services or Combo Cartridge.

wireless: See Digital Mobility phones.

Index

Symbols

■ Long Distance symbol 249 Ø Autobumping canceling (#815) 139 enable (815) 139 autodial button external (*1) 87 internal (*2) 87 autodial button, external (*0) 90 **Background Music** canceling (#86) 195 turning on (86) 195 Button Inquiry (*0) 94, 239, 246 Call Forward canceling (#4) 111 using (4) 111, 112 Call Information (811) 52 Call Log entering (812) 142 options (*84) 139 password (*85) 141, 142 viewing (812) 140 Call Park (74) 106 Call Pickup (75) 57 Call Queuing (801) 99 Call Transfer canceling (#70) 103 using (70) 65, 101 Camp-on (82) 104 Class of Service (68) 235 **Conference Call** 7100 sets (#3) 62 on Hold, 7100 sets (#3) 64 using (3) 61 Contrast Adjustment (*7) 146 Dialing Modes (*82) 80 Directed Pickup (76) 56 Do Not Disturb canceling (#85) 194 turning on (85) 82, 194 Exclusive Hold (79) 98 Feature Button, programming (*3) 147 Group Listening

canceling (#802) 66 using (802) 66 Hide message display (806) 158 Host System Dialing Signals Link (71) 227 Long Tones (808) 229 Pause (78) 228 Programmed Release (*89) 229 Run/Stop (*9) 230 Wait for Dial Tone (804) 230 Last Number Redial (5) 90 Line Pool Access (64) 79 Line Redirection canceling (#84) 118 using (84) 117 Message canceling (#1) 128 sending (1) 128 viewing (65) 129 Page combined zone (63) 124 external zone (62) 124 internal zone (61) 124 using (60) 106, 123 Password Basic 21, 217 Call Log (*85) 142 System Coordinator 27, 35, 37 System Coordinator (ADMIN) 24, 217 Priority Call (69) 83 Privacy (83) 73 **Restriction Service** turning off (#872) 213 turning on (872) 213 Ring Again canceling (#2) 85 using (2) 85 Ring Type (*6) 157 Ring Volume (*80) 158 Ringing Service turning off (#871) 213 turning on (871) 213 **Routing Service** turning off (#873) 213

turning on (873) 213 Services, viewing (870) 214 Speed Dial adding user (*4) 92 making calls (0) 92 Static Time and Date (806) 132 Testina display (805) 246 power supply (805) 248 telephone buttons (805) 247 telephone handset (805) 247 telephone headset (805) 248 telephone speaker (805) 248 Time (803) 74 Time and Date (**TIME) 27, 218 Trunk Answer (800) 59 User Preferences (**USER) 159, 218 Voice Call (66) 134 Voice Call Deny canceling (#88) 135 using (88) 135 ■ Link symbol 227 Pause symbol 228 **28** Programmed Release symbol 229 Run/Stop symbol 230 Wait for Dial Tone symbol 230 2-way DID **PRI 199** 7100 Autodial 88 Call Conference 61 Conference Call on hold 63 Hold many calls 97 Incoming Line Group button 77 internal numbers 239 line assignment 239 Ring Again 251 Speed Dial programming 92 standard dial 81 Voice Call 134 7100 set Call Park 106 7100 sets CallBack 105 camping a call 105 Line Redirection 116 Ring Again 250 7208

button defaults 154 memory buttons 242 7310 memory buttons 242 7316 administration set 16 memory buttons 242 viewing line profile 237 viewing set profile 237 7316 Business Series Terminal button defaults 152 7316E administration set 16 button defaults 150 CAP 46 overlay 20 7324 memory buttons 242 911 description 13 911 service 193 compliance 199 maintaining records 199

Α

access change COS password 235 dialtone for remote calls 234 external lines 241 fast busy tone for remote calls 234 from outside the system 231 remote access tones 234 stuttered dial tone for remote access 234 using a COS 233 using a DISA 232 Access denied 249 accidental release 74 active services, display indicator 215 ADD 243 adjusting the display 146 administration password (see System Coordinator password) administration programming 14 administration set controlling alarms 188 hospitality 181 using 186

alarm cancel 190 Hospitality 187 turn off 190 using 189 Alarm 61-4-2 245 alarm number, recording 245 alarm telephone, description 245 alarms controlling with admin set 188 query on admin set 188 reporting and recording codes 245 all lines, redirection 117 Allow calls 194 allow redirect programming 118 Already joined 58, 76 Already parked 107 alternate services 209 analog telephone answering a message 128 delaying snooze alarm 190 removing a message 131 replying to a message 130 sending messages 127 setting room, Hospitality 186 turn off alarm 190 using wake-up alarms 189 analog terminal adapter (see ATA) announcement paging 123 Voice Call 134 answer programming Handsfree answerback 72 Trunk answer 59 answer button assigning to sets 155 attendant 61 type 61 answer DNs answer key 60 answering calls Answer DNs 60 Call Display services 51 Call Duration Timer 73 Call Pickup 56 CAP 46 Conference Calls 61

directed pickup 56 distinctive ring patterns 44 ending a call 51 Group Listening 66 group pickup 57 Handsfree 67 hearing aid compatibility 51 line indicators 42 prime telephone 45 Privacy 72 several Hold calls 97 Trunk Answer 59 using line buttons 42 using SWCA keys 108 Voice Call 134 answering incoming calls hunt groups 41 apply button labels 149 assign an alarm time 188 assign lines Hunt Groups 169 sets 239 ATA dialing signals 229 using dialing modes 81 attendant answer button 61 Auto Call information (see Caller ID set) auto-answer, using COS password 235 autobumping, enable/disable 139 autodial button inquiry 145 choosing a line 88 for 7100 88 line pool access code 88 line selection 88 programming 87 set lock 225 storing number on a memory button 87 using intercom line for 88 using Last Number Redial 91 Autodial full 88 automatic Call information 54 Call Log 137 dial 81 Handsfree 71 release of a line, see Disconnect Supervision

restriction service 210 automatic call back, ISDN terminal feature 205 Automatic Call Forward, changing settings 113 automatic recall, ISDN terminal feature 205 automatic telephone relocation 193 auxiliary ringer Hunt Groups 175 auxiliary ringer, programming 226

В

background music licensing 195 set lock 225 turning off 195 using 195 Basic password 14, 159 password, changing 217 **Restriction and Routing service 213** basic answer button 61 BKSP 243 blocking calls, see Do Not Disturb and DND name and number 199 break point, host system dialing, Run/ Stop 230 BRI **ISDN** description 197 **ISDN** services 202 Name and Number Blocking 204 network features 203 Network Name Display 203 broadcast, Hunt Groups, programming 170 business name features 203 name display, outgoing 198 **Business Series Terminals** Handsfree 67 installing 191 viewing line profile 237 viewing set profile 237 wall mounting sets 192 busy

call forward on busy 114 CLID display for incoming call 52 DND on busy 114 Do Not Disturb 38 Hunt Group line setting 172 Hunt Group routing 172 priority call 82 programming call forward 37 tone, remote access 234 busy 75, 84 busy tone Hunt Group routing 172 button defaults 7208 154 7316 Business Series Terminal 152 7316E Business Series Terminal 150 M7100 154 Button erased 89 Button Inquiry 145 buttons Answer DNs/answer key 60 asssign handsfree and mute 71 **Button Inquiry 145** CAP 49 changing programming 160 changing user speed dials 161 default assingment 150 dialpad 17 display 17, 19 eKIM 49 erasing programmed features 147 Feature 17, 18 handsfree 18 Hold 17, 18 labels, applying 149 Last Number Redial 90 line button assignment 239 line button indicators 240 line pool feature code 241 memory 17, 87, 242 moving line 156 mute 18 numbering on all telephone types 160 programming features on 147 Release 17, 18, 51 Saved Number Redial 94 testing 246, 247

using a line button 77 using buttons 16 volume control 18 bypassing a Hotline telephone 222

С

call disconnecting, conference call 62 ending a call 51 independent hold, on conference 63 overflow 241 redial last number 90 Call 221? 250 Call blocked 84 call blocking, turning privacy on 73 Call by Call FX calls 200 Inwats calls 200 Outwats calls 200 **PRI 200** Private calls, DID and DOD 200 Public calls, DID and DOD 200 see also CbC 200 Tie calls 200 call display, answering calls 51 Call Duration Timer 73 Call Forward All Calls, set lock 225 All Calls, ISDN terminals 202 automatic, changing settings 113 Call Forward No Answer 35 Call Forward on Busy 37, 114 calling the number 205 cancel 205 canceling 111 change delay 113 Forward no answer 113 line redirection differences 121 No Answer, line redirection 113 overriding 112 programming 35, 113, 114 programming, no answer 35 service provider 204 to voice mail 115 using 112 call indicators 41 call information

changing what is shown first 55 displaying 53 displaying information 51 for specific call 52 getting information for a call on hold 53 service provider 137 Call Log autobumping, enable/disable 139 automatic 137 calling from within 141 clearning password 219 erasing items 140 logging a call manually 139 options 139 options, changing 162 password 141-142 canceling 142 changing 142 set 137 using 138 viewing 140 Call Park description 106 picking up calls 240 retrieval codes 106 Call Pickup **Directed Pickup 56** picking up calls 240 Call Queuing usina 99 call restrictions, Hospitality, rooms 184 Call traced 206 Call Transfer 101-104 call transfer cancelling 103 external calls 102 using 101 Call(s) bumped 143 Callback, using 110 Caller ID set, automatic call information 54 Calling 84 calling party name 198 calls accidental release 74 allow line redirection programming 118 answering calls on CAP 46

answering prime telephone 45 answering with direct pickup 56 answering with group pickup 57 answering with Handsfree 67 automatic dial 81 automatic display 54 blocking the Link feature 227 call queuing 99 cancelling call forward 111 cancelling DND 194 changing Call forward no answer 113 changing how you dial 80 changing to Handsfree 69 checking duration 73 display call information 53 display call information for hold call 53 external call transfer 102 forwarding to internal set 111 forwarding to voice mail 115 from within Call Log 141 holding several calls 97 listening while on Hold 98 making a private call 73 making from ISDN terminal 80 monitoring with CAP 51 muting Handsfree 68 overriding call foward 112 programming 2-way DID 199 programming paging 124 putting on Exclusive hold 83 refusing second call 194 restriction services 209 retrieving a parked call 106 retrieving held call 97 routing outgoing calls 210 saved number redial 94 security on remote access 232 specific call information 52 standard dial 81 tracking incoming calls 137 using answer key 60 using DND 194 using Do Not Disturb 194 using line button 42 using Link for external calls 227 using Pause for external calls 228 using pre-dial 82

using ring again 84 using speed dial 92 ways to make a 75 Camp denied 105 Camp max 105 Camp to 105 Camped 105. 250 camping calls (see Camp-on) camp-on tones 104 using 104 Can't ring again 76, 85 CANCEL 243 cancel a transfer 103 Call Forward 111 call log password 142 Do Not Disturb 194 group listening 66 Hospitality alarm 190 Line Redirection 118 pending alarm 188 sent message 128 voice call 135 Cancel denied 132 CANCL 160 CAP answering calls 46 monitoring calls 51 moving buttons 156 prime telephone 46 sending messages 127 telephone 46 telephone, direct dial 221 using 46 Centrex 7208 defaults 154 7316 defaults 152 7316E defaults 150 centrex template 7316E buttons 151 CHANGE 160 change alarm time 188 automatic Call Forward 113 call log options 162 call log password 142 COS password 235 day 29

dial method 80 display contrast 162 hour 28 how calls are dialed 162 Hunt Group auxiliary ringer 175 Hunt Group Name 174 language on display 162 line name 33 minutes 28 month 28 ring type 157, 163 user speed dial 161 vear 28 choosing a line 77 **Class of Service** changing 235 managing passwords 235 using a password 235 Cleared>LINENAM 132 CLID display on busy 52 clock, set 29 **CLR 160** code, system speed dial 30 common set, Hospitality 181 communicating in the office paging 123-127 sending messages using display 127 cond pswd, Hospitality 182 cond pswd, programming 220 condition, setting room condition 185 Conf. on hold 65 Conference busy 65 conference call by releasing privacy 73 cancel group listening 66 conference on Hold 63 disconnecting from 65 disconnecting one call 62 group listening 66 independent Hold 63 making 61 no privacy button 72 releasing privacy 62 removing yourself from 65 splitting 64 using the Conference feature 61 connecting to ISDN network 207

contrast adjustment 146 control calls, using alternate or scheduled services 209 system security on remote calls 232 using DISA 232 control telephone enter Service feature code 213 setting service schedules 224 turn service off 213 turning services off/on 209 viewing active services 214 custom programming, moving sets 193 customizing KIM 49 customizing your telephone adjusting ring volume 158 Button Inquiry 145 changing ring type 157 contrast adjustment 146 **User Preferences 159**

D

data transfer, PRI 197 date and time changing 27 displayed instead of messages 158 displaying 74 length of a call 73 date, change 218 day, set 29 default buttons assignment 150 defaults button assignments 150 buttons, 7316 Business Series Terminal 152 buttons, 7316E 150 delay call forward no answer 113 hunt 171 Delayed Ring Transfer 194 delete Call Log items 139 call log password 142 messages from list 131 programmed features 147 Denied in admin 249 deny voice call 135

desk information, Hospitality 183 desk pswd 220 Desk pswd, programming 182 desktop conferencing, ISDN applications 208 destination code line for external calls 223 dial tone, stuttered 234 Dial voice call 135 dialing 911 compliance 199 automatic dial 81 host system signals 227 modes 80 options 162 pre-dial 82 saved number 94 signal, Long Tones 229 signal, Pause 228 signal, Programmed Release 229 signal, run/stop 230 signal, switching from pulse to tone 231 signal, Wait for Dial Tone 230 standard dial 81 switching between pulse and tone 238 switching from pulse to tone 231 using Pause 228 dialing filters, Hospitality room states 185 dialing mode, set lock 225 dialing plan enblock dialing 201 PRI 201 dialpad change name 32 entering letters and numbers 27 entering numbers and letters 31 programming buttons 17 DID 2-way DID, PRI 199 7208 defaults 154 7316 defaults 152 7316E defaults 150 calls, extra-dial telephone ringing service 216 CbC private calls 200 CbC public calls 200

digital connections, to ISDN networks and devices 207 direct dial, forward, external 221 direct inward system access (DISA), see also DISA 232 direct-dial telephone programming 221 using 221 **DISA, COS password 232** disable autobumping 139 disconnect from conference 65 releasing a call, accidentally 74 disconnect supervision, assigning 238 display 2-line 17 automatic caller ID display 54 button equivalents for one-line display 243 buttons 17, 19 Call information 53 call information 52 changing contrast 146 changing first display 55 changing the language 162 contrast 162 **Display digits 25** End of Session 25 name instead of number 193 network name, BRI 203 one-line 243 PRI Network Name Display 198 restoring message indication 158 system speed dial 31 time and date 74 display buttons one-line display 243 user preferences 160 Display digits 25, 31 distinctive ring patterns(DRP) answering a call 44 distinctive rings 157 distribution modes, Hunt Groups 170 DN (see internal numbers) DND 105 DND from 45 DND on busy 114 DND transfer 45 DND, cancel 194

PRI description 197

DNs checking for updates 25 rooms 183 Do Not Disturb canceling 194 on Busy 38 see also DND 194 set lock 225 using 194 Do not disturb 76, 84, 103 Do Not Disturb on Busy, see also DND on busy 114 DOD CbC private calls 200 CbC public calls 200 PRI description 197 DRT 45 duration of call 73

Е

echo, handsfree 70 eKIM button programming 49 emergency 911 13, 199 enable autobumping 139 enbloc dialing, PRI dialing plan 201 End of session 25 ending a call 51 ending test session 246 enhanced, answer button 61 Enter code 148 Enter digits 89, 93 Enter zone 126 entering letters through the dialpad 27 equipment, external page equipment 127 erasing Call Log items 140 messages from list 131 programmed features 147 Evening Sched 216 Exchanged 156 Exclusive Hold 83, 98 Expensive route 76 expensive route warning tone 241 extended, answer button 61 external access to Norstar 231

access, describing line pools 241 access, using remote packages on line pools 233 accessing voice mail 144 autodial, programming 87 Call Forward (see Line Redirection) page 123 paging equipment 127 external calls assigning Long Tones 229 line pool 223 transferring 102 using Link 227 using Programmed Release 229 external line routing table 223 external line buttons 155 external lines call fowarding 112 name display 193 external number, last number redial description 90 external page option, default page button 154 extra-dial telephone DID calls 216 direct dial 221 extra-dial telephone, DID 216

F

fast busy tone, remote access 234 FEATR 160 feature Message Reply Enhancement, analog telephones 130 privacy 72 using line redirection 121 using page types 123 voice call 134 feature button 17, 18, 225 feature code, control telephone 213 Feature moved 148 feature programming add change speed dial number 30 allow line redirect 118 automatic call forward 113 auxiliary ringer 226 blocking redial numbers 94

broadcasting to Hunt Groups 170 call display, first display 55 call forward no answer 35 call forward on busy 37 call restrictions, Hospitality 184 change number of rings 36 changing line name 33 changing telephone name 32, 193 direct dial telephone 221 do not disturb on busy 38 external autodial 87 group pickup 57 Handsfree 70 handsfree answer back 72 Hospitality alarm 187 Hospitality passwords 181 hotline on telephone 223 hunt delay 171 Hunt Group busy line setting 172 Hunt Group queue timeout 173 last number redial 90 line redirect ring control 119 line redirection 117 Long Tones 229 overflow set 173 page zone 125 paging 124 Pause 228 programmed release 229 room/desk information 183 Run/Stop dialing signal 230 select speed dial line 30 service times 184 set lock 225 system speed dial 29 system speed dial name 31 time and date 27 Trunk Answer 59 user speed dial 92 using dialpad to enter letters 27 using Link 227 Wait for Dial Tone signal 230 Feature timeout 249 features adjusting ring volume 158 Autobumping 139 autodial 87 auxiliary ringer 226 Button Inquiry 145

Call Display 51 Call Duration Timer 73 Call Forward 111 call forward, using 112 Call Information 52 Call Log 137 Call Park 106 Call Pickup 56 Call Queuing 99 Call Transfer 101 Callback 110 Camp-on 104 changing ring type 157 Class of Service password 235 Conference Calls 61 contrast adjustment 146 dialing modes 80 dialing signal Programmed Release 229 run/stop 230 Wait for Dial Tone 230 Do Not Disturb 194 Do Not Disturb on Busy 114 **Exclusive Hold 98** external call transfer 102 Group Listening 66 Handsfree 67, 69 hiding the message or calls display 158 Hold, many calls 97 independent Hold during conference 63 Last Number Redial 90 limiting feature access 225 line pools 78 Line Redirection 116-122 Link 227 Messages, sending 127 moving line buttons 156 paging 123-127 Pause 228 PRI name and number blocking 199 priority call 82 Privacy 72 programming on buttons 147 remote access to the system 231 **Restriction service 209** Ring Again 84

ring type 157 Ringing service 209 Routing service 210 Saved Number Redial 94 sending messages using analog telephones 127 sending messages using display 127 Speed Dial 91 Test a Telephone 246-248 testing set features 246 Time and Date 218 User Preferences 159 file transfer using ISDN 208 filters, Hospitality room states 185 **FIND 160** first display, changing 55 Foreign Exchange, see also FX Forward denied 116 Forward no answer, changing 113 Forward> 116 forwarding calls 35 Call Forward 111 Call Forward delay 113 Call Forward No Answer 113 Call Forward on Busy 114 direct dial 221 Do Not Disturb on Busy 114 Line Redirection 116-122 to voice mail 115 Foward delay 36 FX CbC type 200 see also Foreign Exchange 200

G

Group 4 fax, using ISDN applications 208 group answering SWCA keys 108 Group Listening 66 Group Pickup Hunt Groups 57 using 57

Н

handling many calls at once Call Queuing 99

Hold 97 handset speaker, testing 247 Handsfree assign button 71 automatic answer 71 changing to handsfree 69 exiting to handset 69 headset 71 indicators 69 making calls 68 muting the set 68 preventing echo 70 programming 70 talking in turn 70 using 69 Handsfree 71 Handsfree Answerback programming 72 Voice Call 134 handsfree button 18, 155 headset Handsfree requirement 71 testing 248 hearing aid compatibility 51 Hidden number 76, 91, 95 Hold button 17, 18 **Conference Call 63** display call information 53 exclusive 98 exclusive hold 83 listening while on hold 98 putting conference on 63 re-establish conference call 63 retrieving call 97 using background music 195 using SWCA keys 108 Hold or release 143, 251 Hospitality admin set, controlling alarms 188 alarm features 187 cancel alarm 190 cond password 182 delaying alarm 190 desk password 182 passwords 181 room/desk information 183 service done 185 service times 184

set description 181 sets per room 183 setting room condition 185 setting room dialing filters 185 turn off alarm 190 using administration set 186 using room set 186 using room/set programming 185 using the alarm 189 hospitality password 219 Host system dialing signals Long Tones 229 Pause 228 programmed release 229 Run/Stop 230 system speed dial 91 using an ATA 229 Wait for Dial Tone 230 Hotline bypassing the telephone 222 setting up the telephone 223 using with Handsfree button 222 hour, set 28 hunt group moving on telephone 156 Hunt Groups adding members 167 answer incoming calls 41 assigning lines 169 auxiliary ringer 175 broadcast conversion note 165 Broadcast mode 170 busy line setting 172 busy routing 172 call forward no answer 36 call forward on busy 38, 114 call foward no answer 113 call park 107 calls on Hold 97 cannot use Voice Call feature 134 creating 238 distribution modes 170 DND on busy 115 group pickup 57 hotline, set DN 223 hunt delay 171 incoming calls 170 member DN 167

moving members 168 no videophones 166 overflow set 173 paging 125 priority call 82 programming 165 aueue time-out 173 removing members 167 rerouting to a Hunt Group 60 Rotary mode 170 Sequential mode 170 setting the name 174 simultaneous ring 170 temporarily leaving group 195 unassigning lines 169 use Do Not Disturb 195 using call forward 112 using ring again 84 where to use 165 hunt groups system monitoring 224 Hybrid 7208 defaults 154 7316 defaults 152 7316E defaults 150

I

In use 132, 252 In use SETNAME 143 Inactive feature 249 incoming call CLID display on busy 52 incoming calls 2-way DID 199 hunt groups 41 indicators 41 overflow routing 241 simultaneous ring 170 tracking 137 using COS on auto answer 235 Incoming Line Groups (ILG), see Hunt Groups Incoming only 252 indicators active service display 215 handsfree and mute 69 incoming call 41 line active 240

long distance call 249 memory buttons 242 message waiting, analog telephone 128 restoring message indicators 158 rings 43 installer programming 14 installing telephones 191-?? Integrated Services Digital Network (see ISDN) Intercom 119 Intercom # 89 intercom button answer button calls 61 autodial line 88 using as the line for Autodial 88 internal numbers, description of length 239 internal page 123 Internet access, using ISDN applications 208 Invalid code 93, 231, 249 Invalid location 156 Invalid number 89, 103, 107, 252 Invalid state 206 Invalid zone 126 Inwat, CbC type 200 ISDN 2-way DID 199 applications 207-208 **BRI features 203 BRI** services 202 Call by Call 200 call forward all calls 202 connecting to 207 description 197 desktop conferencing, using 208 device support on BRI 202 dialing plan, PRI 201 emergency 911 199 equipment 207-208 file transfer, using 208 Group 4 fax, using 208 Internet access using 208 LAN access, using remote 208 LAN to LAN bridging, using 208 leased line backup, using 208 making calls from ISDN terminals 80

Network Name Display, BRI 203 ONN blocking, BRI 204 PRI name and number blocking 199 PRI Network Name Display 198 service provider features 204, 205 telecommutina, usina 208 terminal line access 203 videoconferencing, using 207 ISDN terminal Automatic Call Back 205 Automatic Recall 205 Call Forward 204 calling the call forward number 205 cancel Call Forward 205 no ONN 199

Κ

KIM buttons on eKIM 49 customizing 49 sending messages 127 using 46

L

LAN remote access using ISDN applications 208 router 208 to LAN bridging, ISDN applications 208 language changing on the display 162 set lock 225 last number redial 90 leased line backup using ISDN applications 208 length of call, timing 73 length of internal numbers 239 letters, entering with dialpad 31 licensing, background music 195 limiting access to Norstar 232 telephone feature use 225 telephone programming 225 using alternate or scheduled services 209 line

access from ISDN terminal 203 assign to Hunt Groups 169 assignment 239 button indicators 240 button moving 156 changing the name 33 changing the name of a line 193 choosing a line 77 choosing autodial 88 describing prime line 243 description of menu 21 for external call forwarding 112 Hunt Group busy line setting 172 indicators, description 42 line redirection, describing 116 picking up calls 240 pool 78-79 Redirection, canceling 118 Redirection, using 116-122 remote access to the system 231 replying to messages 129 retrieving a parked call 106 speed dial 30 target line 240 unassigning Hunt Groups 169 using line button to answer call 42 Line 001 waiting 250 line appearances using SWCA keys 108 line button assignment 239 bypassing the Hotline button 222 joining call 72 moving 156 privacy 72 Line denied 59, 76, 252 Line hung up 105 Line in use 251 line pool description 78, 241 external lines routing 223 memory button 241 overflow routing 241 programming buttons 147 programming memory button 79 using remote packages to restrict external access 233 line pool access code autodial 88

external calls 223 line profile, viewing 237 Line Redirection 119 line redirection all lines 117 allow programming 118 call forward no answer 113 call fowarding differences 121 programming 117 redirect ring control 119 using 121 Line001 callback 45 Line001 hung up 103 Line001 to prime 45 Line001 transfer 250 LineXXX to prime 45 Link blocking 227 host system dialing signals 227 program on memory button 228 LIST 160 listening 66 listening on hold 98 log, view call log 140 logging a call manually 139 Logit (see Call Log) long distance call indicator 249 using COS password 231 Long Tones 229 loop start line, remote access 232 Lunch Sched 216

М

M7100 telephone Incoming Line Group button 42 M7310 telephone viewing line profile 237 viewing set profile 237 M7324 telephone viewing line profile 237 viewing set profile 237 viewing set profile 237 maintaining security 233 Make calls first 252 making calls dialing modes 80 Handsfree 68 priority call 82

using a line button 77 using line pools 78 using Ring Again 84 with automatic Handsfree 71 managing COS passwords 235 manual, restriction service 210 member DN, Hunt Groups 167 members adding to Hunt Groups 167 moving Hunt Group members 168 remove from Hunt Group 167 memory buttons 17 default assignment 150 erasing features 147 indicators 242 Link 228 power off 87 programming feature codes 147 programming with line pool 79 storing autodial numbers 87 menus, top level 21 Message denied 132 Message list 132 Message Reply Enhancement 130 Message to 132 message waiting indicator, analog telephone 128 messages alarm messages, recording 245 analog telephone, answer 128 canceling a sent message 128 hiding display 158 **KIM 127** removing from list 131 replying 129 restoring call indication 158 sending 127 sending, using the display 127 viewing 129, 132 Messages & Calls 132, 144 microphone muting 68 using correctly 70 Microphone muted 135 MICS, maximum target lines 240 MICS-XC, maximum target lines 240 minutes, set 28 monitoring answer DNs and answer key 60

calls 240 calls with CAP 51 line pool status 84 lines, see also Disconnect Supervision 238 telephone status 84 transferred calls 110 month, set 28 Move line from 157 Move line to 157 moving 911 service note 193 automatic telephone relocation 193 Hunt Group members 168 line buttons, set lock 225 telephones 193 music background, licensing 195 turning off 195 mute assign button 71 button icon 18 button positioning on sets 155 indicators 69 muting the set in Handsfree 68 voice call tones 134

Ν

name changing telephone name 193 display, BRI lines 203 Hunt Groups 174 PRI Network Name Display 198 system speed dial 31 name and number blocking **BRI 204 PRI 199** see also ONN 199 needs service, Hospitality 185 Network Call Diversion 207 Network Name Display available features 198 **BRI 203 PRI 198** New calls begin 144 night control phone (see control telephone) Night Sched 216

night schedule, restriction service 211 Night Service (see services and ringing service) 9.75,252 no answer, refusing second call 194 No button free 133, 252 No call on 107 No call to park 107 No calls waiting 250 No free lines 252 No info to log 144 No last number 76, 91 No line selected 76, 250, 252 No line to use 120 No log assigned 144 No number saved 95 No number stored 93, 133 No response 206 No resume item 144 No services ON 215 No voice call 135 Norstar system dial tone 234 Norstar telephones set profile, viewing 237 viewing line profile 237 Not allowed 206 Not available 206, 249 Not in service 76, 103, 105, 116, 250 Not incoming 206 Not subscribed 206 numbers, entering with dialpad 31

0

OK 243 On another call 77, 84 On hold 98 one button dialing (see Autodial) one-line display 7100 and 7208 sets 243 display button equivalents 243 ONN blocking, BRI 204 outgoing calls, 2-way DID 199 Outgoing line 120 Outwats, CbC type 200 overflow call routing 241 expensive route warning 241 Hunt Group routing 172 set Hunt Groups 173 overlap dialing 207 overlay 15, 19 OVERRIDE 243 overriding Call Forward 112 services, manually 216

Ρ

page default button 154 external equipment 127 making an announcement 123 programming 124 shortcut codes 123 types 123 zones, programming 125 Page choice 126 Page timeout 126 Paging ALL 126 Paging busy 126 Park denied 107 Parked call 251 Parked Call, retrieving 106 Parked on 108 Parking full 108 password Basic 159, 217 Call Log 141-142 changing 142 Call Log, canceling 142 change COS 235 changing 217, 218 Class of Service 235 clearing Call Log 219 cond pswd 220 description of menu 21 desk 182 desk pswd 220 entering 24 Hospitality 182 hospitality 181 Hospitality password 219 managing COS passwords 235 room condition 182 security practices 233 System Coordinator 14, 217 system speed dial code 30

user preferences 159 pause Host system dialing signals 228 in a sequence of numbers, see Wait for Dial Tone PBX 7208 defaults 154 7316 defaults 152 7316E defaults 150 link feature 227 programming Run/Stop dialing sequence 230 Tie CbC service 200 PBX template 7316E buttons 151 personal programming 14 Pick up receiver 251 Pickup 58 Pickup denied 58, 59 pickup group, changing 58 Please wait 84 Pool code 120 power failure, clock 29 power off, affect on memory buttons 87 power supply, testing 248 pre-dial 82 Press a button 89, 145, 148 Press a line 157 Press held line 65 prevent calls, restriction services 209 PRI 2-way DID 199 Call by Call 200 **Dialing Plan 201** DID 197 DOD 197 emergency 911 199 ISDN description 197 name and number blocking 199 Network Name Display 198 prime line description 243 external call routing 223 standard dial 81 system speed dial 30 prime telephone answering calls 45 CAP 46 direct dial 221

overflow routing 241 using DND 194 priority call exclusive hold 83 see also Call Queuing 41, 82 Priority denied 84 Priority>223 251 privacy changing status 72 conference call 62 creating conference call 73 set lock 225 private branch exchange, accessing from Norstar (see also host system dialing signals) 227 call 73 CbC type 200 private dialing plan, Call by Call 200 private line, description 243 Private name 55, 198, 203 private network, enblock dialing 201 Private number 55 Program and HOLD 89, 93, 148 Program and OK 89, 93, 148 Programmed 89 Programmed Release, host system dialing signals 229 programming administration programming 14 administration set 15 alarm feature, Hospitality 187 alarms 188 auxiliary ringer 226 Basic password 14 basics 14 broadcast mode 170 busy line setting 172 Call Display 55 Call Forward 35, 38 Call Forward delay 113 call forward on busy 37 Call Pickup 56 call restrictions, Hospitality 184 changes, planning 15 changing buttons, users 160 changing the name of a line 33 changing the name of a telephone 32, 193

check DNs 25 condition password 182 customizing your Norstar 14 direct-dial telephones 221 entering passwords 24 external autodial button 87 features on buttons 147 Forward no answer 113 group pickup 57 Handsfree 70 Handsfree Answerback 72 hospitality cond password 220 hospitality desk password 220 hospitality password 219 Hospitality passwords 181 Hotline telephone 223 hunt delay 171 installer programming 14 **KIM 49** line redirection 117 Link 227 Long Tones 229 overflow set, Hunt Groups 173 overlay 15 page zone 125 paging 124 Pause 228 personal programming 14 programmed release 229 programming indicator < 21 programming indicator ► 21 programming map 21-24 programming overlay 19 queue timeout 173 recording changes 14 Restriction service 209, 210 Ringing service 209 room/desk information 183 Routing service 210 Run/Stop dialing signal 230 service times, Hospitality 184 Set lock 225 set lock 225 starting and ending a session 24-25 system and user speed dial 91 System Coordinator 24 system speed dial 29 telephones

Call Forward, do not disturb 38 Do Not Disturb 194 Do Not Disturb on Busy 38 priority call 82 time and date 27 top-level menu description 21 user preferences 159 User Speed Dial 92 Wait for Dial Tone signal 230 programming record 14 programming telephones block Link 227 blocking Redial 94 Last Number Redial 90 public network dialing plan, PRI 201 enblock dialing 201 remote access to Norstar 233 Public, CbC type 200 pulse dialing selecting on the set 231 switching 238

Q

query alarm 188 queue Hunt Group routing 172 Hunt Group timeout 173 QUIT 243

R

recording alarm codes 245 recording changes 14 redial last number 90 saved number 94 Redir by 120 redirect ring, programming 119 Redirect denied 120 redirection all lines 117 cancelling 118 lines 116 loops, avoiding 121 programming 117 ring control 119 using 121 refusing to answer second call 194

Release a call 105, 251 Release button **•** 51 icons 18 Release calls 251 releasing accidentally 74 from conference 65 relocation, automatic relocation, telephones 193 remote access 231-234 change COS password 235 fast busy tone 234 loop start line 232 managing COS passwords 235 security 232 stuttered dial tone 234 system dial tone 234 through public network 233 tones 234 usiing ISDN with LAN 208 using COS password 233 remove from a conference call 65 Hunt Group members 167 message, analog telephone 131 messages 131 replying to a message analog telephone 130 digital phone 129 reporting alarm codes 245 Restr'n 215 Restricted call 77, 104, 252 restricting access to Norstar 232 access using COS password 233 feature use, see Set Lock telephone feature use 225 telephone programming 225 using alternate or scheduled services 209 restriction service control telephone 213 filters, COS for remote access calls 235 naming 211 Night schedule 211 preventing calls 209 turning off/on 210

retrieval codes, Call Park 106 retrievina held call 97 parked call 106 ring auxiliary ringer 226 changing ring type 157, 163 changing the number of rings before call is forwarded 36 description of types 43, 157 ring volume setting 158 Ringing service 212 rotary mode 170 sequential 170 simultaneous rings 170 Ring Again 84 7100 251 set lock 225 Ring Again? 77, 85 ring delay, call fowarding 115 Ringing 215 ringing distinctive ring patterns 44 ringing service restriction services 209 Trunk Answer 59 rings change number for call forward 36 setting Hunt Group delay 171 room setting condition 185 using room programming 185 room information, programming 183 room set description 181 using 186 rooms set call restrictions 184 rotary mode, Hunt Groups 170 Routing 215 routing 2-way DID 199 external lines 223 Hunt Group routing options 172 overflow 241 routing service control telephone 213 outgoing calls 210 overflow routing 241

run/stop, host system dialing signals 230

S

saved number redial set lock 225 using 94 Sched 4 216 Sched 5 216 Sched 6 216 scheduled services 209 schedules, viewing active 214 second call, refusing 194 security managing COS passwords 235 practices 233 system 232 using COS password 233 using DISA 232 Select a line 77, 93 Select line out 120 Select line(s) 120 Send message? 77 sending messages set lock 225 using feature 127 sent message, cancelling 128 sequential mode, Hunt Groups 170 Service control telephone 213 overflow routing 241 routing service 210 turn off 213 turn on manually 212 service done, Hospitality 185 Service Modes, see Services service provider features 911 service 193 Automatic Call Back 205 Automatic Recall 205 Call Forward 204 call information 137 calling the forwarded numbe 205 canceling Call Forward 205 Service Schedules **Evening Sched 216** Lunch Sched 216 Night Sched 216 Sched 4 216

Sched 5 216 Sched 6 216 service times, Hospitality 184 Services description of menu 21 display indicator for active services 215 overriding 216 **Restriction service 209** Ringing service 209 set lock 225 Trunk Answer 59 turning off and on using feature codes 213 turning off/on 210 using control telephone to set 209 viewing active schedules 214 Services ON 215 set date 28 types of Hospitality sets 181 using administration set 186 using room set 186 using set programming 185 Set Lock Full 225 limiting access to features 225 partial 225 programming 225 using 225-226 Set locked 249 set profile, viewing 237 SHOW 243 Show set 32 signal Link 227 Long Tones 229 Pause 228 Programmed Release 229 run/stop 230 Wait for Dial Tone 230 simultaneous ring, Hunt Groups 170 snooze, delaying alarm 190 speakers telephone, testing 248 voice call 134 special telephones 221 speed dial 7100 92

add/change number 30 changing user buttons 161 choosing a system code 30 code 92 display 31 entering name 31 making a call 92 programming for User 92 selecting a line 30 system programming 29 using 91 splitting a Conference Call 64 square template 7316E buttons 151 standard dial prime line 81 selecting a line 81 Start of list 133 Still in trnsfer 104 stop calls from ringing at set 194 stuttered dial tone 232, 234 suspending a call see also Call Park and Hold using Call Park 106 SWCA using 108 system access, changing programming passwords 217 system code, system speed dial 30 System Coordinator maintaining 911 records 199 password 14 programming 24 Restriction and routing service 213 system dial tone 234 system monitor telephone using 224 system speed dial add or change number 30 description 91 description of menu Sys speed dial 21 display numbers 31 host system signaling codes 91 name 31 select a line 30 system time and date, change 218

Т

talking in turn, Handsfree feature 70 target line changing the name 193 description 240 maximum 240 overflow 241 target lines moving on telephone 156 TEL# 160 telecommuting using ISDN applications 208 telephone 7316E and KIM 46 911 193, 199 accessing external voice mail 144 adjusting the display contrast 146 administration display 17 administration sets, illustration 16 alarm 245 announcement 134 answer message on analog telephone 128 answer prime telephone 45 answering voice call 134 assigning lines 239 automatic relocation 193 auxiliary ringer 226 blocking link 227 blocking redial feature 94 button inquiry 145 buttons 17 bypassing the Hotline set 222 Call Display information 54 call forward 35 call iinformation 52 call indicators 43 call log, viewing 140 cancel a sent message 128 cancel DND 194 cancel voice call 135 CAP 221 changing direct dial telephone 221 changing line name 193 changing set name 193 changing the name 32 control service schedules 224 control set 213

default button assingment 150 denying voice call 135 dialpad buttons 17 direct-dial 221 directed pickup 56 disconnect supervision 238 display buttons 19 display call information 53 **DND 194** ending test session 246 erasing call log items 140 extra-dial 213, 216, 221 Feature button 17, 18 group pickup 57 handsfree button 18 hiding display 158 Hold button 17, 18 Hold call information 53 Hospitality administration set 186 Hospitality room set 186 Hospitality service sets 181 Hotline 222 Hunt Group overflow set 173 installing BST sets 191 last number redial 90 line profile, viewing 237 log calls automatically 137 logging call manually 139 Long Tones 229 making calls from ISDN terminal 80 memory buttons 17 moving custom programming 193 mute 18, 68, 134 name display 193 prime 221 programming paging 124 pulse dialing 231 refusing second call 194 Release button 17, 18 remove messages 131 replying to a message 129 retrieving a parked call 106 ring indicators 43 sending messages 127 sent messages, viewing 132 setting up a hotline 223 stop ringing using DND 194 system monitor, hunt groups 224 system speed dial 29

testing 246-248 turn off music 195 using background music 195 viewing messages 129 viewing set profile 237 volume control 18 telephone speakers, testing 248 telephones set lock 225 template, button assignments 150, 152 terminal connections, BST sets 191 Terminals&Sets, description 21 testing buttons 246, 247 ending session 246 telephone 246 Their list full 133 3 parties only 65 Tie, CbC type 200 time change 218 service times, Hospitality 184 time and date © * * T | M E 218 © ★ ★ T I M E 27 © 806 132 changing 27 displaying 74 hiding message indication 158 length of a call 73 time savers autodial 87 Saved Number Redial 94 Speed Dial 91 Time&Date, description of menu 21 timeout, Hunt Group queues 173 tones camped call tones 104 controlling length 229 dialing, switching 238 expensive route 241 fast busy, remote access 234 remote access tones 234 stuttered dial tone, remote access 234 system dial tone 234 voice call 134 top-level menus 21 tracking incoming calls, Call Log 137

transfer calls, monitoring 110 cancelling 103 see Call Transfer Transfer denied 104 transferring calls 101 Callback 110 parking a call 106 using Camp-on 104 troubleshooting reporting and recording alarms 245 testing handset speaker 247 testing telephone buttons 247 testing telephone display 246 testing telephone speaker 248 testing the headset 248 testing the power supply 248 using the alarm telephone 245 Trunk Answer feature 59 picking up calls 240 set lock 225 turning off background music 195

U

unassigning lines, Hunt Groups 169 Unequipped line 120 Unknown name 55, 198, 203 Unknown name 143 Unknown number 55 Unknown number 93 until * 215 Use line pool? 251 Use prime line 30 User Preferences 159-164 user preferences Basic password 159 change display contrast 162 change how calls are dialed 162 change languages on display 162 change ring type 163 changing button programming 160 changing speed dial 161 display buttons 160 password 159 subheadings 160 user call log options 162

user programming 14 user speed dial changing 161 description 91 programming 92 set lock 225 usina alarms 189 background music 195 Call Forward 112 Call Log 138 DND 194 Do Not Disturb 194 Hospitality administration set 186 Hunt Groups 165 Last Number Redial 90 line redirection 121 Link 227 name and number blocking 199 Norstar remotely 231-234 the room set 186 this guide 13

V

videoconferencing, using ISDN applications 207 **VIEW 243** viewing active Services 214 Call Log 140 messages 129, 132 Voice Call 134-135 answering 134 cancel 135 deny 135 Voice call 135 Voice Call Deny, set lock 225 voice mail accessing your Norstar system 144 using Call Forward 115 voice message center, viewing messages 129 volume bar, description 244 button 18 set control 244

W

Wait for Dial Tone, Host system dialing signals 230 wake-up cancel alarm 190 setting alarm 187 turn off alarm 190 using sets 189 wall mounting BST sets 192

Y

year, set 28 Your list full 133